



livescribe™

# Smartpen User Guide

VERSION 2.4

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

---

LIVESCRIBE, PULSE, ECHO, and PAPER REPLAY are trademarks or registered trademarks of Livescribe Inc.

Anoto is a trademark of Anoto Group AB. Microsoft and Microsoft Word are either registered trademarks or trademarks of Microsoft Corporation in the United States or other countries. Apple and iTunes are either registered trademarks or trademarks of Apple Computer Inc. in the United States or other countries. MyScript is a registered trademark of Vision Objects, Inc. All other brand and product names are trademarks of their respective owners.

Copyright © 2007-2010 Livescribe Inc. All rights reserved.

**IMPORTANT:** Please read the End User License Agreement with this product before using the accompanying software program(s). You accept the terms of the End User License Agreement by using any part of the software. Using any non-authorized charging accessories or ink cartridges may damage the Livescribe™ smartpen and voids the Livescribe smartpen warranty (see [Warranty Information on page 117.](#))

Software Downloads Available

To download Livescribe Desktop software, go to [www.livescribe.com/install](http://www.livescribe.com/install).

Agency Compliance Information

For product, regulatory, and compliance information, see [Regulatory Information on page 113.](#)

Livescribe™ Smartpen User Guide: Firmware Version-2.4.0-F

July 9, 2010 3:42 pm

---

# CONTENTS

<b>About This Release.....</b>	<b>10</b>
<b>Getting Help.....</b>	<b>11</b>
Contacting Customer Service.....	12
Saving Data for Customer Service.....	12
Returning Livescribe Products.....	13
Items Purchased Directly from Livescribe.....	13
Items Purchased from a Third Party.....	13
<b>Echo Smartpen User Guide.....</b>	<b>14</b>
About Your Livescribe Smartpen.....	15
Introducing the Livescribe Smartpen.....	15
About Livescribe Notebooks.....	15
Identifying Your Smartpen Model.....	15
Starting Your Smartpen.....	16
Charging an Echo Smartpen.....	17
Charging a Pulse Smartpen.....	18
Replacing the Ink Cartridge or Stylus.....	19
Using a 3-D Recording Headset.....	19
Renaming Your Smartpen in Echo Desktop.....	20
Rebooting an Unresponsive Smartpen.....	21
About Paper Replay.....	22
About Paper Replay Sessions.....	22
Viewing Notes and Playing Back Audio In Echo Desktop.....	23
Writing, Recording, and Playback Basics.....	24
Writing Notes and Recording Audio with Your Smartpen.....	24
Writing Notes Only (Without Recording Audio).....	24
Writing Notes And Recording Audio.....	24
Recording Audio Only (Without Writing Notes).....	25
Annotating Your Notes After Recording Audio.....	25
Checking the Battery Level.....	26
Installing Smartpen Software Updates.....	27
Using Smartpen Apps.....	28
About Smartpen Apps.....	28
Launching Apps with Launch Line.....	28
Launching an App with a Nav Plus.....	29
Using the Home Button to Quit Currently-Running Apps.....	29

---

About Shortcuts.....	30
Using Shortcuts.....	30
About Smartpen Screen Indicators.....	31
Tips for Handwriting Recognition.....	32
Tips for Reading Text.....	32
About the Nav Plus.....	32
About Flick and Scrub.....	35
Using Flick and Scrub.....	36
Assigning Commands to Home Button Double-Tap.....	37
Using Shortcut Buttons.....	38
Recording Audio on a Smartpen.....	40
Starting a Recording with the Record Button.....	40
Starting a Recording with the Smartpen Power Button.....	40
Starting a Recording with a Nav Plus.....	41
Stopping a Recording.....	41
Pausing and Resuming a Recording.....	42
Continuing Recording When Using Other Apps.....	42
Recording a Paperless Session.....	43
Adding Audio Bookmarks When Recording.....	44
Deleting Audio Recordings from a Smartpen.....	44
Configuring Audio Recording Settings.....	46
Playing Back Audio on a Smartpen.....	49
Playing Back a Session by Tapping on Your Notes.....	49
Playing Back a Session with Playback Buttons.....	49
Playing Back a Session with the Play Shortcut.....	50
Playing Back a Session using the Nav Plus.....	51
Stopping Audio Playback.....	51
Pausing and Resuming Audio Playback.....	52
Controlling Audio Playback.....	52
Setting Audio Bookmarks During Audio Playback.....	53
Playing Back Audio with the Nav Plus.....	54
Protecting Audio Recordings with a Paper Replay Password.....	55
Configuring Audio Playback Settings.....	57
Doing Math Calculations.....	58
Using the Calc Shortcut.....	58
Using the Calculator.....	59
Using the Piano.....	63
Launching Piano from the Nav Plus.....	63
Using the Translator Demo.....	67
Translator Demo Word List.....	67

---

Using the Settings Menu.....	68
Settings Menu Summary.....	68
Setting the Smartpen Auto-Off Time with the Settings Menu.....	69
Viewing the Smartpen Name with the Settings Menu.....	69
Enabling or Disabling Menu Voice with the Settings Menu.....	70
Setting the Date and Time.....	71
Setting the Date.....	71
Setting the Time.....	72
Configuring the Smartpen Screen.....	74
Setting Screen Brightness.....	74
Setting Screen Orientation.....	74
Setting Scroll Speed.....	75
Changing Smartpen Locales.....	76
Changing Locales with the Settings Menu.....	76
Managing Livescribe Notebooks.....	77
About Livescribe Dot Paper.....	77
Usage Guidelines for Livescribe Notebooks.....	77
Archiving Livescribe Notebooks.....	78
About Livescribe Notebook Naming.....	79
Using Special Paper Products.....	81
About Livescribe Sticky Notes.....	81
Sound Stickers.....	82
Smartpen Maintenance and Safety.....	86
Maintaining Your Smartpen.....	86
Reducing Electrostatic Discharge (ESD).....	87
Safety.....	88
Warnings.....	88
Managing Storage on a Smartpen.....	90
Viewing Smartpen Storage with the Storage Button.....	90
Viewing Smartpen Storage with a Shortcut.....	90
Deleting Audio Recordings from a Smartpen.....	91
Deleting Audio Recordings from a Smartpen with the Nav Plus.....	92
Deleting the Current Audio Recording with a Shortcut.....	93
Smartpen Warranty and Compliance.....	94
Warranty.....	94
Agency Compliance Information.....	95
<b>Echo Desktop User Guide (Win).....</b>	<b>98</b>
About Echo Desktop for Windows.....	99
System Requirements.....	100
Installing Echo Desktop.....	101

---

Authorizing Echo Desktop.....	101
Uninstalling Echo Desktop.....	101
Upgrading Livescribe Desktop.....	102
Configuring Echo Desktop.....	103
Setting Up Auto-Launch.....	103
Configuring Echo Desktop Settings.....	103
Viewing Notes and Playing Back Audio In Echo Desktop.....	105
Echo Desktop for Windows Basics.....	106
Running Echo Desktop.....	106
Quitting Echo Desktop.....	107
Echo Desktop Views.....	107
Echo Desktop Menus and Toolbars.....	112
Viewing Notes.....	113
Viewing Page Thumbnails.....	113
Viewing a Single Page.....	113
Paging through a Livescribe Notebook.....	114
Viewing Pages Linked to an Audio Recording.....	115
Zooming Pages.....	115
Converting Handwritten Notes to Text.....	116
Copying and Pasting Pages to Other Apps.....	116
Searching Notes.....	117
Searching Pages.....	117
Playing Back Audio.....	119
Browsing Audio Recordings.....	119
Playing Audio Recordings in Audio View.....	119
Playing Audio while Viewing Pages.....	120
Using Audio Controls.....	120
Scrubbing an Audio Recording.....	121
Renaming an Audio Recording in Echo Desktop.....	121
Printing.....	122
Printing a Single Page.....	122
Printing Multiple Pages.....	122
Printing Your Own Notepads.....	122
Organizing Notes and Audio.....	124
Creating a Custom Notebook.....	124
Adding Custom Notebook Pages by Dragging and Dropping.....	124
Adding Custom Notebook Pages with a Menu Command.....	124
Reorganizing Custom Notebook Pages.....	125
Deleting a Custom Notebook.....	125
Deleting a Custom Notebook Page.....	125

---

Managing Storage for Echo Desktop and Your Smartpen.....	126
Freeing Space on Your Smartpen.....	126
Removing Audio from Your Smartpen.....	126
Deleting Audio from Echo Desktop.....	127
Removing a Smartpen from Echo Desktop.....	127
Backing Up Your Echo Desktop Content Folder.....	128
Copying Smartpen Content to Multiple Computers.....	128
Archiving Livescribe Notebooks on Windows.....	130
Archiving Livescribe Notebooks.....	130
Deleting Archived Notebooks from Echo Desktop.....	131
Deleting Archived Pages from Echo Desktop.....	131
Managing Your Smartpen.....	132
Registering Your Smartpen.....	132
Renaming a Smartpen on Windows.....	133
Removing a Paper Replay Password.....	133
Managing Smartpen Software and Apps on Windows.....	134
Installing Smartpen Software Updates.....	134
Getting More Apps.....	135
Viewing Installed Apps and Software.....	137
Using Livescribe Online.....	138
About Livescribe Online.....	138
Sending Content to Livescribe Online.....	138
Managing Your MyLivescribe Account on Livescribe Online.....	142
Viewing Livescribe Online Community Content.....	143
Visiting the Livescribe Online Store.....	144
Connecting to Livescribe Online from Windows.....	145
<b>Echo Desktop User Guide (Mac).....</b>	<b>146</b>
About Echo Desktop for Mac.....	147
About Echo Desktop.....	147
Echo Desktop Components.....	147
Installing Echo Desktop on a Mac.....	149
System Requirements.....	149
Authorizing Echo Desktop.....	150
Switching from Windows to Mac.....	150
Uninstalling Echo Desktop.....	150
Upgrading Echo Desktop.....	152
Checking for Echo Desktop Updates.....	152
Configuring Echo Desktop.....	153
Setting Echo Desktop Preferences.....	153
About Paper Replay.....	154

---

About Paper Replay Sessions.....	154
Viewing Notes and Playing Back Audio In Echo Desktop.....	155
Echo Desktop for Mac Basics.....	156
Running Echo Desktop.....	156
Backing Up Your Livescribe Files.....	156
Quitting Echo Desktop.....	157
Viewing Notes.....	158
Viewing Thumbnails.....	158
Viewing a Single Page.....	158
Paging through a Livescribe Dot Paper Product.....	158
Zooming Pages.....	159
Viewing Pages Linked to an Audio Recording.....	160
Converting Handwriting to Text.....	160
Copying and Pasting Pages to Other Apps.....	160
Searching Notes.....	161
Searching Pages.....	161
Playing Back Audio.....	162
Playing Audio while Viewing Pages.....	162
Getting Information About Audio Recordings.....	162
Browsing a List of Audio Recordings.....	162
Playing Audio from Audio View.....	163
About Audio Controls.....	163
Renaming an Audio Recording in Echo Desktop.....	164
Printing.....	165
Printing a Single Page.....	165
Printing Multiple Pages from Thumbnail View.....	165
Printing Multiple Pages from Single-Page View.....	165
Hiding Page Backgrounds When Printing.....	165
Printing Your Own Notepads.....	166
Organizing Notes and Audio.....	167
Creating a Custom Notebook.....	167
Organizing Custom Notebook Pages.....	167
Deleting a Custom Notebook.....	167
Deleting a Custom Notebook Page.....	168
Managing Storage for Echo Desktop and Your Smartpen.....	169
Freeing Smartpen Storage.....	169
Removing Audio from Your Smartpen.....	169
Backing Up Your Livescribe Data Folder.....	170
Deleting Audio Recordings from Echo Desktop.....	170
Archiving Livescribe Dot Paper on Mac.....	172



---

Archiving Paper Products.....	172
Deleting an Archived Notebook.....	172
Managing Your Smartpen.....	174
Registering Your Smartpen.....	174
Renaming a Smartpen on a Mac.....	175
Removing a Paper Replay Password.....	175
Managing Smartpen Software and Apps on a Mac.....	176
Installing Smartpen Software Updates.....	176
Getting More Apps.....	177
Viewing Installed and Installable Apps.....	179
Using Livescribe Online.....	180
About Livescribe Online.....	180
Sending Content to Livescribe Online.....	180
Managing Your MyLivescribe Account on Livescribe Online.....	184
Viewing Livescribe Online Community Content.....	185
Visiting the Livescribe Online Store.....	186
Connecting to Livescribe Online from a Mac.....	187
Shortcuts.....	188
Keyboard Shortcuts.....	188
Contextual Menus.....	188

# ABOUT THIS RELEASE

This release of the Livescribe Platform includes new features and enhancements, corrected issues, and usability improvements.

For detailed information about this release, including known issues, read the *Release Notes* located here: [www.livescribe.com/releasenotes](http://www.livescribe.com/releasenotes).

Version numbers for this release are:

- Smartpen Firmware, Version 2.8
- Echo Desktop for Windows, Version 2.8
- Echo Desktop for Mac, Version 2.8

# GETTING HELP

Livescribe provides several ways for you to learn more about the Livescribe Platform and get expert help when you need it.

On the Livescribe Support page, you can find several ways to get answers to any questions you might have about your smartpen or other Livescribe products.


To open the Livescribe Support page:

- From a web browser, go to [www.livescribe.com/support](http://www.livescribe.com/support), or
- Within Echo Desktop, go to Livescribe Online and locate the Support tab.

You can view release notes for all Livescribe products here: [www.livescribe.com/releasenotes](http://www.livescribe.com/releasenotes).

From the Livescribe Support site, you can search and browse the Livescribe Knowledge Base. There you can find answers to many of your questions. Livescribe updates the knowledge base frequently, so check it each time you need help.

Other Livescribe smartpen users may have found an answer to your question. Check the Livescribe forums to post a question or browse similar questions and find responses that may help you.

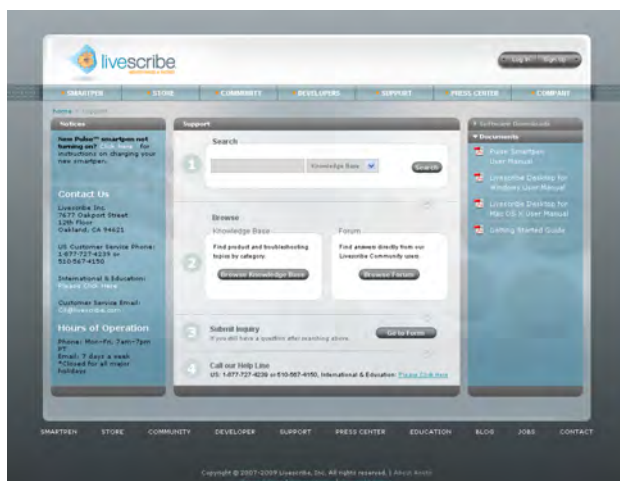

## CONTACTING CUSTOMER SERVICE

If you cannot find the answers to your questions using the Support page, please contact Customer Service directly. You can reach Customer Service in the following ways:

- Go to [www.livescribe.com/support](http://www.livescribe.com/support), complete a Customer Service ticket and submit it.
- Email Customer Service at: CS@livescribe.com
- Telephone Customer Service. For telephone numbers, go to Customer Service Contact Information at: [www.livescribe.com/contact](http://www.livescribe.com/contact)

## SAVING DATA FOR CUSTOMER SERVICE

If you are experiencing problems with a Echo Desktop product, you should gather data from your installation for Customer Service.

1. For Echo Desktop for Windows, choose **Help > Save Data for Customer Service**. On a Mac, hold the keyboard control key down, and in Echo Desktop, go to **Tools > Customer Support > Gather Debug Logs**
2. Save the data to your computer so you can send it to Customer Service if requested.

## RETURNING LIVESCRIBE PRODUCTS

If you need to return the Livescribe smartpen or other Livescribe product, follow the instructions below.

### ITEMS PURCHASED DIRECTLY FROM LIVESCRIBE

Items purchased directly from Livescribe have the following return time-frame to qualify for a refund. Items returned after this timeframe are not accepted or credited:

- Hardware: 30 days.
- Accessories: 30 days

Livescribe refunds the full amount paid minus shipping on any item(s) returned within the allowable time. The customer must contact Customer Service for a Returned Material Authorization (RMA) number and is responsible for the original shipping and the return shipping fees.

A returned item must be returned in like-new condition with all the original components and packaging. Credits are issued once the item(s) have been received and verified.

### ITEMS PURCHASED FROM A THIRD PARTY

If you discover what you believe is a software or product defect for any third-party item, please contact the manufacturer of such third-party item directly for information regarding that manufacturer's warranty. Products sold through the Livescribe website that do not bear the Livescribe brand name are serviced and supported exclusively by their manufacturers in accordance with the terms and conditions packaged with the products. Third-party software or products are not covered by Livescribe's Limited Warranty.

# Echo Smartpen User Guide



## ABOUT YOUR LIVESCRIBE SMARTPEN

The Livescribe smartpen captures everything you hear and write.

### INTRODUCING THE LIVESCRIBE SMARTPEN

Your Livescribe smartpen synchronizes the audio you hear to what you write, so you never miss a word. Just tap on your notes and the smartpen plays back what you recorded from that exact moment in time.

The smartpen provides both audio and visual feedback, powerful processing capabilities, and substantial built-in storage. The smartpen integrates several components and technologies. It also uses firmware and software to support the interaction of all of its components and to enable built-in handwriting recognition, and apps such as Paper Replay, among many others.

When you start your smartpen and begin writing in your Livescribe notebook, the smartpen captures and stores the notes you write. To capture your writing, the smartpen uses its built-in infrared camera to take digital snapshots of a special dot pattern on the paper as the tip moves over the paper while you write.

When recording audio with the Paper Replay app, the smartpen links your notes to the recorded audio. When you tap on your notes, your smartpen locates the tapped position and plays back the audio linked to that location.





### ABOUT LIVESCRIBE NOTEBOOKS

Livescribe smartpens use special paper printed with microdots that are read by the tip of the smartpen. Livescribe creates a variety of paper products, such as notebooks, journals, flip notepads, and sticky notes. You can buy Livescribe notebooks from dealers that sell Livescribe smartpens.

For more information, see


### IDENTIFYING YOUR SMARTPEN MODEL

There are two smartpen models that are appropriate for use with Echo Desktop: the Echo smartpen and the Pulse smartpen. Use the information below to identify your model.

Echo smartpen		Plastic body. Black with printed power symbol  .
Pulse smartpen		Aluminum body. Titanium or Black with printed power symbol  .

### SMARTPEN FEATURES

Echo and Pulse smartpens have similar features, as shown in the image below.

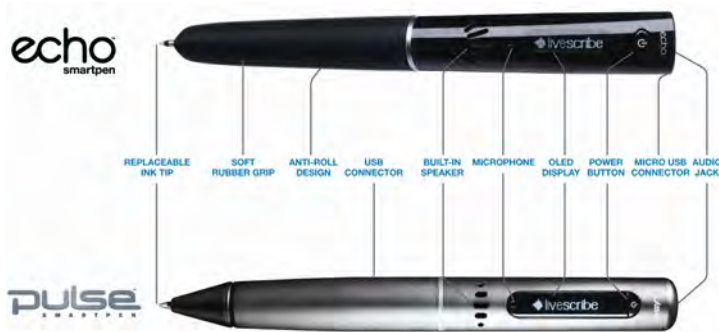

### STARTING YOUR SMARTPEN

To use your smartpen, first power it on. It must be running to capture written notes or enable its audio recording or playback features.

1. Press the **Power** button to start your smartpen.

If you have given your smartpen a name using Echo Desktop, your smartpen shows its name when you power it on.





As the smartpen starts up, the display shows the words **Livescribe** and then **Starting...** After startup completes, the display shows the time.

2. The first time you use the smartpen, set it to the current time and date.
3. When you are finished using your smartpen, press the **Power** button again to turn it off.

### CHARGING AN ECHO SMARTPEN

The USB port for an Echo smartpen is located on the top next to the headset jack. This is a standard micro USB connector that is compatible with any standard USB charging cable. Follow these steps to charge your smartpen.

The plug and blinking battery indicator means your smartpen needs to be charged.



1. Before charging your Echo smartpen, download and install the Echo Desktop software from <http://www.livescribe.com/install>.
2. Plug your Micro-USB cable into the USB port on your computer and plug the other end of the cable into your smartpen.

You can also charge the Echo smartpen directly from an electrical outlet with the Universal USB AC Wall Adapter.



A battery and lightning bolt symbol is displayed on your smartpen when it is charging.

A full charge can take up to 2.5 hours.



## CHARGING A PULSE SMARTPEN

The USB connector for a Pulse smartpen is located on its side. The connector is designed to fit into a compatible Livescribe USB charging cradle. Follow these steps to charge your smartpen.

**Tip:** The plug and blinking battery indicator means your Pulse smartpen needs to be charged.



1. Before charging your Pulse smartpen, download and install the Echo Desktop software from <http://www.livescribe.com/install>.
2. Plug your USB mobile charging cradle into the USB port on your computer. The smartpen charges directly from your computer's USB port when the computer is on. The USB connection (located on the side of the Pulse smartpen) is designed to dock into the compatible Livescribe USB mobile charging cradle.

You can also charge the Pulse smartpen directly from an electrical outlet with the Pro Charging Cradle or the Universal USB AC Wall Adapter.



3. Place the Pulse smartpen in your USB mobile charging cradle.

A battery and lightning bolt symbol is displayed on your smartpen when it is charging.

A full charge can take up to 2.5 hours.



## REPLACING THE INK CARTRIDGE OR STYLUS

To replace an ink cartridge, just use your fingers to grasp and pull out the old cartridge and insert a new one. If you own a Pulse smartpen and have a USB mobile charging cradle, you can instead use the cradle to help replace the cartridge as follows.

1. Insert the smartpen ink tip into the ink cartridge removal ring.
2. Tilt the smartpen so that it firmly rests against the removal ring and lift the smartpen away from the ring.
3. Lifting the smartpen away from the cradle safely separates the ink cartridge from the magnet inside the smartpen that holds the cartridge in place.
4. Place your new ink cartridge in the smartpen.

Before using the smartpen, be sure to remove the protective plastic coating from your ink cartridge tip. All new ink cartridges have this coating in place to prevent the ink from drying up.




If you want to use the smartpen but do not want to make ink marks on your paper, purchase a stylus from the Livescribe web store. To insert the stylus, follow the steps above, but substitute the stylus for the replacement ink cartridge.

## USING A 3-D RECORDING HEADSET

With your smartpen, you can record audio with either the built-in microphone or a 3-D Recording Headset.

Livescribe designed the built-in microphone for monaural recordings in smaller recording environments, such as a conference room. When recording in larger spaces, we recommend using a 3-D Recording Headset, which contains a microphone in each earbud. The dual microphones enable binaural recordings, which accurately recreate the spatial audio environment.

1. Left and right speakers
2. Left and right microphones

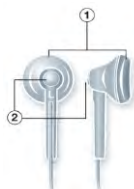

Binaural recording is a special type of stereo recording that uses two microphones, one placed in each ear. This type of recording provides the most accurate spatial sound quality because the microphones effectively mimic your ears - when you play a binaural recording back, it sounds like you are actually in the location where you recorded.

Once you record audio, you can play back the binaural effect using stereo earphones. You can also play back the binaural effect as a regular stereo recording over any type of headphones or speakers.

The 3-D Recording Headset included with each Pulse smartpen has a custom jack. This is required for binaural recordings. However, if you want to use a 3.5mm stereo headset just for playback, connect your 3.5mm headset to your smartpen using a standard 2.5mm to 3.5mm adaptor.

If you own an Echo smartpen, you can use any standard 3.5mm stereo headset for playback. For binaural recording, you need to use a Livescribe 3.5mm 3-D Recording Headset. You can purchase this separately from the Livescribe Online Store.

**Tip:** You can record binaural audio with the earbuds in your ears or around your neck as shown below. Make sure the “L” earbud is in your left ear and the “R” earbud is in your right ear.



**Note:** Keep the earbuds about 6-8 inches apart to mimic the position of your ears.

## RENAMING YOUR SMARTPEN IN ECHO DESKTOP

Your smartpen has a default name. You can rename your smartpen to identify it from other smartpens in Echo Desktop.

1. Install and Launch Echo Desktop.
2. Dock the smartpen to be renamed.
3. If it is not already selected, use the smartpen selector drop down to choose the smartpen you want to rename.
4. Choose **Tools > Smartpen > Rename**.
5. At the prompt, type the smartpen name and click **OK**.

## REBOOTING AN UNRESPONSIVE SMARTPEN

If your smartpen is unresponsive, you can reboot it.

1. Charge your smartpen using its cradle (for Pulse smartpens) or Micro-USB cable (for Echo smartpens) for at least five minutes.
2. If your smartpen is still nonresponsive after five minutes of charging, press and hold the power button for 10 seconds to reboot it.

## ABOUT PAPER REPLAY

When you start your smartpen, it is ready to capture anything you write in your Livescribe notebook.

Your smartpen captures and stores your notes as digital ink. You can then send your notes to other people using Echo Desktop. When you are taking notes without the need to record audio at the same time, simply start your smartpen and begin writing.

To record audio as you take notes, use the Paper Replay smartpen app. Using Paper Replay, your smartpen records audio and links it to what you write. Later, you can tap on any of your notes and hear the audio recorded from that moment. Each time you use Paper Replay, it stores the information it captures as a *Paper Replay session*.

You also can use Paper Replay to record audio only. The resulting audio is a standalone recording not linked to your notes. This kind of recording is called a *paperless session*.

You can add notes to any audio recording (even paperless sessions) by playing back pre-recorded audio and writing as you listen. This process is called *annotating* and is useful when you need to clarify or expand your notes by reviewing the audio.

To start and stop a Paper Replay session and control session playback, use the Paper Replay controls. Controls vary by Livescribe paper product.



**Note:** The Paper Replay printed controls are not page-specific. For example, you can tap the **Record** button on one page to start recording, and then tap the **Stop** button on a different page to stop recording.

## ABOUT PAPER REPLAY SESSIONS

When you begin recording with the smartpen, your smartpen automatically links the audio to anything you write in Livescribe notebooks. The recorded audio (and any linked written notes) is called a Paper Replay session.

Important facts about sessions:

- Notes not linked to audio are just notes. They are not part of a session.
- A session always contains audio.

- A session can optionally include written notes (pages) linked to the audio. However, you can record audio only, known as paperless sessions.
- A session begins when you start recording audio and ends when you stop recording audio.
- Pausing and unpausing a recording does create separate sessions. The paused and unpaused session remains as one. Starting and stopping recordings creates separate sessions.
- You can have one session that spans multiple pages, such as when taking many notes while recording a long lecture or meeting.
- Starting and stopping recording multiple times per page creates multiple sessions on that page.
- By default, sessions are named on your smartpen and Echo Desktop based on the time and date they are created. For example, if a session is started on October 31, 2014, at 12:22PM, it is named and displayed as 10.31.14 12:22p.

## VIEWING NOTES AND PLAYING BACK AUDIO IN ECHO DESKTOP

In Echo Desktop, you can view your notes and play back audio recordings made with Paper Replay. In Echo Desktop, notes that have linked audio appear as green ink. Livescribe calls this ink *active ink*.

To listen to audio recordings that are linked to your notes, click on the active ink using your mouse or other pointing device. Clicking active ink is similar to tapping your paper notes to begin audio playback on your smartpen. When you mouse over ink that is active, the mouse cursor changes to a pointing hand cursor to help you identify where you can click to begin audio playback.

If you annotated your notes (added notes while playing back an audio recording), Echo Desktop shows this ink as blue. This ink is also active. You can click on it to play back the audio at the point where you added the notes.

**Note:** You can change the color of green ink by setting a user preference.

## WRITING, RECORDING, AND PLAYBACK BASICS

Your smartpen has many features. One key feature is capturing notes you write and recording audio.

### WRITING NOTES AND RECORDING AUDIO WITH YOUR SMARTPEN

When you start your smartpen, it is ready to capture anything you write in your Livescribe notebook.

Your smartpen captures and stores your notes as digital ink. You can then send your notes to your computer or other destinations using Echo Desktop. When you are taking notes without the need to record audio at the same time, simply start your smartpen and begin writing in your Livescribe notebook.


To record audio as you take notes, use the Paper Replay smartpen app. Using Paper Replay, your smartpen records audio and links it to what you write. Later, you can tap on any of your notes and hear the audio recorded from that moment.

**Important:** It is critical that you set the correct time and date on your smartpen because your smartpen names audio recordings based on their creation time and date.


### WRITING NOTES ONLY (WITHOUT RECORDING AUDIO)

1. Press the power button to start your smartpen.
2. Begin writing on any Livescribe paper, such as a Livescribe notebook, journal, or flip notepad. As long as the smartpen is on, it captures your handwritten notes and drawings. When you dock your smartpen to your computer, your notes transfer to Echo Desktop.

### WRITING NOTES AND RECORDING AUDIO

1. Press the power button to start your smartpen.
2. Tap on a **Record** button  printed on pages of your Livescribe notebook to start Paper Replay.  
Paper Replay starts recording audio.
3. Begin writing in your Livescribe notebook.



4. When you finish taking notes and recording audio, tap on one of the **Stop** buttons  printed on your Livescribe Dot Paper.
5. To play back your recording audio, tap on your handwritten notes.



### RECORDING AUDIO ONLY (WITHOUT WRITING NOTES)

You can use your smartpen like a digital recorder to record audio only, without capturing notes. This kind of recording is also known as a *paperless session*.

#### USING QUICK RECORD

1. Use the **Quick Record** feature. Press and hold the power button for approximately five (5) seconds until the screen shows that recording is started. The smartpen may appear to power off until it shows the recording started indicator.
2. When you have finished recording audio, tap on the **Stop** button in your Livescribe notebook.

#### USING THE RECORD BUTTON

1. Tap on the **Record** button  in your Livescribe notebook. This starts recording audio. You can continue to record without writing notes.
2. When you have finished recording audio, tap on the **Stop** button  in your Livescribe notebook.

### ANNOTATING YOUR NOTES AFTER RECORDING AUDIO

You can write new notes and link them to any previously-recorded audio by writing in your Livescribe notebook as you play back the audio recording.

Annotation is very useful when you need to clarify or expand on your notes at a later time. For example, you may need to go back to your notes to correct or clarify a point made in a meeting or lecture. The annotations you write are linked to your original recorded audio, so you can later tap on the annotations and hear the audio that was playing when you wrote them.

1. Start audio playback. You can tap on notes linked to the audio you are annotating, or locate the and play back the audio recording using the Nav Plus or other method.
2. After you start audio playback, begin writing with the smartpen. Your smartpen automatically links your annotations to the previously recorded audio.
3. When you are finished annotating, stop the audio playback.

Your smartpen links the audio to the annotations at the time you write them.

## CHECKING THE BATTERY LEVEL

It is important to check the remaining battery level of your smartpen before beginning an audio recording. This can avoid the problem of the smartpen running out of battery power in the middle of a recording.

### CHECKING THE BATTERY LEVEL WITH THE BATTERY BUTTON

1. Start your smartpen.
2. Open the inside cover of your Livescribe notebook and locate the **Settings** area.

3. Tap the Battery button  to see the current battery charge.

This image shows a full battery.



### CHECKING THE BATTERY LEVEL WITH A SHORTCUT

1. Double-tap on the center of a Nav Plus.




Your smartpen shows the Shortcut indicator (asterisk) in the **Main Menu**. It is waiting for you to write a Shortcut.



2. Within three (3) seconds, write the word "battery."

Using its predictive text feature, your smartpen shows the first command that matches your written input. In this case, **battery** is displayed as soon as you write a "b". As soon as you see the command you want on the display, you can stop writing.



3. Tap right  on the Nav Plus, or double-tap *on Livescribe paper*.

Your smartpen shows the remaining battery power.



When you create a Shortcut, it becomes an active button that you can tap to repeat the application or command. The same is true for Launch Line Shortcuts you create.

## INSTALLING SMARTPEN SOFTWARE UPDATES

Livescribe periodically updates smartpen apps (such as Paper Replay) and underlying smartpen firmware. Livescribe also updates this software to support new kinds of Livescribe Dot Paper. When you dock your smartpen and launch Echo Desktop, it checks for available updates. You can also manually check for updates using Echo Desktop.

**Note:** If you try to use a new Livescribe notebook, and get an error message that it is “not supported”, you need to update your smartpen software.

1. Dock your smartpen.
2. Launch Echo Desktop.

Echo Desktop automatically checks for recent updates.

3. Accept the updates.

If you choose to postpone transferring updates to your smartpen, you can re-initiate the transfer process by undocking and re-docking your smartpen. Echo Desktop prompts you to transfer available items.

Echo Desktop downloads and installs them to your smartpen.

## USING SMARTPEN APPS

Smartpen apps are small programs that run on your smartpen.

### ABOUT SMARTPEN APPS

All smartpen apps have similar user interfaces and follow the same navigation rules.

System apps are those that are pre-installed as part of the smartpen system software. Examples of System apps include Paper Replay, Piano, and Translator Demo.

### LAUNCHING APPS WITH LAUNCH LINE

You can use **Launch Line** to quickly launch many apps installed on your smartpen.

**Launch Line** can start any Open Paper apps. These are apps that do not require pre-printed paper controls to function. Examples of these apps are Piano and Translator Demo.

**Tap Around** is a feature of Launch Line that is an alternative to using the Nav Plus to navigate menus of an app. The areas immediately surrounding a Launch Line function as the Nav Plus controls: tap up, tap down, tap left, tap right, and tap center. The Tap Around regions correspond to the features and regions of the Nav Plus, except that:

- Tap Around controls menus and navigation within its corresponding app only.
- You cannot use Tap Around controls to launch other apps.

1. Draw a horizontal line in your Livescribe notebook (starting from right or left) and *without removing your smartpen tip from the page*, immediately double back on the line ending close to where you started.
2. *Immediately* write the name of the target app above the line.





Using its predictive text feature, your smartpen shows the first command that matches your written input.

 


3. To launch the app, tap on the center of the app name.  
If the name is a unique match to an app, the app launches automatically.
4. You can use the Tap Around feature to navigate the app: Tap just above, below, left, or right of the name to perform the corresponding functions of the Nav Plus.
5. After creating a Launch Line, it remains as an active area. You can tap it at any time to launch the corresponding app.

## LAUNCHING AN APP WITH A NAV PLUS


A Nav Plus is a printed navigation control available in all Livescribe Dot Paper products.

1. Double-tap  on the center of a Nav Plus go to the Main Menu.
2. Tap down  on the Nav Plus to scroll through a list of System apps on the smartpen, such as Paper Replay.
3. Tap right  and tap down  to locate the app.



## FINDING A MENU ITEM BY WRITING ITS NAME

When navigating an app's menu, you can use your smartpen's handwriting recognition feature to locate a menu item by its name.

1. When navigating an app's menu, write the name of a menu item on Livescribe paper.
2. When the display shows the item you want, tap right  on the Nav Plus or double-tap on the page to select the item.


## USING THE HOME BUTTON TO QUIT CURRENTLY-RUNNING APPS

When you power on your smartpen, it starts up in a **Home** state. In this state, the smartpen screen shows the current time and battery status. From the Home state, you can capture notes, but no apps are running.

At any time, you can return your smartpen to the Home state by tapping on a **Home** button. This quits all currently-running apps and returns the smartpen to the Home

screen. Livescribe recommends using the Home button whenever you want to quit and app and start another.

Home buttons are printed in most Livescribe notebooks. In older paper products, the Home button is a light circle just above and to the right of the Nav Plus.

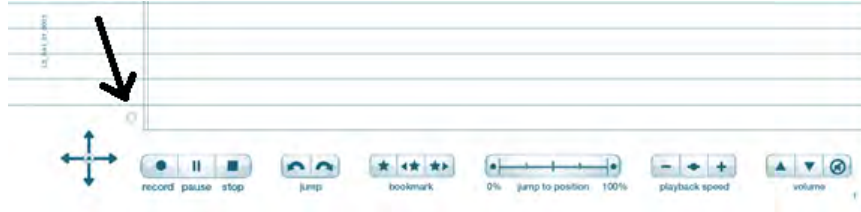

In newer paper products, the Home button is a icon in the shape of a house.



1. Locate and single-tap on the **Home** button in your Livescribe notebook.  
Your smartpen quits all currently-running apps. The smartpen screen shows the Home state: current time and battery level.
2. Use Launch Line or other method to launch another application.


## ABOUT SHORTCUTS

Shortcuts are words you can write to quickly launch an app and invoke a particular feature of that app.

Double-tapping on the center of a Nav Plus notifies your smartpen that you are about to write a Shortcut. After writing the word, tapping right on the Nav Plus, or double-tap *on any Livescribe paper* launches the Shortcut.

Your smartpen has default shortcuts for several applications and their commands. For example, double-tapping on the center of the Nav Plus and quickly writing the word "play" launches Paper Replay and invokes its "Play Session" command.

## USING SHORTCUTS

1. Double-tap  on the center of a Nav Plus.  
Your smartpen shows the **Shortcut** indicator (\*) in the **Main Menu**. It is waiting for you to write a Shortcut.




2. Within three (3) seconds, write the Shortcut word.

For example, write the word “play.”





Using its predictive text feature, your smartpen shows the first command that matches your written input. In this case, “play” is displayed as soon as you write “p”. As soon as you see the command you want on the display, you can stop writing.



3. Tap right  on the Nav Plus, or double-tap *on Livescribe paper*.

Your smartpen launches Paper Replay and its Play Session command. The smartpen screen shows the top item in the Play session list.



4. Tap down  using the Nav Plus to scroll through sessions
5. Tap right  to start playing back the session.

When you create a Shortcut, it becomes an active button that you can tap to repeat the application or command. The same is true for Launch Line Shortcuts you create.

## ABOUT SMARTPEN SCREEN INDICATORS

When navigating apps, use the screen indicators to know which navigation directions are available.

A bar at the top of the screen indicates the top of a menu or list.



Arrows indicate there are items to view in the direction of the arrows.



A bar at the bottom of the screen indicates the bottom of a menu or list.










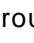
## TIPS FOR HANDWRITING RECOGNITION

Some apps use handwriting recognition. Follow these guidelines:

- Write all text horizontally and neatly. The smartpen cannot interpret vertical handwriting. Handwriting recognition also yields better results with lower case lettering.
- Tap on what you wrote to jump back to that position in the app at any time.

## TIPS FOR READING TEXT

Some apps provide text to read. Navigate these apps using the basic Nav Plus navigation described above. Also, follow these guidelines:

- Tap down  and tap up  to scroll through menu items and lists. For faster scrolling, use Flick and Scrub.
- To view lines of text, tap right  to see the first line of text. Allow it to scroll to read the entire line. Tap down  for next line. Also use Flick and Scrub when viewing text.
- To view a new subject, story, or item, tap left  to return to menu, then tap down  and tap up  through menu items and lists. Tap right  to select an item.







## ABOUT THE NAV PLUS

The Nav Plus is a paper-based, five-way navigator that you can use to navigate the Main Menu on your smartpen. You can use the Main Menu to locate commands, settings, and apps of your smartpen. There are two basic kinds of Nav Pluses: pre-printed and hand-drawn.






The table below summarizes the commands available for the Nav Plus:

Single-Tap Center	After starting your smartpen or when you are writing notes without recording, Single-tap  on the center of the Nav Plus to go to the Main Menu. If you are running an app, single-tapping returns you to the app's menu.
Double-Tap Center	If you are using an app other than Paper Replay, double-tap  on the center of a Nav Plus quits the current app and returns your smartpen to the Main Menu. This also activates the Shortcut mode so you can write an app name to launch it. If you are navigating app's menu, double-tapping on the center of the Nav Plus returns to the Main Menu. The one exception is if you are recording using Paper Replay, double-tapping the center returns to the Main Menu but background recording continues.
Tap Down	Tap down  on the Nav Plus to scroll through a menu or a list of commands or options.
Tap Up	Tap up  on the Nav Plus to scroll through a menu or a list of commands or options.
Tap Right	Tap right  to select an item in the app menu list and possibly browse another level of a list. Tap right to play audio or view items (such as a translation, description, or a chord).
Tap Left	Tap left  to return to a previous list or menu level. Tapping left eventually quits the app and returns you to the Main Menu.

## MORE ABOUT TAP LEFT

You can tap left  on the Nav Plus to quit a smartpen app or a Shortcut. You can also quit by tapping left around any Launch Lines you drew. In general, tapping left lets you go back the way you came in. This means that tapping left leads you back toward your starting place:

- If you started by tapping Nav Plus and navigating the Main Menu, tapping left leads you back to the Main Menu.
- If you started by drawing a Launch Line or Shortcut on Livescribe paper, then your smartpen shows the current time.
- In either case, you end up in the same state: no app is running and the smartpen is ready to store the next thing you write in your Livescribe notebook.

**Note:** Tapping left from the submenu of a smartpen app or Shortcut backtracks up the menu hierarchy toward the root level. Tapping left from the root level jumps to Main Menu or the current time display, as described above.

The root level of a launched app is the initial menu displayed when you launch the app. The root level of a running Shortcut is the list displayed when you execute the Shortcut. In the case of Paper Replay when launched explicitly, the root level is the initial menu containing items such as Record New Session, Play Session, and so on. The root level of the play Shortcut is the Play Session list of Paper Replay.

### DRAWING A NAV PLUS

If a pre-printed Nav Plus is not easily accessible, create your own by drawing one on your Livescribe Dot Paper.

- Using any Livescribe paper, such as the included Starter notebook, draw intersecting vertical and horizontal lines.

You can draw the intersecting lines in either order. The lines should be fairly straight and approximately the same length. The lines must intersect near their centers.




Examples of Nav Pluses drawn incorrectly:

- Lines are not straight.



- Lines do not intersect in the center of each line.



- Within one second of drawing the lines, double-tap  on the center of the Nav Plus. This completed the process of creating a Nav Plus.

After you draw a Nav Plus, it is always usable for future use.



Your smartpen shows the Main Menu if you successfully created a Nav Plus.

## ABOUT FLICK AND SCRUB

Flick and Scrub is a way for you to quickly scroll through menu items and other displayed text on your smartpen. This feature is useful when text presented by an app is longer than the display can show horizontally or when multiple menus or options are available vertically.

Flicking refers to quickly dragging your smartpen across paper and then lifting your smartpen off the paper. The contents of the display scrolls rapidly, based on the speed of your smartpen when it was lifted.

 


Scrubbing refers to dragging your smartpen across the paper. The contents on the display moves and scrolls in the same direction and at the same relative speed as the movement of your smartpen.



When using Flick and Scrub, the display shows indicators based on the direction of additional text and the relative position of the displayed text to the contents.

For vertical Flick and Scrub, the scroll indicator is on the right side of the display. In this example, the text shown is close to the top of the current menu list. Therefore, the vertical scroll indicator is near the top.




For horizontal Flick and Scrub, the scroll indicator is at the bottom. In the examples below, the display scrolls through the phrase “there were two small children”. The scroll bar along the bottom shows how far through the phrase the current display is. The first display shows the position near the beginning of the phrase.




The second display shows the scroll bar position near the middle of the phrase after scrolling the display horizontally.

## USING FLICK AND SCRUB

 

 1. Navigate to a list of vertical menu items, such as **Main Menu** or one of its submenus, such as **Applications** or **Settings**.



2. On any unused paper region, press the tip of your smartpen down for one-half (1/2) second.
3. Wait until you hear a short beep, then *without lifting your smartpen tip off the paper*, draw a horizontal or vertical line.

Instead of drawing a line, you can draw a rectangular box as the Flick and Scrub control area. You may find the box easier to use because it provides a wider area than a straight line.

Your smartpen assigns the area you draw as a Flick and Scrub control area for any app.



4. Move your smartpen on the flick and scrub control area you drew to scroll through the app's display text.

You can use both flicking and scrubbing motions on the same control area. You do not need to draw a separate area for flicking and another for scrubbing. However, you need separate control areas for vertical and horizontal scrolling.




After you have created a Flick and Scrub control region, you can use it at any time for scrolling. This is similar to the way you can re-use a hand-drawn Nav Plus after creating it. To return to use the Flick and Scrub region you do not need to press down the smartpen tip again for 1/2 a second. This is only needed when first creating the region.

The display text scrolls either up and down (for vertical controls) or left and right (for horizontal controls), depending on the direction in which you drew the control.


## ASSIGNING COMMANDS TO HOME BUTTON DOUBLE-TAP

By default, single-tapping and double-tapping on the home button do the same thing. However, you can assign different functionality to double-tapping.

You can assign any open paper smartpen app (apps that do not require pre-printed controls) or Quick Command. For instance, if you do a lot of calculations, you could assign the Calc Quick Command to launch with a double-tap on the Home button.

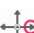1. Double-tap  on the center of a Nav Plus to go to the Main Menu.
2. Tap down  on the directional arrow of the Nav Plus to scroll through a list of apps on the smartpen.
3. When **Shortcuts** is displayed, Tap right  to select it.

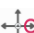

4. Tap right  to select it.



The smartpen prompts you for a command.



5. Write any Open Paper smartpen app name or write a Quick Command. For instance, write **calc**.

Do *not* double-tap the center of the Nav Plus or write a doubled-back horizontal line. Write only the letters that make up the Quick Command.

The smartpen shows the smartpen app name or Quick Command, then confirms the new assignment.



## USING SHORTCUT BUTTONS

Shortcut buttons appear on some of the newer Livescribe notebooks and other products, such as Livescribe Sticky Notes. They are labeled with successive numbers: 1, 2, 3, etc.

You can assign functionality to the Shortcut button, just as you can assign functionality to double-tapping the Home button. Assign any open paper smartpen app or Quick Command to a Shortcut Button.

1. Double-tap on the center of a Nav Plus to go to the Main Menu.
2. Tap down on the directional arrow of the Nav Plus to scroll through a list of apps on the smartpen.
3. When **Shortcuts** is displayed, tap right to select it.

The smartpen prompts you to assign a shortcut.

4. Tap down to display **Assign Shortcut 1**.
5. Tap down again to display **Assign Shortcut 2**, and so on.
6. When you see the number of the shortcut you wish to set, tap right.

The smartpen prompts you for a command.

7. Write any Open Paper smartpen app name or write a Quick Command. For instance, write **calc**.

Do *not* double-tap the center of the Nav Plus or write a doubled-back horizontal line. Write only the letters that make up the Quick Command.

For example, it shows the Calc Quick Command, then starts scrolling: **Shortcut 1 is Now Assigned To [calc]**

The display shows the smartpen app name or Quick Command, then it confirms the new assignment.

## TAPPING ON AN UNASSIGNED SHORTCUT BUTTON

Unlike the Home button, the Shortcut buttons have no default assignments. If you tap on an unassigned Shortcut button, the smartpen prompts you to assign a command to the shortcut.


**Tip:** If you accidentally tap on an unassigned Shortcut button and you do not wish to set it at this time, tap on any Livescribe Dot Paper.

## RECORDING AUDIO ON A SMARTPEN

Recording audio as you write notes is a key feature of your Livescribe smartpen. You can also record audio without writing notes.

### STARTING A RECORDING WITH THE RECORD BUTTON

**Important:** Do not record without permission. By using Livescribe products and services, you agree to comply with all laws regarding recording.

1. Tap the Record button .
2. The smartpen starts recording and shows an incrementing timer on the screen.



After you initiate a recording, you can use other apps on the smartpen, such as the Calculator. A blinking Record icon appears in the bottom right corner of your display to indicate that recording is still in progress.

### STARTING A RECORDING WITH THE SMARTPEN POWER BUTTON

**Important:** Do not record without permission. By using Livescribe products and services, you agree to comply with all laws regarding recording.

1. Press the Power button to start your smartpen.
2. Press and hold the Power button for approximately five seconds until the display indicates that the recording started.





 
If your smartpen is off, press and hold the Power button until the start sequence and the word “REC...” appear on the display. Also, if you write on Livescribe paper after starting recording with Quick Record, your smartpen links your notes and audio.




 
## STARTING A RECORDING WITH A NAV PLUS


Use a Nav Plus to start a recording.

 
1. Double-tap  on the center of a Nav Plus to go to the Main Menu.
2. Tap down  until Paper Replay is displayed.



3. Tap right  to launch the Paper Replay app.  
You see the Record new session option.




4. Tap right  to select Record new session.  
The display indicates that recording has been initiated.




 
While you are recording with Paper Replay, you can use the Nav Plus to perform any normal set of functions, such as scrolling through the menus and launching apps.

## STOPPING A RECORDING

 
You can stop recording audio or audio playback in several ways.

- Tap the **Stop** button  in your Livescribe notebook.
- Power off your smartpen.
- Use the Nav Plus.

1. During a recording, single-tap  on the center of the Nav Plus.  
Your smartpen shows **Stop Session**. The recording continues and the background recording indicator (flashing large dot) shows on the display.




2. Tap right  to stop recording.



## PAUSING AND RESUMING A RECORDING

1. Tap the Pause button  to pause a recording.

 Your smartpen shows a pause icon on the screen.



2. Tap the Pause button again to resume recording.

When recording is paused, your smartpen continues to capture notes that you write. Any notes that you write after pausing and before resuming recording are linked to the audio that occurred the moment before you tapped the Pause button.

Pausing and unpausing a recording does create separate sessions. The paused and unpaused session remains as one. Starting and stopping recordings creates separate sessions.

## CONTINUING RECORDING WHEN USING OTHER APPS

You can launch and run another smartpen app (such as a calculator) while continuing to record audio with Paper Replay. However, your smartpen does not link your notes to the audio while the other app is running. This is because the new app receives your smartpen input (ink and strokes). The newly-launched app has the focus of the smartpen, and has control of your display and audio output.

If you want to stop or pause recording, or add new index points to your recording, you must reactivate Paper Replay as the dominant app. There are several ways to make the Paper Replay app reactivate:

- Tap on any of the printed Paper Replay controls, or on any Paper Replay notes you have written.
- Do anything that would normally launch Paper Replay, such as tap in a session region or launch the Paper Replay app using the Nav Plus.
- Do not write or tap anything with your smartpen for five seconds.

Your smartpen screen indicates background recording is in effect with a blinking recording dot in the lower right-hand corner of your display.



**Caution:** Turning off or docking your smartpen stops recording.

## RECORDING A PAPERLESS SESSION

If you want to record audio but cannot or do not want to write on Livescribe paper, you can create paperless audio. This method uses your smartpen as an audio recorder only.

**Note:** When recording a paperless session, you can at any time, link the recording to written notes by writing on Livescribe paper. At that point, the paperless session is linked to your notes and is no longer paperless.


Similarly, if you have previously recorded a paperless session, you can play it back and begin writing in your Livescribe notebook. The paperless session is linked to your notes and is no longer paperless.

To create a paperless session, begin recording audio but do not take any notes. You can start a paperless session in various ways:

- Tapping the Record button in your Livescribe notebook
- Using the Quick Record feature
- Using the Nav Plus

The new paperless session appears in the Paper Replay session list.


To play back a paperless session, use the Nav Plus to browse Paper Replay sessions. Your smartpen indicates a paperless session with an asterisk (\*) next to the filename in the Select Session list.

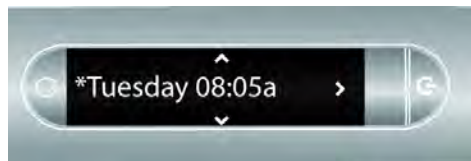


**Note:** If recording the paperless session was the last action you took with the smartpen, you can also access the session by tapping on the 0% point of the paper control position bar.

## ADDING AUDIO BOOKMARKS WHEN RECORDING

 Bookmarks allow you to flag a section of audio and later go to it quickly and easily. You can add bookmarks as you record, or add them later when listening to your recording. Selected Livescribe notebooks contain the bookmark control.

- Tap the Bookmark button  during either recording or playback. A bookmark is placed at that point in the audio file.



## DELETING AUDIO RECORDINGS FROM A SMARTPEN

If you wish to delete sessions from your smartpen for any reason, such as managing storage, we recommend that you transfer your notes to Echo Desktop and then delete Paper Replay sessions from your smartpen.


When you delete a session from the smartpen, your paper notes linked to that file no longer plays back the Paper Replay audio that was previously linked to that ink. However, as long as you have transferred your notes to Echo Desktop, you can continue to replay your notes from your computer.

 
**Note:** You cannot retrieve a session after you delete it from both the smartpen and Echo Desktop. Deleting sessions does not affect the notes on the smartpen - they remain on the smartpen until you archive the notebook.


There are various ways to delete Paper Replay sessions from the smartpen:

- Use Echo Desktop to remove the smartpen session.
- Archive your paper product. This removes all Paper Replay sessions from your smartpen for that paper product.
- Using the Main Menu on the smartpen.
- Using the Delete Current Session shortcut to delete the most-recently accessed session.



## DELETING AUDIO RECORDINGS WITH THE NAV PLUS


1. Double-tap  on the center of a Nav Plus to go to the **Main Menu**.





 
2. Tap down  to scroll through the apps on your smartpen until Paper Replays is displayed.



  
3. Tap right  to launch Paper Replay.
4. Tap down  to locate Delete session from the menu.




 
 
5. Tap right  to browse sessions.
6. Tap down  to scroll through a list of sessions.



7. Locate the session to delete and Tap right  to select it.



8. Tap right  to confirm deletion.  
Your smartpen indicates that the session is deleted.



## DELETING THE CURRENT AUDIO RECORDING WITH A SHORTCUT

You can use a shortcut to delete the current session. In this context, the current session is the most recently accessed session. This is the last session that was either played or recorded.

1. On any Paper Replay **Stop** button, tap and hold for three seconds. Your smartpen instructs you to tap again to delete the current session.
2. Tap **Stop** again to confirm the deletion.



## CONFIGURING AUDIO RECORDING SETTINGS

### SETTING AUDIO RECORDING QUALITY WITH THE SETTINGS MENU

Use the **Audio Quality** setting to configure the quality of your audio recordings.

- **High:** Records at the highest audio quality. This setting requires the largest amount of storage space and is best for very large environments or when the highest-quality recording is required.
- **Medium:** The default audio quality setting.
- **Low:** Records at lowest audio quality. This is a storage-saving setting that utilizes the least amount of storage and is optimal for dictations or smaller, quieter environments.

1. From the **Settings** menu, select the **Audio Quality** option.
2. Select **High**, **Medium**, or **Low**.

You cannot change Audio Quality during a recording. Always select the appropriate audio quality before beginning a recording.

### VIEWING AUDIO RECORDING QUALITY WITH THE AUDIO SETTINGS BUTTON

Tap on the **Audio Settings** button  on the inside cover of your Livescribe notebook.



The smartpen shows its audio settings, including audio quality.

## SETTING MICROPHONE SENSITIVITY WITH THE SETTINGS MENU

You can set your smartpen **Microphone Sensitivity** for different recording situations.

- **Conference Room:** Sets the microphone sensitivity for quieter environments where the person speaking is closer to the microphone. This setting is best for dictations, offices, or small conference rooms.
- **Lecture Hall:** Sets the microphone to pick up sounds in a wider open area. This setting is best for large rooms where the speaker's voice is distant from your smartpen microphone. You should also use of the 3-D Recording Headset when recording in this type of environment.
- **Automatic:** The default setting, sets your microphone sensitivity automatically based on the noise level of your environment.

**Note:** You cannot change **Microphone Sensitivity** while your smartpen is recording. Always select the appropriate setting before beginning a recording. The microphone uses the last setting you set.

1. From the **Settings** menu, select the **Microphone Sensitivity** option.
2. Select **Conference Room**, **Lecture Hall**, or **Automatic**.

## VIEWING MICROPHONE SENSITIVITY WITH THE AUDIO SETTINGS BUTTON

You can view your smartpen **Microphone Sensitivity**.

Tap on the **Audio Settings** button




on the inside cover of a Livescribe notebook.

 
The smartpen shows its audio settings, including microphone sensitivity.

## VIEWING AUDIO SETTINGS WITH THE AUDIO SHORTCUT

You can view the status of all audio settings on a smartpen with the Audio Shortcut:

1. Double-tap  on the center of a Nav Plus.

Your smartpen shows the Shortcut indicator in the **Main Menu**. It is waiting for you to write a Shortcut.




2. Within three (3) seconds, write the word "audio."

Using its predictive text feature, your smartpen shows the first command that matches your written input. In this case, audio is displayed as soon as you

write “a”. As soon as you see the command you want on the display, you can stop writing.



3. Tap right  on the Nav Plus, or double-tap *on any Livescribe paper*.

When you create a Shortcut, it becomes an active button that you can tap to repeat the application or command. The same is true for Launch Line Shortcuts you create.



Your smartpen shows its audio settings.



## PLAYING BACK AUDIO ON A SMARTPEN

 
After recording audio with your smartpen, you can play it back in several ways.

### PLAYING BACK A SESSION BY TAPPING ON YOUR NOTES

When recording a Paper Replay session, your notes and audio are linked and synchronized.

Tap on your notes to play back audio linked to them. The audio plays back from the point in your notes where the audio was recorded.

During playback, your smartpen screen indicates the current position in the recording and the time remaining in your recording.



**Tip:** As you record, remember to write something down on your notepad so that you can begin playback by tapping on it. If you do not do this, you create a paperless session.

### PLAYING BACK A SESSION WITH PLAYBACK BUTTONS

Tap on any of the playback buttons in your Livescribe notebook to access the most recently recorded or played-back session. Due to size and format considerations, some Livescribe notebooks do not contain all the controls listed here.

- Jump forward/back



- Position bar



- Bookmark




The Paper Replay playback controls such as jump, position bar, and bookmark, function within a single Paper Replay session. You can jump forward or back or speed listen to only one Paper Replay session at a time.

**Tip:** Tapping on the playback controls before tapping on any of the written notes on a page, plays back your most recently accessed audio recording regardless of whether that recording or those notes are on the current page. This feature allows you to quickly replay your last recording even if you have forgotten to write notes on paper.

## PLAYING BACK A SESSION WITH THE PLAY SHORTCUT

Use the Play Shortcut to quickly show the top item in the session list.

1. Double-tap  on the center of a Nav Plus.

Your smartpen shows the Shortcut indicator (\*) in the **Main Menu**. It is waiting for you to write a Shortcut.






2. Within three (3) seconds, write the word “play.”



Using its predictive text feature, your smartpen shows the first command that matches your written input. In this case, “**play**” is displayed as soon as you write “p”. As soon as you see the command you want on the display, you can stop writing.

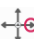



3. Tap right  on the Nav Plus, or double-tap *in your Livescribe notebook*.
4. Your smartpen shows the top item in the Play session list. You can tap down  using the Nav Plus to scroll through sessions and then tap right  to begin playback.

 
When you create a Shortcut, it becomes an active button that you can tap to repeat the application or command. The same is true for Launch Line Shortcuts you create.




 
## PLAYING BACK A SESSION USING THE NAV PLUS


Use the Nav Plus to browse a list of audio sessions and select the audio file by timestamp.

 
1. Double-tap  on the center of a Nav Plus to go to the Main Menu.
2. Tap down  until you see **Paper Replay**.




3. Tap right  to select the Paper Replay app menu. The first item in the list is Record new session.




 
4. Tap down  to locate Play Session.




5. Tap right  to view a list of sessions listed using their timestamp.



6. Tap down  to scroll through the list of sessions.





7. Tap right  to select the audio session that you want to open.  
Playback begins.




## STOPPING AUDIO PLAYBACK

 You can stop audio playback in several ways.


- Tap the **Stop** button  in your Livescribe notebook.

- Power off your smartpen.
  - Use the Nav Plus.
1. During audio playback, single-tap  on the center of the Nav Plus.  
Your smartpen shows **Stop Session**.
  2. Tap right  to stop playback.



## PAUSING AND RESUMING AUDIO PLAYBACK

 1. Tap the Pause button  to pause audio playback.  
Your smartpen shows a pause icon on the screen.




2. Tap the Pause button again to resume playback.

When playback is paused, your smartpen continues to capture notes that you write. Any notes that you write after pausing and before resuming playback are linked to the audio that occurred the moment before you tapped the Pause button. Adding and linking notes as you play back audio is called annotating.


## CONTROLLING AUDIO PLAYBACK

There are various ways that you can control the playback of an audio file on your smartpen and quickly locate any section of the audio file. All of the controls mentioned below are available on the bottom of each page of your notebook.


### CHANGING PLAYBACK VOLUME

Use the Volume controls  to raise or lower the playback volume or mute playback entirely. After muting the playback, you can un-mute it by tapping the mute button a second time.

### JUMPING FORWARD AND BACKWARD

You can jump back or forward 10 seconds in an audio file by tapping on the Jump controls .

## SPEED JUMPING

Tap and hold down the Jump Back or Jump Forward button  to continuously jump through an audio file. As you continue to speed jump, the length you jump increases.


## JUMPING TO A POSITION




If you want to quickly go to the beginning, end, or any position within an audio session, use the Jump to Position bar.



1. Tap anywhere on the position bar to go to the corresponding position in the audio file.
2. Tap the 0% button to jump directly to the beginning of the current audio session.

## CHANGING PLAYBACK SPEED


If you want to speed listen to the audio file or slow the audio session to replay a specific moment, use the Playback Speed controls .

 
- To slow down the audio from normal speed, tap the Slow Down Audio  button. Tap repeatedly to keep slowing down audio speed.
- To speed up the audio from normal speed, tap the Speed Up Audio  button. Tap repeatedly to keep increasing the playback speed.
- To return to normal speed—the speed at which the audio was recorded—tap the Normal Audio Speed  button.

Audio that is played back either sped up or slowed down is no longer in stereo. Audio plays in mono until it is returned to normal speed.



## SETTING AUDIO BOOKMARKS DURING AUDIO PLAYBACK


Bookmarks allow you to flag a section of audio and later go to it quickly and easily. You can add bookmarks as you record, or add them later when listening to your recording.

- Tap the Bookmark button  during either recording or playback. A bookmark is placed at that point in the audio file.





## REVIEWING BOOKMARKS

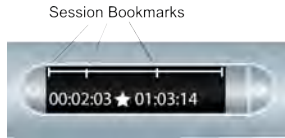- After you have added bookmarks to an audio session, you can scan through the bookmarks using the Previous  and Next  bookmark buttons.
- During playback, your smartpen screen shows the bookmarks in the audio timeline.





## PLAYING BACK AUDIO WITH THE NAV PLUS

 
1. Double-tap  on the center of a Nav Plus to go to the **Main Menu**.
2. Tap down  to scroll through the apps on your smartpen until Paper Replay is displayed.





 3. Tap right  to launch the Paper Replay app menu. Record new session is the first item.




4. Tap down  until you reach Play session.

 


5. Tap right  to browse sessions.
6. Tap down  to scroll through a list of sessions.







Your smartpen shows Paper Replay sessions in the order of the most recent with paperless sessions coming before regular sessions.

7. Tap right  to select the session you want to play.



## PROTECTING AUDIO RECORDINGS WITH A PAPER REPLAY PASSWORD

You can use the **Paper Replay Password** feature to set a password for audio recordings on your smartpen. Setting a password can prevent other people from listening to your recorded audio. Audio play back is prevented until the password is entered. The password is a four-digit number.

1. From the **Main Menu**, tap down  to locate Paper Replay.
2. Tap right  to launch Paper Replay.
3. Tap down  to **Password protection**.
4. Tap right  to set your password.




5. On your notepad, write four digits as your password.



To disguise your written password, Livescribe recommends using one of these methods:

- Write the numbers in a different order, for example backwards.
- Write the numbers in various places on the page.
- After writing and confirming your password, go back and write other numbers over your password to disguise it.

- When you are finished entering your password, tap right  on the Nav Plus. Your smartpen confirms the password is set.




After setting your password, your smartpen prompts you each time you try to play back a session.

- To listen to your sessions, write your password on Livescribe paper when prompted by your smartpen. Your smartpen confirms if your password is correct.

### CANCELING PAPER REPLAY PASSWORD

- Use the Nav Plus to navigate to the **Paper Replay > Password protection > Remove password**.

 


- Tap right  on the Nav Plus to remove the password and cancel password protection.
- At the prompt, write the current password to be removed.

Passwords are not saved when password protection is turned off. The previous password is permanently erased. When you reactivate password protection, you need to set a new password. You can re-use passwords. They are not tracked across uses.



- Your smartpen confirms the password is removed.



You can also cancel password protection and remove your Paper Replay password using Echo Desktop. This is useful if you forget your password and need to regain access to your Paper Replay sessions. The Echo Desktop you use to cancel the password must be registered to the same account as your smartpen. You must dock your smartpen as well to remove the password.



## CONFIGURING AUDIO PLAYBACK SETTINGS


### ENABLING OR DISABLING PLAYBACK LATENCY WITH THE SETTINGS MENU

There is natural delay (or latency) between the time you hear an important point and the time when you begin writing notes about it. To address this natural delay, your smartpen plays back audio from a moment five (5) seconds *before* you wrote the notes. This feature is called **Playback Latency**. You can enable or disable this feature.

1. From the **Settings** menu, select the **Playback Latency** option.
2. Select **On** or **Off**.

### VIEWING PLAYBACK LATENCY WITH THE AUDIO SETTINGS BUTTON

**Playback Latency** is a feature that plays back audio from a moment five (5) seconds *before* you wrote notes based on the audio. You can view if this setting is enabled (default) or disabled.

1. To view the current playback latency, tap on the **Audio Settings** button  on the inside cover of your notebook.
2. The smartpen shows its audio settings, including whether playback latency is On or Off.

## DOING MATH CALCULATIONS

You can use your smartpen to perform math calculations.


### USING THE CALC SHORTCUT

**Calc** Shortcut to perform basic mathematical calculations.

 
When using Calc, follow these guidelines:

- Numbers can contain up to 12 characters, including a decimal point.
- Operators can include +, -, x, \*, /, and ÷.
- You can double-tap instead of writing the equals sign. For example, 52 - 14 followed by a double-tap is like writing =.

**Note:** If the length of the math problem exceeds the display size, the beginning of the problem scrolls off the left of the display as new characters are added to the right.

1. Double-tap  the center of a Nav Plus. A double-tap is two taps in quick succession.


Your smartpen shows the Shortcut indicator (\*) in the **Main Menu**. The smartpen is waiting for you to write a Shortcut.




2. Within three (3) seconds, write the word "calc."

Using its predictive text feature, your smartpen shows the first command that matches your written input. In this case, calc is displayed as soon as you write a "c". As soon as you see the command you want on the display, you can stop writing.



3. Tap right  on the Nav Plus, or double-tap on *Livescribe paper*.

 
Your smartpen prompts you to write a problem.



4. Write a basic math problem, such as  $51 \times 3 =$



 Your smartpen shows the result.



When you create a Shortcut, it becomes an active button that you can tap to repeat the application or command. The same is true for Launch Line Shortcuts you create.

## USING THE CALCULATOR

The calculator located on the inside covers of some Livescribe notebooks performs basic math functions, as well as many useful scientific functions.

If your Livescribe notebook has the calculator shown below, tap on the printed keys with the tip of the smartpen.



**Note:** A stylus is available for purchase from dealers who sell Livescribe products. Use the stylus instead of an ink cartridge to keep your calculator free and clear of ink marks.

## USING BASIC MATH FUNCTIONS



The calculator shows results and accepts input of numbers up to a length of 11 characters. If a result is longer than 11 digits, the calculator shows it in exponential notation. You can tap on the  $\pm$  key to toggle between positive and negative numbers. Basic math operators function like a typical desk calculator. Tap a number, an operator, another number, and an equal sign to show the answer.

If you tap the equal sign directly after the operator, the calculator performs the operation on the initial number that you tapped. For example, tap '6 x ='. The displayed result is 36.

If you tap more than one operator in a row, only the last operator is kept. For example, tap '6 x + 4 ='. The result is 10. The '+' replaces the 'x'.

If you tap the equal sign repeatedly in succession, it repeats the previous calculation. For example, tap '3 + 4 = =' The initial result is 7. Then, 4 is added to 7 equaling 11.

### USING PARENTHESES IN EXPRESSIONS

Normally the calculator respects the standard order of operations in an extended expression. However, you can use parentheses   in an expression to control the sequence of execution. You can nest parentheses to further control of the calculation sequence.

**Note:** Each time you tap a close parenthesis, the calculator calculates and shows the result of the enclosed expression.

### USING CLEAR ENTRY (CE) AND CLEAR (C) KEYS

- Tap the CE key to clear the current entry.



- Tap the C key to clear an entire expression, including any pending operator.







Neither key clears values in memory.

### USING MEMORY KEYS

You can store numbers in the memory register. When a value is present in memory, the smartpen screen shows an M indicator.

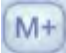

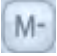When the value in memory changes, the indicator on your smartpen screen blinks. When the value in memory is zero, the memory indicator disappears.

	Adds the currently displayed value to the value in the memory register.
---	---













	Subtracts the currently displayed value from the value in the memory register.
	Shows the value currently in the memory register.
	Sets the memory value to "0".

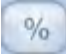

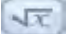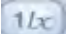





## USING SCIENTIFIC FUNCTIONS

The Scientific section of the calculator includes several specialized operators and functions, including special math operators and trigonometry functions.

For some scientific calculations, you only need to enter one number followed by an operator to obtain a result. When you enter a number followed by one of these keys, the result shows immediately. Other operators take two values. For example, to square 7, tap '7 '. The result is 49. To raise 2 to the power of 3, tap '2  3 ='. The result is 8.

## CALCULATOR KEYPAD REFERENCE



	Returns the percentage value of the number.
	Returns the factorial of number n.
	Returns the square of the number.
	Returns the square root of the number.
	Returns the inverse of the number.
	Raise a number y to the power of a number x.
	Returns Pi.
	Returns 10 to the x power.
	Returns e to the x power (the natural exponential. e is approximately 2.71828...)
	Returns the base 10 logarithm of the number.
	Returns the natural logarithm of the number.
	Generates a random number between 0 and 1.

 
	Cosine of the number.
	Arc-Cosine of the number.
	Tangent of the number.
	Arc-Tangent of the number.
	Sine of the number.
	Arc-Sine of the number.
	<p>Trigonometric calculations such as sine, cosine, and tangent must be made in degree, radian, or gradian mode. The calculator is in degree mode by default, and returns to degree each time you power off your smartpen. The DRG  button toggles between Degree, Radian and Gradian mode. If you use a trigonometry function, or use the DRG key to change modes, the smartpen screen shows the indicator of the current mode.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>Note:</b> You cannot use the DRG key to convert a completed calculation. Use it to set the mode before beginning the calculation.</p> </div>

## USING THE PIANO

With Piano, you can draw a piano on your dotted paper and play music with the smartpen. You can change the sound of your piano, add rhythm tracks, and add sharp and flat notes.

### LAUNCHING PIANO FROM THE NAV PLUS

1. Double-tap  on the center of a Nav Plus to go to the Main Menu.
2. Tap down  to scroll through the smartpen menu until Piano is displayed.



3. Tap right  to select Piano.



You can also launch Piano using Launch Line.

### DRAWING A PIANO

1. From left to right, draw 9 parallel vertical lines.

The smartpen screen shows a blinking line to indicate which line you should draw next.



2. Connect the 9 parallel lines with horizontal lines at the top and bottom.







3. Write the letter “i” and double-tap near it. This is your instrument button.
4. Tap the “i” button repeatedly to select one of the seven instruments: Grand Piano, Vibraphone, Kalimba, Steel Drum, Fiddle, Flute, or Celeste.
5. Tap on your keyboard when the first letter of the instrument you want to play is displayed on the smartpen screen.




6. Write the letter “r” and double-tap near it. This is your rhythm tracks button.
7. Tap the “r” button repeatedly to scroll through the five rhythm track options.

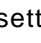

 8. Next, add sharps and flats to your piano keyboard.
9. After setting the instrument and rhythm buttons, tap left  on the Nav Plus. The smartpen shows Rhythms OFF.




10. Tap down  to reach Add Sharps & Flats.



11. Tap right  to activate Add Sharps & Flats.



- The smartpen shows blinking rectangles on your piano. Draw rectangles after the 2nd, 3rd, 5th, 6th, and 7th piano key lines, as in the display.

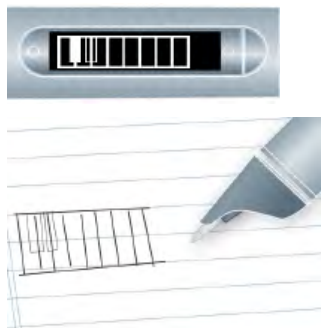

- Play your piano by tapping its keys on the paper. Tap the instrument and rhythm buttons to change their values.

A stylus is available for purchase from the Livescribe web store. You can use the stylus on your piano, rather than the ink cartridge. This keeps the paper free and clear of ink marks.

### CHOOSING AN INSTRUMENT (PIANO SOUND)

- Tap your “i” instrument button repeatedly to scroll through the instrument sounds your piano can play.

Available sounds are:

- Grand Piano
- Vibraphone
- Kalimba
- Steel Drum
- Fiddle, Flute
- Celeste

- Tap on your piano keyboard to select a sound.

The first letter of the instrument you want to play shows on the smartpen screen.




### CHOOSING A BACKGROUND RHYTHM TRACK


- Tap the “r” rhythm track button repeatedly to scroll through the available background rhythm tracks.

 


### TURNING OFF THE RHYTHM TRACK

You can turn off or turn on the rhythm track.

- Tap left  on the Nav Plus.

The smartpen shows “Rhythms OFF.” Tap right  on the Nav Plus to stop the rhythm track



- Tap the “r” button to scroll through the rhythm tracks until no track plays.



## USING THE TRANSLATOR DEMO

With the Translator Demo, you can translate a small set of words and the numbers zero to nine from English into Spanish, Swedish, Arabic, or Mandarin. By writing a word in English in your notebook, you can see and hear correct translation from the smartpen.

### TRANSLATOR DEMO WORD LIST

 
Here are the words currently defined for the Translator Demo:

- Zero, One, Two, Three, Four, Five, Six, Seven, Eight, Nine, Ten
- Hello, Goodbye
- Please, Thanks, Thank you
- Chocolate, Banana
- Water, Coffee, Beer


## USING THE SETTINGS MENU

With the **Settings** menu, you can change and view many smartpen settings.

1. Double-tap on the center of a Nav Plus to go the **Main Menu**.
2. Tap down until **Settings** is shown.



 3. Tap right to select **Settings**.
4. Tap down and tap up to scroll through the setting types list.



Tap right to select a setting type.

5. Tap down and tap up to scroll through the setting options list.



6. Tap right to select an option. After activating an option, a confirmation message scrolls across your smartpen screen and the active option has a checkmark beside it in the display.
7. Tap left to return to the option setting list to make a different selection.
8. Tap left again to return to the option list to select a different option.

### SETTINGS MENU SUMMARY

Many smartpen settings are configurable through the Settings menu.

Setting	Values	
Audio Quality	High, Medium, Low	
Microphone Sensitivity	Conference room, Lecture hall, Automatic	
Playback Latency	On, Off	


Setting	Values	
Menu Voice	On, Off	
Screen Brightness	100%, 90%, 75%, 50%, 10%	
Screen Orientation	right-handed, left-handed	
Scroll Speed	1-10 (1 is slowest, 10 is fastest)	
Date Format	mm.dd.yy, dd.mm.yy, yy.mm.dd	
Time Format	12-hour, 24-hour	
Auto-Off Time	30 minutes, 1 hour (default), 2 hours, 4 hours	
Locale	English, French, Italian, German, Spanish, Korean, Simplified Chinese, Malay, Arabic, Japanese, Portuguese, Turkish, Dutch	

Use the following table as a reference when configuring smartpen settings using the Settings menu.

## SETTING THE SMARTPEN AUTO-OFF TIME WITH THE SETTINGS MENU

By default, your smartpen powers off automatically when it is not used for an hour. *If you are recording (even if the smartpen is stationary), playing back audio, or if you are writing, the smartpen does not turn off automatically.* Your smartpen must be inactive (no recording or writing) before the **Auto-Off** feature activates.

Once activated, Auto-Off waits for a preset time before powering off your smartpen. You can set the length of time before your smartpen automatically powers off to be 30 minutes, 1 hour (the default), 2 hours, and 4 hours.

1. From the **Settings** menu, choose the **Auto-off Time** option.
2. Select the desired time and tap right .

The auto-off time setting persists until you change it or the smartpen is completely reset.

## VIEWING THE SMARTPEN NAME WITH THE SETTINGS MENU

If you use Echo Desktop to name your smartpen, you can view its name when the smartpen powers on. You can also view the smartpen name using the Settings menu.

From the **Settings** menu, choose the **Smartpen Name** option.

The smartpen shows the name.

## ENABLING OR DISABLING MENU VOICE WITH THE SETTINGS MENU

Your smartpen announces items in the Main Menu and in the Applications menu using the Menu Voice.

1. To enable or disable the menu voice, use the **Settings** menu and select the **Menu Voice** option.
2. Select **Off** or **On**.


Turning off the Menu Voice does not affect Paper Replay audio or other smartpen sounds.

## SETTING THE DATE AND TIME

You can set the date and time on your smartpen.

**Important:** It is very important that you set the correct date and time on your smartpen. Paper Replay names audio recordings using the date and time that they are created.

 
### SETTING THE DATE

1. Open the inside cover of your Livescribe notebook and locate the **Settings** area.
2. Tap the **Set Date** button  with the smartpen.
3. Tap the printed keypad and type the current date.

Tapping 103114 sets the date to Friday, October 31, 2014 for the date format mm/dd/yy.

If you make a mistake while entering the date, tap on the Set Date buttons again to start over.

Your smartpen shows the date you entered.




### SETTING THE DATE FORMAT

 
The smartpen presents the date format as mm/dd/yy by default. You can change this format either before or any time after you set the date.

1. Use the **Settings** menu and navigate to the **Date Format** option.
2. Select either mm/dd/yy, dd/mm/yy, or yy/mm/dd.


### VIEWING THE DATE WITH THE DATE BUTTON

1. Open the inside cover of your Livescribe notebook and locate the **Settings** area.
2. Tap the **Date** button .


The smartpen shows the current date.



## VIEWING THE DATE WITH A SHORTCUT

1. Double-tap  on the center of a Nav Plus.

 
Your smartpen shows the Shortcut indicator in the **Main Menu**. It is waiting for you to write a Shortcut.



2. Within three (3) seconds, write the word “date”

Using its predictive text feature, your smartpen shows the first command that matches your written input. In this case, date is displayed as soon as you write a “d”. As soon as you see the command you want on the display, you can stop writing.




3. Tap right  on the Nav Plus, or double-tap *on any Livescribe paper*.

Your smartpen shows the date.

When you create a Shortcut, it becomes an active button that you can tap to repeat the application or command. The same is true for Launch Line Shortcuts you create.

## SETTING THE TIME

1. Start your smartpen.
2. Open the inside cover of your Livescribe notebook and locate the **Settings** area.
3. In your notebook, tap the Set Time button  with the smartpen.
4. Tap the printed **Settings** keypad and enter the time as “hh:mm” format. Tap the “AM” or “PM” button to select AM or PM. For example, to enter 12:01PM, tap “1,” “2,” “0,” “1,” and the “PM” button.

If you make a mistake, entering the time, simply tap on the Set Time buttons again to start over.

Your smartpen shows the time you entered.






## SETTING THE TIME FORMAT

1. Use the **Settings** menu and navigate to the **Time Format** option.
2. Select either **12 hour** or **24 hour**.

## VIEWING THE TIME WITH THE TIME BUTTON


1. Open the inside cover of your Livescribe Dot Paper product and locate the **Settings** area.

2. Tap the Time button .

 
The smartpen shows the current time.

## VIEWING THE TIME WITH A SHORTCUT

You can use Shortcuts to check the time.


1. Double-tap  on the center of a Nav Plus. A double-tap is two taps in quick succession.

Your smartpen shows the Shortcut indicator in the **Main Menu**. It is waiting for you to write a Shortcut.



2. Within three (3) seconds, write the word “time”.

Using its predictive text feature, your smartpen shows the first command that matches your written input. In this case, time is displayed as soon as you write a “t”. As soon as you see the command you want on the display, you can stop writing.

3. Tap right  on the Nav Plus, or double-tap *on any Livescribe paper*.

Your smartpen shows the time.


When you create a Shortcut, it becomes an active button that you can tap to repeat the application or command. The same is true for Launch Line Shortcuts you create.

## CONFIGURING THE SMARTPEN SCREEN

There are several settings you can apply to your smartpen screen.

### SETTING SCREEN BRIGHTNESS

#### SETTING SCREEN BRIGHTNESS WITH THE BRIGHTNESS BUTTON

1. Some Livescribe notebooks have a Brightness button. Look at your Livescribe notebook to see if it has a **Settings** area with a Brightness button in it. If so, do the following.
2. Tap the **Brightness** button .
3. Tap multiple times to scroll through the screen brightness settings. Values are 100%, 90%, 75%, 50%, and 10%. The lowest brightness setting is optimal for dark room environments, such as when a speaker may be presenting a slideshow.



#### SETTING SCREEN BRIGHTNESS WITH THE SETTINGS MENU

1. Use the **Settings** menu and navigate to the **Display Brightness** option.
2. Select the brightness.  
Values are 100%, 90%, 75%, 50%, and 10%. The lowest brightness setting is optimal for dark room environments, such as when a speaker may be presenting a slideshow.

### SETTING SCREEN ORIENTATION

#### SETTING SCREEN ORIENTATION WITH THE LEFT OR RIGHT BUTTONS

You can configure your smartpen screen for either left- or right-handed use. Tap the appropriate button to configure your display orientation.

1. Start your smartpen.
2. Open the inside cover of your Livescribe notebook and locate the **Settings** area.
3. Under **Settings**, tap on the **Left** or **Right** buttons   to orient your display for left- or right-handed use.



## SETTING SCREEN ORIENTATION WITH THE SETTINGS MENU

1. Use the **Settings** menu and navigate to the **Display Orientation** option.
2. Select either right-handed and left-handed.

## SETTING SCROLL SPEED

### SETTING SCROLL SPEED WITH THE PLUS AND MINUS BUTTONS

Text that is too long to fit on your smartpen screen scrolls across it. You can increase or decrease the rate at which text scrolls using the Scroll Speed settings.

- To increase the scroll speed, tap the  button.
- To decrease the scroll speed, tap the printed  button.
- Tap until you reach the desired speed, between 1 and 10. 1 is slowest and 10 is fastest.

### SETTING THE SCROLL SPEED WITH THE SETTINGS MENU

1. Use the **Settings** menu and navigate to the **Scroll Speed** option.
2. Select the desired speed, between 1 and 10.

## CHANGING SMARTPEN LOCALES

You can use the **Locale** command in the **Settings** menu to change your smartpen screen and audio instructions from one language to another.

### CHANGING LOCALES WITH THE SETTINGS MENU

When you switch to another language, your smartpen changes the following things based on the locale:

- Language of text resources (such as menus and other on-screen prompts)
- Language of audio resources (such as app names and instructions)
- Date format
- Time format
- Number format

1. Use the **Settings** menu and navigate to the **Locale** option.
2. Select one of the available locales.

This list includes: English, French, Italian, German, Spanish, Korean, Simplified Chinese, Malay, Arabic, Japanese, Portuguese, Turkish, and Dutch.

3. When prompted, tap right  again to restart your smartpen.

After your smartpen restarts, it runs with the selected language as the default.

Livescribe also provides printed controls on certain Livescribe notebooks you can use to switch between languages.

## MANAGING LIVESCRIBE NOTEBOOKS


Livescribe sells notebooks, journals, flip notepads, and other paper products for your smartpen. These products are all described generically as *Livescribe notebooks*.

### ABOUT LIVESCRIBE DOT PAPER

To perform its many operations, your smartpen requires Livescribe Dot Paper.

This paper is standard paper with printed microdots on its surface. These dots are nearly invisible to the human eye. However, the smartpen can easily see these dots and uses them to know which page you are writing on and the exact location on that page. The smartpen can even see these dots through the ink you write on your pages.

The microdot pattern on each page is based on technology from Anoto AB. This dot pattern consists of small dots (100 micrometers in diameter) arranged with a spacing of approximately 0.3 mm. The dot pattern overlays an imaginary square grid. The dots are slightly displaced from the grid, with each dot in one of four possible positions, forming the proprietary Anoto dot pattern.

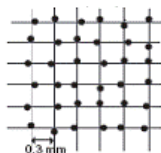

The dot pattern identifies the specific page and locations on the page of the notes you write. Your smartpen uses the dot pattern in a way similar to a geographical positioning system (GPS). But, instead of identifying locations on land, it finds locations on paper and stores your writing as digital ink using those locations. Using this patented dot-positioning system (DPS), the smartpen precisely tracks its own movement on paper. As a result, anything you write – words, numbers or drawings – can be stored, recognized, and intelligently responded to by the smartpen.

The area of the entire Anoto dot pattern is huge, and represents a piece of paper the combined size of Europe and Asia. Livescribe Dot Paper is based on a portion of this dot pattern.

### USAGE GUIDELINES FOR LIVESCRIBE NOTEBOOKS

Understanding how your smartpen interacts with Livescribe Dot Paper can be challenging. Fortunately, you do not need to know how it all works. All you need to do is follow these guidelines:

- Before using a new Livescribe notebook, tap on the Status Label. If it says you are already using a notebook with the same number, be sure to archive your old notebooks on Echo Desktop first.
- If you own Livescribe notebooks that have the same naming and numbering, use them sequentially.
- Archive your Livescribe notebooks products after you have finished with them.

## CHECKING LIVESCRIBE NOTEBOOK USAGE

Each Livescribe notebook has a Status Label. Using the Status Label is the best way to tell if you are currently using a Livescribe notebook that has the same dot pattern.



1. When you open a new Livescribe notebook, tap on its Status Label with your smartpen.
2. Your smartpen screen shows whether you are using another Livescribe notebook with the same dot pattern. If you are, archive the older Livescribe notebook before using the new one.
3. In some cases, your smartpen needs an update before it can use a particular Livescribe notebook. If this occurs, your smartpen screen displays an Update message when you tap the Status Label. You should then update your smartpen software.

## ARCHIVING LIVESCRIBE NOTEBOOKS

When you have finished using a Livescribe notebook, you should archive it in Echo Desktop.

Archiving a Livescribe notebook does the following:

- Frees up storage space on your smartpen
- Enables you to use another Livescribe notebook that has the same dot pattern as the one you archived. Livescribe notebooks with the same dot pattern have the same name.
- Moves your notes and audio for a Livescribe notebook into an Archived Notebooks folder in the Library Pane of Echo Desktop. Your notes and audio remain interactive in Echo Desktop, just like non-archived Livescribe notebooks.
- Deletes your notes (ink data) and audio from your smartpen. Because of this, your smartpen no longer interacts with the physical Livescribe notebook that you archived. When you tap the notes in your archived physical notebook, they do not play back any audio.

**Important:** Do not archive a notebook unless you are finished using the physical notebook and are ready to set it aside. After you have archived a notebook, do not go back to its physical notebook and start writing on it again, unless you have unused pages and want to treat them as a part of a new notebook. For example, you could archive a notebook that is partially completed, and then use the remaining pages as a second notebook. If you are using multiple computers to manage your smartpen data, be sure to archive your notebooks on all of these computers.

## ABOUT LIVESCRIBE NOTEBOOK NAMING

Livescribe identifies its notebooks by a group (such as Lined Notebook) and a number (from 1 to 8). Any two Livescribe notebooks labeled with the same group and number have the same dot pattern.

Each Livescribe notebook belongs to a *group* based on its format (lined, unlined, grid...) and form factor (notebook, journal, notepad ...).

Livescribe further identifies each notebook with a *number*. Within a group, Livescribe notebooks labeled with the same number have the same dot pattern. Livescribe notebooks labeled with different numbers have different dot patterns. Currently, numbers in a group run from 1 to 8.

## USING LIVESCRIBE NOTEBOOKS WITH SAME NAMES AND NUMBERS

If you own two Livescribe notebooks with the same Group and Number (such as two Lined Notebook 3s), follow these guidelines:

- Use only one of the Livescribe notebooks at a time. Do not use the two paper products at the same time.
- Before starting on the second paper product, archive the first one with Echo Desktop.

For example, do not use two Lined Notebook 1 paper products at the same time. Instead, use another lined notebook with a different Number, such as a Lined Notebook 2 or Lined Notebook 3.

If you have used all the Numbers in the Lined Notebook group, you may wish to start a second, unused Lined Notebook 1. To do so, archive the first Lined Notebook 1. Then you can use your smartpen on the second Lined Notebook 1.

Livescribe notebooks sold in a pack are from same group. For example, Lined Notebooks come in packs of four (Notebooks 1-4 and 5-8).

When you buy two or more packs of Lined Notebooks, verify that the Numbers on the Notebook covers are different. For example, buy and use Notebooks 1-4 and Notebooks 5-8 before buying another pack of 1-4 or 5-8.

If you have purchased two packs with the same numbering, the packs have the same dot pattern. In this case, follow these guidelines:

- Use all the Livescribe notebooks in the first pack before starting on the second pack.
- When you have finished with the first pack, archive each Livescribe notebook from the first pack and then start using the second pack.



## USING SPECIAL PAPER PRODUCTS

In addition to standard notebooks and journals, Livescribe sells special paper products, including Sticky Notes, Sound Stickers, and others.

### ABOUT LIVESCRIBE STICKY NOTES

Livescribe Sticky Notes take the familiarity and convenience of sticky notes—small pieces of paper with a strip of repositionable adhesive on the back—and add the power of Livescribe Dot Paper.

You can quickly capture short notes, lists, and reminders while adding audio to them. Attach Livescribe Sticky Notes to any printout, magazine, or book page to add personalized interactive notes. Transfer your Sticky Notes to your desktop computer to organize, search, or share them with others.



Livescribe Sticky Notes come with the familiar Nav Plus and Paper Replay buttons printed along the bottom edge. Along the top edge, Sticky Notes have additional buttons: Home and Shortcuts.

The Home button stops the current smartpen app and returns you to the default Home display.



The three Shortcut buttons have functionality that you assign to them.



## USING PACKS AND PADS OF STICKY NOTES

Each pad of Livescribe Sticky Notes contains 75 sheets. Pads are sold in packs of six: three pads of 3"x3" and three pads of 3"x5". Use only one Livescribe pack at a time.

Your smartpen can manage up to 6 pads (Sticky Notes 3"x3" Pads 1, 2, 3 and Sticky Notes 3"x5" Pads 1, 2, 3) at the same time. When you are done with all six pads, archive them with Echo Desktop before starting a new 6-pack. Do not use identical pads from different 6-packs at the same time, because your smartpen recognizes them as the same pad.

1. Use up all the pads in one pack.
2. Archive the pads.
3. Open a new pack.

## SOUND STICKERS

Livescribe Sound Stickers are small stickers for recording and playing back audio notes.

There are many uses for sound stickers, particularly in education. Some uses include:

Teacher recordings:

- Books (parent to child, teacher to student, student to student, or celebrity "Read-To-Me" programs)
- Interactive flash cards and flip cards
- Word walls
- Talking tests and quizzes with recorded instructions or questions

Student recordings:

- Fluency/speech assessments and tests
- Annotated art projects, oral reports and book reviews

Each Sound Stickers sheet includes:

- Sound Stickers

- Volume and mute controls
- Controls for managing the stickers, including record audio, delete recordings, and cancel.



## SOUND STICKER GUIDELINES

There are some general guidelines to follow when using Sound Stickers.

Your smartpen can support stickers from one pack of Sound Stickers at a time. Please do not use stickers from multiple sticker packs at the same time, because your smartpen will recognize them as the same stickers.

Sound Stickers feature a strong adhesive and are intended to stay put. For best results, always test one sticker on the surface material before using.

Sound Stickers have special controls that only work for the stickers. They do not work with other apps, including Paper Replay. Controls from Livescribe notebooks, such as record, stop, and jump, will not work with Sound Stickers.

## RECORDING AUDIO FOR A STICKER

1. Tap the **Record** button to start a recording session.  
Your smartpen screen shows "Tap sticker to begin recording."
2. Tap on a sticker.  
Your smartpen screen shows "Begin recording now. Tap sticker again to end recording."
3. Record the audio for the sticker.
4. Tap the sticker again to end the recording.  
Your smartpen screen shows "Recording complete."
5. You can cancel your changes at any time by tapping on the **Cancel** button, tapping on Livescribe Dot Paper page, or tapping on a standard Paper Replay control.

### One-Step Recording

You can bypass using the **Record** button and use tap-and-hold recording instead.

1. Change the **One-step recording** option in the **Advanced Settings** menu.
2. Tap and hold on a Sound Sticker for two (2) seconds.

The recording starts.

3. Record the audio for the sticker.
4. Tap the sticker again to end the recording.

Your smartpen screen shows "Recording complete."

### Re-Recording (Over-Writing) Audio

Sound Stickers prohibits recording over an existing recording as a safety precaution. To record over an existing recording, first delete the recording and then record again.

If you would like to record directly over existing recordings, you can change the Overwriting option in the **Advanced Settings** menu.

### PLAYING BACK AUDIO OF A STICKER

You can play back, pause, and rewind audio recorded for a sticker.

1. To begin playback, tap on the sticker.
2. To pause playback, tap on the sticker again.
3. To resume playback, tap again.
4. To rewind and start playback from the beginning, double-tap on the sticker.

### DELETING RECORDINGS FROM A SOUND STICKER

1. Tap the **Delete** button.

Your smartpen screen shows "Tap the sticker you wish to delete."

2. Tap the sticker you wish to delete.

Your smartpen screen shows "Audio for this sticker will be deleted. Tap again to confirm."

3. Tap the sticker again to confirm.

Deleted recordings are permanently removed from your smartpen. They are not transferred to Echo Desktop and cannot be retrieved from the smartpen or any other source.

Your smartpen screen shows "Audio deleted."

### Deleting All Recordings from All Stickers









You can delete all recordings from your stickers.

Deleted recordings are permanently removed from your smartpen. They are not transferred to Echo Desktop and cannot be retrieved from the smartpen or any other source.


- Delete the recordings individually for each sticker, or
- Use the **Advanced Settings** to delete all stickers.

### ADVANCED SETTINGS

You change how you record and delete recordings using the **Advanced Settings** menu.

1. Double-tap  on the center of a Nav Plus go to the Main Menu.
2. Tap down  to locate the **Applications** menu.
3. Tap right  to view the first of your Store apps.
4. Tap down  to scroll through other apps and locate the Sound Stickers.
5. Tap right  to select and launch it.
6. Tap down  to the **Settings** menu. Choose from the available options.
7. Tap right  and then tap down  to scroll through options.

Options are:

- Turn one-step recording on or off
  - Turn overwriting on or off
  - Delete ALL stickers
8. Tap right  to select and change the option.

## SMARTPEN MAINTENANCE AND SAFETY

You should regularly maintain your smartpen and be aware of how to use it safely.

### MAINTAINING YOUR SMARTPEN

- Use Livescribe-approved ink cartridges only.
- Carry your smartpen in a protective case.
- Transfer your important notes and audio from your smartpen to your Echo Desktop often so that you have a backup copy on your computer. Also, backup your computer's files regularly.
- Use your smartpen regularly. Your smartpen contains a lithium-ion battery which is not replaceable. If left in an uncharged state for an extended period of time, the battery will lose its capacity. You can prevent this by going through a complete cycle each month by draining the smartpen all the way down, then giving it a complete charge for 2.5 hours. If you need to store your smartpen for a while, please make sure it's fully charged before doing so.
- Do not attempt to charge your smartpen via any other means other than the included Micro USB cable or a standard Micro USB cable. (Pulse smartpens use the USB charging cradle.)
- Keep your smartpen firmware current by installing any updates so you'll have the best experience.
- If your smartpen has been in an extremely cold environment, allow it to warm up for a few hours before powering it on.
- Low humidity environments can lead to static electricity; high humidity environments can lead to condensation - both of which are harmful to your smartpen.

### CLEANING YOUR SMARTPEN

Clean your smartpen by strictly following these instructions.

1. If your smartpen acts sluggish or non-responsive when you interact with the printed paper controls, there may be dirt in the infrared camera lens area. Gently clean the lens with an alcohol wipe or cotton swab.
2. Regularly clean the exterior of your smartpen with a clean, soft cloth dampened lightly with water. While cleaning, do not pour water on your smartpen or submerge the smartpen in water. Your smartpen is not waterproof. Exposure to water inside the smartpen will damage the electronic components and nullify your warranty. Do not leave the smartpen exposed in damp environments.

## STORING SMARTPENS

Below are some recommendations for preparing and storing smartpens when they are not used for a long period of time.

- Fully charge each smartpen prior to placing them in storage.
- Store smartpens in a location that does is dry and not excessively hot or cold. Excessive heat or cold may adversely affect the battery performance.
- Keep the accessories with the smartpens so they are not lost.

## REDUCING ELECTROSTATIC DISCHARGE (ESD)

Electrostatic discharge (ESD) can cause damage to electronic devices if discharged into the device. Static electricity is an electrical charge caused by the buildup of excess electrons on the surface of a material. Even a small amount of ESD can harm circuitry, so when working with electronic devices, take measures to help protect your electronic devices from ESD harm.

Any electronic device that contains an external entry point for plugging in anything from cables to docking stations is susceptible to ESD. Devices that you carry with you, such as your mobile phone, build up ESD in a unique way because the static electricity that builds up on your body is automatically passed to the device. Then, when the device is connected to another device such as a docking station, ESD discharge can occur.

Conditions that can contribute to the buildup of static electricity in the environment include the following:

- Low relative humidity.
- Material type. (The type of material gathering the charge. For example, synthetics are more prone to static buildup than natural fibers like cotton.)
- The speed with which you touch, connect, or disconnect electronic devices.
- While you should always take appropriate precautions to discharge static electricity, if you are in an environment where you notice ESD, you may want to take extra precautions to protect your electronic equipment against ESD.

Follow these guidelines to reduce the occurrence of ESD:

- Discharge any built-up static electricity from yourself and your electronic devices before touching an electronic device or connecting one device to another. Livescribe recommends you take this precaution before connecting your smartpen to your computer, placing your smartpen in a cradle, or connecting it to any other device.
  - Ground yourself when you are holding your mobile device by simultaneously touching a metal surface that is at earth ground. For example, if your

computer has a metal case and is plugged into a standard three prong grounded outlet, touching the case should discharge the ESD on your body.

- Increase the relative humidity of your environment.
- Install ESD-specific prevention items, such as grounding mats.

## SAFETY

**Caution:** Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

The smartpen may be damaged by improper handling or storage. Do not drop, throw, bend, crush, deform, puncture or open the smartpen. Failure to follow these instructions could result in electric shock, fire, personal injury, property damage or damage to your smartpen, as well as voiding your limited warranty. It is also essential that you take proper care of the smartpen to ensure its usability.

- Do not drop your smartpen or allow any other kind of strong impact. Doing so can severely damage your smartpen or prevent it from working properly.
- Do not place your smartpen in any area where it could be crushed (such as a back pocket, bottom of backpack, and so on.)
- Do not store your smartpen in extreme high or low temperatures. Store it in a cool, dry place.
- Do not expose your smartpen to water or any other liquids. It is not water-proof or water resistant. Do not leave it in damp conditions.
- Do not dispose of your smartpen in a fire, as the battery may explode or ignite. Do not dispose of this product in the trash. As with any product containing batteries, check with your local waste or recycling company to determine the correct disposal method and location in your area.

## WARNINGS

**Do not attempt to do any repairs yourself.** Do not attempt to open the smartpen, disassemble it, remove the battery, or attempt to replace the battery yourself. This runs the risk of electric shock, fire, personal injury, property damage or damage to your smartpen, as well as voiding the limited warranty. There are no user-serviceable components inside and any attempt to open your smartpen voids the warranty.

**Hearing Notice:** Long-term exposure to the playback of loud recordings, at high volume, may result in permanent hearing loss. When using earbuds or headphones, Livescribe recommends that you listen to recordings at moderate volumes. Set the volume to a safe level. A rule of thumb is that the recorded audio should not be so loud that you cannot hear people speaking to you.



**Do not attempt to access the battery.** The rechargeable battery is not accessible and is not intended to be removed, replaced, or touched. The battery contents can be hazardous if ingested. The battery technology is combustible and only chemical fire retardants or sand should be used to extinguish flames. Do not use water. If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If it does come in contact with skin or eyes use large amounts of water to wash the affected area and immediately seek medical advice.

**Caution:** Do not mutilate, puncture, or dispose of batteries in fire. The batteries can burst or explode, releasing hazardous chemicals. Discard used batteries according to the manufacturer's instructions and in accordance with your local regulations.

Varning: Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikan-tens instruktion.

Advarsel! Lithiumbatteri—Explosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af same fabrikat og type. Levér det brugte batteri tilbage tilleverandøren.

Varoitus: Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan valmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohje-iden mukaisesti.

Advarsel: Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefait av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.


Waarschuwing! Bij dit produkt zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA.

## MANAGING STORAGE ON A SMARTPEN

 
You can view and manage the data and applications stored on your smartpen.

### VIEWING SMARTPEN STORAGE WITH THE STORAGE BUTTON


1. Start your smartpen.
2. Some Livescribe notebooks have a Storage button. Look at your Livescribe notebook to see if it has a **Settings** area with a Storage button in it. If so, do the following.

3. Tap the Storage button  once to see amount of remaining storage in megabytes.
4. Tap a second time to see the remaining recording time based on the current audio (recording) quality settings.


If available space is less than 1 MB, your smartpen shows storage in available KB.



 
If you see the circled exclamation mark indicator on the right side of the display, check your available storage on the smartpen as it is almost full.



### VIEWING SMARTPEN STORAGE WITH A SHORTCUT

1. Double-tap  on the center of a Nav Plus.

 
Your smartpen shows the Shortcut indicator in the **Main Menu**. It is waiting for you to write a Shortcut.



2. Within three (3) seconds, write the word “storage.”

Using its predictive text feature, your smartpen shows the first command that matches your written input. In this case, storage is displayed as soon as you write an “s”. As soon as you see the command you want on the display, you can stop writing.

 
 


3. Tap right  on the Nav Plus, or double-tap on any Livescribe paper.

If available space is less than 1 MB, your smartpen shows storage in available KB.

If you see the circled exclamation mark indicator on the right side of the display, check your available storage on the smartpen as it is almost full.

Your smartpen shows the available storage.



When you create a Shortcut, it becomes an active button that you can tap to repeat the application or command. The same is true for Launch Line Shortcuts you create.

## DELETING AUDIO RECORDINGS FROM A SMARTPEN

If you wish to delete sessions from your smartpen for any reason, such as managing storage, we recommend that you transfer your notes to Echo Desktop and then delete Paper Replay sessions from your smartpen.

When you delete a session from the smartpen, your paper notes linked to that file no longer plays back the Paper Replay audio that was previously linked to that ink. However, as long as you have transferred your notes to Echo Desktop, you can continue to replay your notes from your computer.


**Note:** You cannot retrieve a session after you delete it from both the smartpen and Echo Desktop. Deleting sessions does not affect the notes on the smartpen - they remain on the smartpen until you archive the notebook.

There are various ways to delete Paper Replay sessions from the smartpen:


- Use a Echo Desktop to remove the smartpen session.

 
- Archive your paper product. This removes all Paper Replay sessions from your smartpen for that paper product.
- Using the **Main Menu** on the smartpen.
- Using the Delete Current Session shortcut to delete the most-recently accessed session.



## DELETING AUDIO RECORDINGS FROM A SMARTPEN WITH THE NAV PLUS


1. Double-tap  on the center of a Nav Plus to go to the **Main Menu**.





 
2. Tap down  to scroll through the apps on your smartpen until Paper Replays is displayed.



 
3. Tap right  to launch Paper Replay.
4. Tap down  to locate Delete session from the menu.





 
5. Tap right  to browse sessions.
6. Tap down  to scroll through a list of sessions.




7. Locate the session to delete.



 8. Tap right  to select it.
9. Tap right  to confirm deletion.



Your smartpen indicates that the session is deleted.

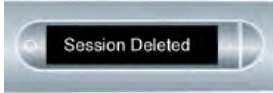

## DELETING THE CURRENT AUDIO RECORDING WITH A SHORTCUT

You can use a shortcut to delete the current session. In this context, the current session is the most recently accessed session. This is the last session that was either played or recorded.

1. On any Paper Replay **Stop** button, tap and hold for three seconds. Your smartpen instructs you to tap again to delete the current session.
2. Tap **Stop** again to confirm the deletion.



## SMARTPEN WARRANTY AND COMPLIANCE

Livescribe provides a warranty for your smartpen and supports industry compliance standards.

### WARRANTY

**LIMITED WARRANTY.** Livescribe warrants the smartpen to be free from defects in materials and workmanship under normal use for a period of one year from the date of original direct or retail purchase. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, improper maintenance, or other causes not arising out of defects in workmanship or materials of the product. All warranty claims are subject to: (1) you notifying Livescribe of the warranty claim within the warranty period, (2) Livescribe verifying the existence of a defect in the product and (3) receipt of valid proof of your purchase and the date of your purchase. Your exclusive remedy shall be, at Livescribe's option, to have it repaired or receive a replacement smartpen. Before returning the smartpen, please contact the Livescribe Customer Service Department for instructions.

In the event that a product under warranty is repaired or replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer.

Repair or replacement is your exclusive remedy, and Livescribe's exclusive liability, under this warranty.

THE LIMITED WARRANTY SET FORTH HEREIN IS THE ONLY WARRANTY MADE TO YOU AND IS PROVIDED IN LIEU OF ANY OTHER WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS.

**DISCLAIMER OF WARRANTIES.** YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE ECHO DESKTOP SOFTWARE, smartpen AND OTHER PRODUCTS AND SERVICES IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU. EXCEPT FOR THE LIMITED WARRANTY SET FORTH ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE ECHO DESKTOP SOFTWARE, smartpen, PRODUCTS AND SERVICES ARE PROVIDED "AS IS", WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND LIVESCRIBE AND LIVESCRIBE'S LICENSORS (COLLECTIVELY REFERRED TO AS "LIVESCRIBE") HEREBY DISCLAIM ALL OTHER WARRANTIES AND REPRESENTATIONS, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND

NON-INFRINGEMENT OF THIRD PARTY RIGHTS. LIVESCRIBE DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE ECHO DESKTOP SOFTWARE, smartpen, PRODUCTS OR SERVICES, THAT THE FUNCTIONS CONTAINED IN THE ECHO DESKTOP SOFTWARE, smartpen, PRODUCTS OR SERVICES WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE ECHO DESKTOP SOFTWARE, smartpen OR SERVICES WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE ECHO DESKTOP SOFTWARE, smartpen OR SERVICES WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY LIVESCRIBE OR ANY LIVESCRIBE AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. SHOULD THE ECHO DESKTOP SOFTWARE, smartpen, OR SERVICES PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

LIMITATION OF LIABILITY. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL LIVESCRIBE BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE ECHO DESKTOP SOFTWARE, smartpen, OR SERVICES, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF LIVESCRIBE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. In no event shall Livescribe's total liability to you for all damages (other than as may be required by applicable law in cases involving personal injury) exceed the amount of fifty dollars (\$50.00). The foregoing limitations will apply even if the above stated remedy fails of its essential purpose.

### AGENCY COMPLIANCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### US FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The use of shielded I/O cables is required when connecting this equipment to any and all optional peripheral or host devices. Failure to do so may violate FCC rules. Shielded I/O cables are available for the smartpen from Livescribe.

Changes or modifications not covered in this Guide must be approved in writing by the manufacturer's Regulatory Engineering Department. Changes or modifications made without written approval may void the user's authority to operate this equipment.

Responsible Party:  
 Livescribe Inc  
 7677 Oakport Street, 12th Floor  
 Oakland, CA 94621  
 United States of America  
 (510) 777-0771



### CANADIAN, INDUSTRIE CANADA ICES-003 STATEMENT

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.



## CE DECLARATION OF CONFORMITY

Manufacturer and EU Responsible Party:

Livescribe Inc  
7677 Oakport Street, 12th Floor  
Oakland, CA 94621  
United States of America  
(510) 777-0771



This product was tested by Livescribe Inc. and found to comply with all the requirements of the EMC Directive 2004/108/EC and of the LVD Directive 2006/95/EC.

This device conforms to the following standards:

EN 55022 (1998); CISPR 22 as amended, (Class B Radiated and Conducted Emissions)  
EN 55024 (1998); CISPR 24 as amended, (Emissions and Immunity, as applicable)  
EN60950-1 and IEC 60950-1, Information technology equipment. Safety.

## REACH REGULATION

REACH is the Regulation for Registration, Evaluation, Authorisation and Restriction of Chemicals, which went into effect on June 1, 2007 to streamline and improve the former legislative framework for chemicals of the European Union (EU).

Thresholds and Substances of Very High Concern (SVHC) are defined in Article 7 and 57 of Regulation (EC) No 1907/2006 of the European Parliament and of the Council of 18 December 2006. The Echo smartpen has been tested to comply with the thresholds and substances of very high concern restrictions as defined by the European Chemicals Agency (ECHA).

## ROHS COMPLIANCE STATEMENT

Livescribe has determined that this product complies with the requirements of the Restriction of Hazardous Substances (ROHS) directive 2002/95/EC and its amendments. For additional information, contact Livescribe at the address above.

## UL

Use only with Listed ITE.

This device conforms to the following standards: UL60950-1, First Edition

# Echo Desktop for Windows User Guide



## ABOUT ECHO DESKTOP FOR WINDOWS

Echo Desktop is software that runs on your computer to view and listen to the content you create and capture using your Smartpen. With Echo Desktop, you can view your notes, listen to your recorded audio, and more.

Using Echo Desktop, you can:

- Save and search notes, and play back audio recordings from your computer.
- Search your handwritten notes for keywords.
- Organize and manage your notes.
- Export and share your notes and audio recordings.

## SYSTEM REQUIREMENTS

You can install Echo Desktop on one or more computers. Before installing, verify that your computer meets or exceeds the system requirements.

Echo Desktop requires:

- PC with a 1 GHz Intel or AMD processor
- Windows® 7, Windows® 8, or later
- 300 MB of available disk space
- An available USB 2.0 port
- Internet connection

## INSTALLING ECHO DESKTOP

If this is the first time you are installing Echo Desktop, follow these steps.

1. Verify that your computer meets the software and hardware requirements for Echo Desktop.
2. Download the Echo Desktop installer from [www.livescribe.com/install](http://www.livescribe.com/install).
3. Open the installer and follow the on-screen instructions to complete the installation. When asked to dock your smartpen, use only the Micro-USB cable that came with your smartpen.

**Note:** Pulse smartpen owners should use only the USB Mobile charging cradle included with the product. Plug the cradle's USB connector into an available USB port on your computer. Put the Pulse smartpen gently into the cradle. A built-in magnet will snap the smartpen snugly into place.

## AUTHORIZING ECHO DESKTOP

When you use Echo Desktop for the first time, Echo Desktop prompts you to log on to or create your Livescribe account. After doing so, that installation of Echo Desktop is authorized for (or linked to) your account.

As a Livescribe user, all your Livescribe tools link to each other using one set of credentials. This means that your smartpen registration and your installations of Echo Desktop identify themselves to each other using the *same email address and password*.

You can use Echo Desktop on as many computers as you like, and you can use as many smartpens as you like. When authorizing Echo Desktop and registering your smartpens, use the same email address and password for all of them.

## UNINSTALLING ECHO DESKTOP

You can uninstall Echo Desktop from your computer.

1. Choose **Start > Settings > Control Panel**. In the Control Panel, locate and double-click on **Add or Remove Programs**.

The Echo Desktop installer prompts you to confirm the removal of the app.

2. Click **Yes** to proceed.
3. Follow the on-screen instructions to complete the uninstall process.

## UPGRADING LIVESCRIBE DESKTOP

If you are already using the earlier desktop software, named Livescribe Desktop, you may continue using it. Livescribe Desktop will not be subject to any further development or updates.

Alternatively, you can download Echo Desktop from [www.livescribe.com/install](http://www.livescribe.com/install) and install it.

**Important:** Once you have upgraded to Echo Desktop, your old Livescribe Desktop will not longer work with your smartpen. Besure you have exported any pencasts from Livescribe Desktop that you want to access in Echo Desktop.

## CONFIGURING ECHO DESKTOP

You can customize the behavior of Echo Desktop using its configuration options.

### SETTING UP AUTO-LAUNCH

You can configure Echo Desktop to automatically launch when you dock a smartpen. This feature is called **Auto-Launch**.

- Check the **Auto-launch** option in the **app** tab under **Tools > User Settings**.

If you disable auto-launch and Echo Desktop is not running, docking your smartpen charges it only. It does not launch Echo Desktop or transfer the smartpen content.

### CONFIGURING ECHO DESKTOP SETTINGS

With the User Settings feature, you can set your preferences for Echo Desktop app, the interaction of Echo Desktop with the smartpen, and how you want to show pages in Echo Desktop.

To set user preferences:

1. Go to **Tools > User Settings**
2. Navigate through the tabs to set your preferences as described below.

### APP SETTINGS

Use the **Applications** tab to set preferences for the Echo Desktop app. Options include:

- Keeping you logged in to Livescribe Online when you launch Echo Desktop.
- Specifying settings if your network uses a proxy server. Contact your system administrator for information about what settings to use.
- Disabling the Echo Desktop startup sound.

### SMARTPEN SETTINGS

Use the Smartpen tab to set preferences for your smartpen. Options include:

- Automatically installing apps and updates to your smartpens instead of manually selecting which to install and where.
- Enabling Echo Desktop to show the library for a particular smartpen by default on startup.

## PAGES SETTINGS

Use the Pages tab to set preferences for how to show pages in Echo Desktop.


Options include:

- Hiding blank (empty) pages when viewing thumbnails.
- Choosing screen colors for active ink (ink that has linked audio), inactive ink (ink without audio), and ink added during audio playback (ink annotations).



## VIEWING NOTES AND PLAYING BACK AUDIO IN ECHO DESKTOP

In Echo Desktop, you can view your notes and play back audio recordings made with the smartpen. In Echo Desktop, notes that have linked audio appear as green ink.

To listen to audio recordings that are linked to your notes, click on the green ink with your mouse. Clicking green ink in Echo Desktop is similar to tapping a note in your paper notebook. Both actions begin audio playback. When you mouse over green ink, the mouse cursor changes to a pointing hand . Click to play back the associated audio.

**Note:** You can display ink in a color other than green by setting a user preference.

## ECHO DESKTOP FOR WINDOWS BASICS

Echo Desktop provides views, menus, toolbars, and controls you can use to view and manage notes and audio transferred from your smartpen.

### RUNNING ECHO DESKTOP

To run Echo Desktop and transfer notes and audio from your smartpen, follow these steps.

Use only the connector that came with your product: the Micro-USB cable for Echo smartpens or the USB Mobile charging cradle for Pulse smartpens.

**Note:** After docking your smartpen, do not remove it until content transfer is complete. Echo Desktop shows a message confirming that the transfer is successful and you may now undock the smartpen.

**Important:** Be sure that your computer does not go into sleep mode during the transfer process. If it does, undock and redock your smartpen so transfer can restart.

1. On your desktop, double-click the Echo Desktop shortcut or go to **Start > Programs > Livescribe > Echo Desktop**.
2. Dock your smartpen.  
  
If your smartpen is authorized for the computer you are using, data transfer begins automatically.
3. Do not undock your smartpen until the transfer is complete. Echo Desktop shows a message confirming transfer success.
4. If prompted, type a name for your smartpen. This is the name that displays in Echo Desktop to identify your smartpen. This name also displays on your smartpen when you power it on.
5. If you have not registered your smartpen, Echo Desktop prompts you to do so.
6. Click the smartpen selector  in the Main Toolbar to choose which smartpen content to view in Echo Desktop.


Echo Desktop shows the Library of notebooks and other paper products that you have used with the selected smartpen, including your notes and any audio you have recorded. Echo Desktop can also show details about the selected smartpen, including its memory (storage) usage and apps that can be installed on it.

When you transfer content to Echo Desktop, the original content remains on the smartpen. In this sense, *transferring* content actually means copying it from the smartpen to Echo Desktop.

## QUITTING ECHO DESKTOP


To quit Echo Desktop, follow these steps.

Quitting Echo Desktop ends the connection between your computer and your smartpen.

- Click the close button  at the top right-hand corner of Echo Desktop, or
- Choose **File > Exit**.


## ECHO DESKTOP VIEWS

To use Echo Desktop, you should become familiar with its views and panes.

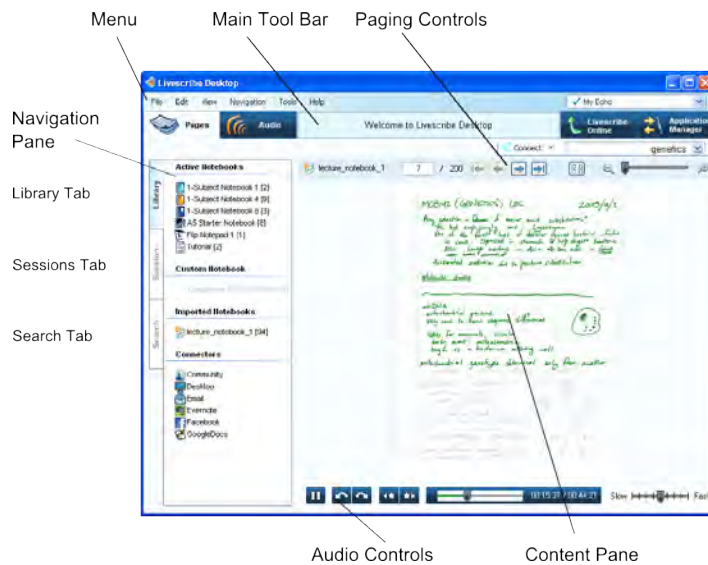


### Thumbnail View

Thumbnails View is the default Echo Desktop view. Echo Desktop shows pages as thumbnails.

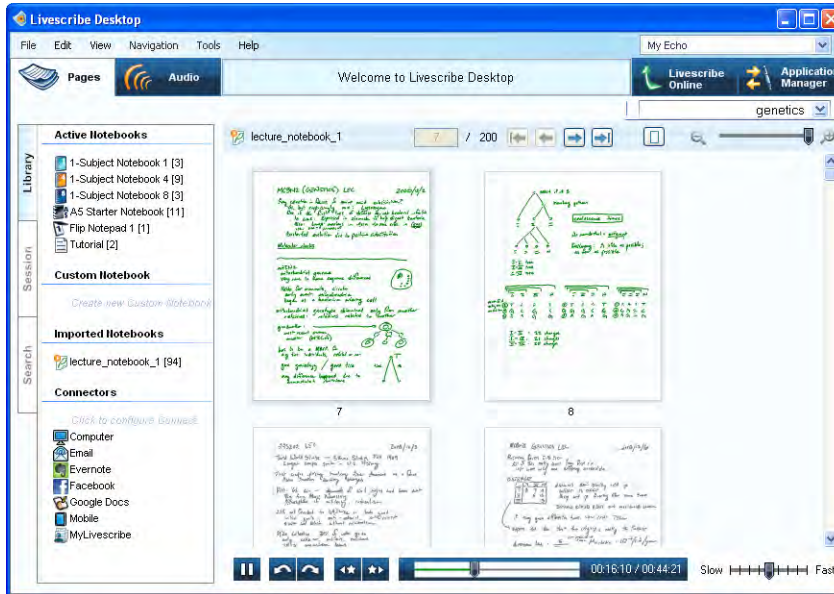


### Single-Page View

Single-Page View shows individual pages. Click on green ink to play back audio recordings linked to the page.

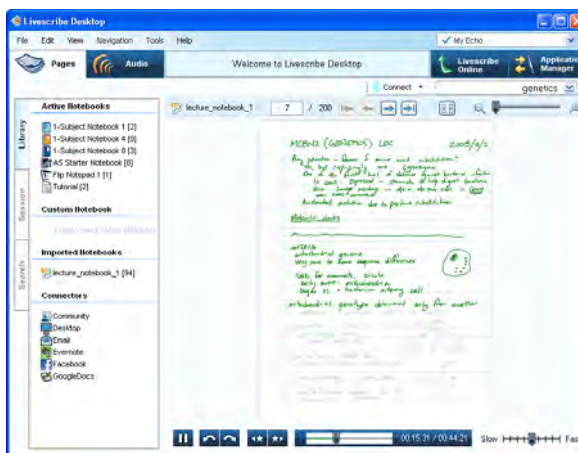

## Audio View


In Audio View, you can view a list of your audio recordings. In this view, you can also play back recorded audio, and share.

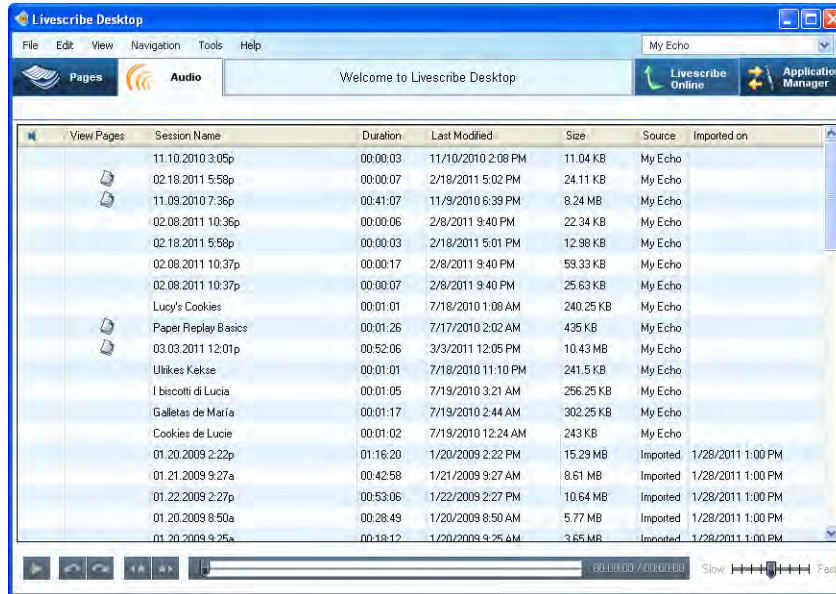

### Download Manager


The Download Manager is for viewing apps you have downloaded from Livescribe Online, including software updates and apps your have purchased from the Livescribe Online Store.

Clicking this tab launches your web browser, which connects to Livescribe on the internet and displays the Download Manager. You will not see Download Manager within an Echo Desktop window.

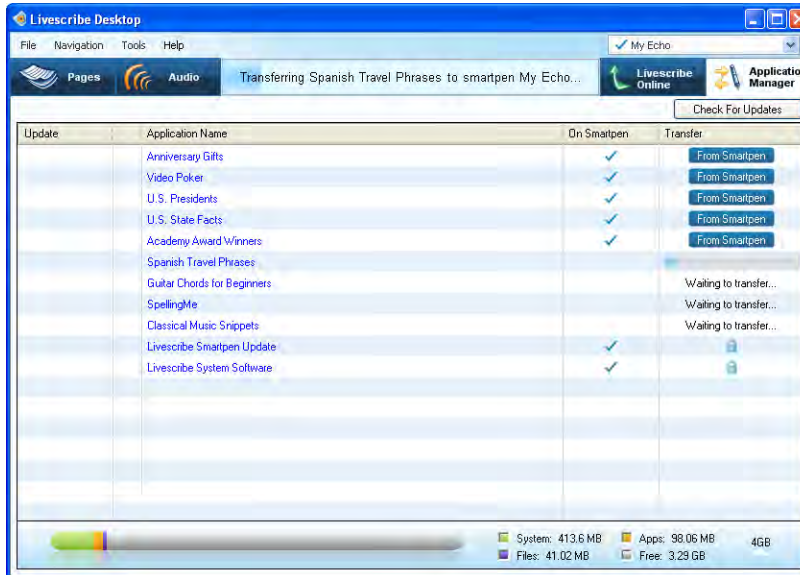

### Apps Manager

The Apps Manager is for viewing, installing, and uninstalling smartpen apps you have downloaded.

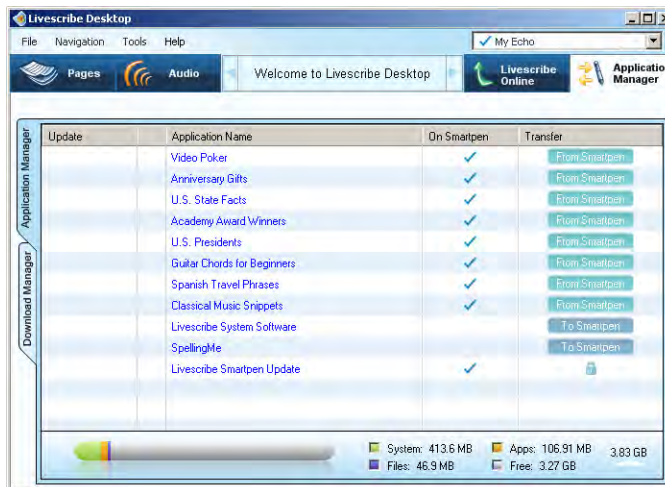


## Central Viewing Pane

The Central Viewing Pane is the central area where you view and interact with your notes. For example, this pane is where you view your pencasts.

## Navigation Pane

Echo Desktop provides a Navigation Pane on the left side of the Central Viewing Pane. The Navigation Pane lists items that you can navigate to or view in more detail in the Central Viewing Pane. For example, clicking one of the notebooks in the Navigation Pane opens the notebook and shows all of its pages as thumbnails.

Using the Navigation Pane, you can view your library of notebooks, view pages that contain search results, and view active audio recordings and optionally upload them to your personal space on livescribe.com. The Navigation Pane uses tabs to organize its content.

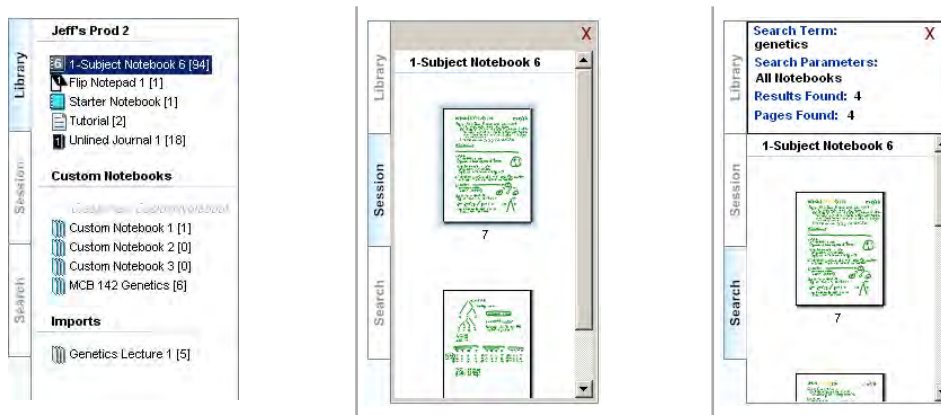

## Library Tab

This tab shows your entire library of notebooks, journals, and other paper products you have used with your smartpen. Use the Library tab to select which notebook you want to view in the Central Viewing Pane. The Library Tab lists your physical notebooks, custom notebooks, and notebooks you have imported as pencasts.

## Sessions Tab

This tab shows all of the pages of the audio recording currently playing. This tab appears in the Navigation Pane when you play back an audio recording, either by clicking active ink on page, or by selecting an audio recording in Audio View and viewing its pages Single-Page View.

### Search Tab

 
This tab shows the pages found using the Search feature. This tab shows the pages found with the search text highlighted in yellow. This tab appears in the Navigation Pane the first time you initiate a search. The tab's content refreshes during a search and holds one set of search results at a time. The results remain within the Search tab until you either initiate another search or close the tab.

## ECHO DESKTOP MENUS AND TOOLBARS

Echo Desktop provides menus, toolbars, and controls you can use to view and manage notes and audio from your smartpen.

### MENU

The **Menu** provides different menu items based on the view you choose. Use these menus to access features of Echo Desktop.



### MAIN TOOLBAR

The **Main Toolbar** is located under the Menu. This toolbar provides buttons for the Main views of Echo Desktop. It also provides a messaging area, search field, and pencast/upload features.



### PAGING CONTROLS

**Paging Controls** are for paging through notebooks, zooming pages, and toggling between Single-Page and Thumbnail Views.



### AUDIO CONTROLS

**Audio Controls** are located at the bottom of the Echo Desktop screen. This toolbar is for controlling playback of recorded audio.



### MEMORY BAR

The **Memory Bar** in Apps Manager shows the storage state of your smartpen.







## VIEWING NOTES

With Echo Desktop, you can view notes transferred from your smartpen.

### VIEWING PAGE THUMBNAIls



In **Thumbnail View**, you can see all your pages at once as thumbnails. When you find the notes you want to study, you can open them to full size. Optionally, click on green active ink to hear the audio captured with your notes.

1. Click the **Pages View** button  in the Main Toolbar to go to Pages View.
2. Click the **Library** tab of the Navigation Pane and click the notebook you want to view.
3. Click the Thumbnails button  in Paging Controls, or choose **View > Thumbnails** from the Main Toolbar.
4. Click the thumbnail to select it.

Use Control-click to select multiple, non-sequential thumbnails.

Use Shift-click to select a sequential set of thumbnails.


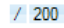



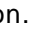
### VIEWING A SINGLE PAGE

1. Click the Pages View button  in the Main Toolbar to go to Pages View.
2. Click the Library tab of the Navigation Pane and click the notebook you want to view.
3. In the Central Viewing Pane, click a thumbnail of the page to view.
4. From the Central Viewing Pane, view the page in Single-Page View using one of these methods:
  - Double-click the thumbnail of the page you want to view.
  - Single-click the thumbnail of the page you want to view and click the Single-Page  button in Paging Controls.
  - Single-click the thumbnail of the page you want to view and choose **View > Single Page** from the Main Toolbar.

When you view a single page, the page automatically zooms to fit in the current pane.

## PAGING THROUGH A LIVESCRIBE NOTEBOOK

In Echo Desktop, you can page through your notebooks and view either single pages or thumbnails. Paging only shows pages that contain content and skips empty pages.











- Click the **Pages View** button  in the Main Toolbar to go to Pages View. Then, use one of the following methods:
- Type a page number into the page field  and press the **Enter** key to go to a specific page. Blank pages are not valid.
- Using Paging Controls, click the next page  button or previous page  button. Or, choose **View > Next Page** or **View > Previous Page** from the Main Toolbar.
- Using Paging Controls bottom of the Central Viewing Pane, click the first page  button or last page  button. Or, choose **View > First Page** or **View > Last Page** from the Main Toolbar.

## USING PAGING CONTROLS

Echo Desktop provides paging controls. You can use these controls to page through your Livescribe notebook, go to specific pages, activate Thumbnail or Single-Page View, and zoom into or out of a viewed page.




This toolbar has the following buttons and controls:

	First page: Shows the first page in your notebook that contains notes.
	Last page: Shows the last page in your notebook that contains notes.
	Next page: Shows the next page in your notebook that contains notes.
	Previous page: Shows the previous page in your notebook that contains notes.
	Current page number: Shows the currently shown page. You can also type a page number in the number field and press the <b>Enter</b> key to go to that page.
	Thumbnail View: Switches Pages View to view pages as thumbnails.
	Single-Page View: Switches Pages View to the currently selected thumbnail as a single page.
	Zoom slider: Zooms in or out of the current Pages View by moving the slider control.
	Zoom out: Zooms out the current Pages View.
	Zoom in: Zooms in the current Pages View.

## VIEWING PAGES LINKED TO AN AUDIO RECORDING




From Audio View, you can view the pages that have linked audio.

- Click the **View Page** button  next to the audio recording you want to view.
- Choose the audio recording from the list and choose **File > View Pages** in the Menu.

Either of these actions switches your view to Pages View and open the Sessions tab of the Navigation Pane, showing all pages in this audio recording. The first page of the audio recording shows in the Central Viewing Pane and the audio recording plays back.


## ZOOMING PAGES


You can zoom into or out of a selected page or thumbnails.

1. Open the page in Single-Page View or in Thumbnail View.
2. Use one of the following methods to zoom:
  - Click the zoom buttons in Paging Controls to zoom in  or zoom out .
  - Drag the zoom slider  in Paging Controls to zoom in or out of the page.
  - Choose **View > Zoom In** or **Zoom Out** from the Main Toolbar.

## REPOSITIONING A ZOOMED PAGE

When you zoom a page to a size that is larger than the Central Viewing Pane, Echo Desktop crops some of the page. You may want to reposition the page to view its content.

- Reposition using the vertical and horizontal scroll bars in the pane to move the page to your preferred location in the pane.
- Reposition by hand using the open hand cursor . This cursor replaces the standard arrow cursor when the page is zoomed to be larger than the current Central Viewing Pane. The open hand cursor appears when you move over empty areas on the page.
- To move a page, click-and-drag the page to the desired position.

When you move the cursor over active ink, the cursor changes to a pointing hand  to identify the active ink.

## CONVERTING HANDWRITTEN NOTES TO TEXT


You can use MyScript® for Livescribe to convert your handwritten notes to digital text. MyScript for Livescribe is a desktop app from Vision Objects® that is sold separately (visit [www.visionobjects.com](http://www.visionobjects.com)).

After you have purchased and installed MyScript for Livescribe, you can export your pages to it using the sharing dialog of Echo Desktop using the With MyScript sharing option.

## COPYING AND PASTING PAGES TO OTHER APPS

You can copy your pages to the Clipboard of your operating system (such as Windows® Clipboard) and paste them into other apps like Microsoft Word®.

Echo Desktop saves the content you copy as an image to the Clipboard.

1. Click the **Pages View** button  in the Main Toolbar to go to Pages View.
2. Choose a page.  
For example, click the page in Thumbnail View or double-click to open it in Single-Page View.
3. Choose **Edit > Copy Page > With Background** or **Without Background**.  
If you choose to include the background, the copied image includes anything shown on the page of the actual notebook.  
For example, an image from a college-ruled notebook contains ruled lines.
4. Open a document in any app that handles images.  
For example, choose Micro-soft Word, most email programs, Microsoft® Paint, and so on.
5. Use the app's Paste feature to paste the copied image into the document.

## SEARCHING NOTES

With Echo Desktop, you can search notes transferred from your smartpen.

### SEARCHING PAGES

You can search notes written in cursive, print, or a combination. Search accuracy depends on the neat-ness and consistency of your handwriting. The Search command can locate whole words. Your search text can be part of a word, a whole word, or consecutive words.

1. Type search text into the search text box  in the Main Toolbar.

By default, this search method finds whole words in the currently-selected notebook or journal. For example, entering “top” would find instances of “top” only. Search would not find other words that contain the letters “top”, like “topographic”, and “mountaintop”. Search is not case sensitive, so if you search for “Top”, it returns the same results as “top” and “TOP”.

2. Press the **Enter** key to initiate the search.

### ADVANCED SEARCHING

1. Click the **Search** button  in the search text box.

Echo Desktop shows the advanced search dialog:

2. Type the search text into the Search dialog. By default, this search method finds whole words in the current notebook or journal.

To search for partial words, uncheck the **Match Whole Word** checkbox. For partial word searches, entering “top” would find “top” and other words that contain the search string like “topographic”, and “mountaintop”. Because Search is not case sensitive, “Top”, “top”, and “TOP” return the same results.

3. Choose which notebooks to search: the currently-open notebook, all notebooks, or selected notebooks that you have checked.
4. Click **Search** to initiate the search.

### VIEWING SEARCH RESULTS

When you perform a search in the current notebook or journal, Echo Desktop searches through all its pages.

When Search finds one or more hits (text matches), it shows the results in the Search tab in the Navigation Pane. Echo Desktop shows thumbnails of the pages where it found the search text. The results remain within the Search tab until you

either initiate another search or close the tab. The Search tab holds one set of search results at a time.


To view one of the search result pages, click on its thumbnail in the Search tab. This opens the page in Single-Page View in the Central Viewing Pane with the search hits highlighted yellow.

## PLAYING BACK AUDIO

With Echo Desktop, you can play back audio transferred from your smartpen.



### BROWSING AUDIO RECORDINGS

To view a list of all audio recordings:

- Click the **Audio View** button , or choose **Navigation > Audio** from the Menu. This opens the Audio View and brings up a list of all audio recordings.

When you view audio recordings as a list, Echo Desktop shows the audio recordings as a series of rows with named columns.


### AUDIO RECORDING COLUMNS

View List Column	Description
Audio Indicator 	Identifies which file, if any, is currently playing audio. If no file is playing, the icon does not appear.
View in Pages button 	View pages linked to an audio recording. You may have audio recordings that do not have this icon because they are paperless sessions.
Audio Name	By default, this name is the audio recording's creation date and time.
Duration	The length of the audio recording
Last Modified	The timestamp when audio is recorded
Size	The size of the audio file in MB or KB
Source	Shows the name of the source smartpen for the audio recording or <b>Desktop Only</b> . <b>Desktop Only</b> indicates that the source smartpen is removed from Echo Desktop, but its content is preserved in Echo Desktop.

### PLAYING AUDIO RECORDINGS IN AUDIO VIEW

With Echo Desktop, you can play audio while viewing the audio recording's pages, or you can play the audio by itself in the Audio View.

- Go to Audio View.
- Double-click the audio recording in the list.

The left-most column shows the audio play-ing  icon when the audio recording begins to play.


## PLAYING AUDIO WHILE VIEWING PAGES

With Echo Desktop, you can play an audio recording while viewing its linked pages Single-Page View. You can also play an audio recording by itself in Audio View.

If you play back an audio recording that spans multiple pages, Echo Desktop automatically moves to successive pages in real time synchronization with the playing audio. This automatic paging continues until you manually switch pages using Paging Controls. From then on, the paging is under manual control only until play back another audio recording.

When viewing a page Single-Page View, click on the active ink (shown as green) on the page.

This starts the audio playback. This is analogous to tapping your notes in a notebook to play back the audio recording. Playing an audio recording also opens the Sessions tab in the Navigation Pane.

When you mouse over ink that is active, the mouse cursor changes to a pointing hand cursor  to help you identify where you can click to begin audio playback.

If you added notes while playing back an audio recording, Echo Desktop shows this ink as blue, by default. You can click on this ink to play back the audio at the point where you added the notes.





You can change the color of active and inactive ink by setting a preference.

## USING AUDIO CONTROLS

 
Echo Desktop shows Audio Controls at the bottom of its screen. You can use these controls to start, pause, stop, and control audio playback. Echo Desktop disables these controls unless you select the audio recording.



This toolbar has the following buttons and controls:

	Begin playing audio
	Pause audio
	Jump back (in 10 second increments)
	Jump forward (in 10 second increments)





Audio timeline control: Indicates the relative position of the currently playing audio, within the context of the entire audio file.

This control also shows the current elapsed time position of the audio and the total length of the audio file.

You can also use this control to reposition the audio playback. As you listen to an audio recording and view its pages, you can move the slider to move forward or backward in the audio recording.



Jump to previous bookmark




Jump to next bookmark



Playback speed control: Increases or decreases the speed of the playing audio.

## SCRUBBING AN AUDIO RECORDING

Single-Page View, while you listen to an audio recording and view its pages, move the audio timeline slider  to reposition the audio playback. When you move the slider and audio is playing, the audio and its active ink move to the corresponding timeline position. This process is scrubbing the audio. You can use this feature to move forward or backward to a specific area of your audio recording and see how it corresponds to your written notes.

## RENAMING AN AUDIO RECORDING IN ECHO DESKTOP

By default, your smartpen names each audio recording using its creation date and time. For example, Echo Desktop would name an audio recording recorded on March 7, 2008 at 12:56 in the afternoon as 03.07.2008 12:56p. In Audio View, you can rename your audio recordings.

1. Click the **Audio View** button , or choose **Navigation > Audio** from the Menu.

This opens the Audio View and brings up a list of all audio recordings.


2. Click the audio recording you want to rename.
3. Choose **Edit > Rename** from the Menu.
4. Type a new name and click **OK**.

## PRINTING

With Echo Desktop, you can print notes transferred from your smartpen. You can also print your own Livescribe Dot Paper notepads.


### PRINTING A SINGLE PAGE

You can print pages from your Livescribe Dot Paper. Although active ink appears as green in the Central Viewing Pane, Echo Desktop prints it in black, just like non-active ink. Your printed page does not interact with your smartpen.

1. View the page as a single page, or choose the thumbnail of the page.
2. In the Menu, choose **File > Print**. On the print dialog, choose a printer and click the Print  button.

By default, the page prints showing the page background. To print the page without the background, uncheck the **Print Page Background** checkbox. If you choose to include the background, the printed pages include anything shown on the pages of the actual notebook. For example, an image from a college-ruled notebook contains ruled lines.

### PRINTING MULTIPLE PAGES

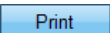1. View pages as thumbnails.
2. Use Control-click to select multiple, non-sequential thumbnails. Use Shift-click to select a sequential set of thumbnails.
3. In the Menu, choose **File > Print**. On the print dialog, choose a printer and click the Print  button.

By default, the page prints showing the page background. To print the page without the background, uncheck the **Print Page Background** checkbox. If you choose to include the background, the printed pages includes anything shown on the pages of the actual notebook. For example, the college-ruled notebook the printed pages contains ruled lines.

### PRINTING YOUR OWN NOTEPADS

Using Echo Desktop, you can print your own notepads using a qualified color laser printer that can print 600 dpi or greater.

### TESTING YOUR PRINTER

1. Click the **Pages View** button  in the Main Toolbar to go to Pages View.

2. Select a notebook on the left to activate the **Tools** menu option and choose **Tools > Printable Notepads > Test Page (1 page)**.

Echo Desktop shows the **Print** dialog and automatically selects the first qualified printer you have in your printer list.

3. Click **Print**.
4. When the test page is finished printing, follow the instructions printed on the page using your smartpen. The instructions ask you to write some words in each of four areas and then dock your smartpen to your computer.
5. Next, in Echo Desktop, examine the test page after it has transferred from your smartpen. If all of your words transfer successfully, then your printer can print Livescribe Dot paper and you can begin printing your own notepads.

## PRINTING A NOTEPAD

1. Choose **Tools > Printable Notepads** and select a notepad to print such as **Notepad 1 (25 pages)**.
2. In the Print dialog, specify a range of pages to print or accept the default. Click **Print**.

Echo Desktop prints a notepad. You can use the notepad just like any other Livescribe Dot paper. When you dock your smartpen after writing on this notepad, your content transfers like it does with pre-printed Livescribe note-books and journals.

## ORGANIZING NOTES AND AUDIO

With Echo Desktop, you can organize notes and audio transferred from your smartpen.

### CREATING A CUSTOM NOTEBOOK

You can create Custom Notebooks in Echo Desktop to organize and better manage your pages.

You can add pages from any notebook, and drag them to arrange them in any order within a Custom Notebook. Pages in a Custom Notebook work like other notebook pages. For example, you can view, zoom, search, and print pages.

**Note:** A Custom Notebook is similar to a music playlist, or a digital photo album, but instead of pointing to songs or pictures, it points (links) to pages in their source notebooks.

1. Choose **File > Custom Notebooks > Create**.
2. In the Notebook Name dialog, enter a name for your custom notebook and click **OK**.

Echo Desktop creates an empty custom notebook and places it in the Navigation pane under the heading **Custom Notebooks**.

3. To add pages to a custom notebook, select one or more pages in Page View and drag and drop them onto the custom notebook in the Navigation pane.

### ADDING CUSTOM NOTEBOOK PAGES BY DRAGGING AND DROPPING

You can add pages to a Custom Notebook by dragging and dropping page.

1. Navigate to a notebook in your library and select one or more pages.
2. Drag and drop the page(s) to the Custom Notebook name in the Library Pane.

The pages you selected appear in the Custom Notebook.

### ADDING CUSTOM NOTEBOOK PAGES WITH A MENU COMMAND

1. Navigate to a notebook in your library and select one or more pages.
2. Choose **File > Custom Notebooks > Add pages to**
3. In the **Select Notebooks** dialog, check the target Custom Notebook name, then click **Done**.

The pages you selected appear in the Custom Notebook.

You can also choose to create a new Custom Notebook from this dialog by clicking **Create**. After the new notebook is created, check the new notebook name in the **Select Notebook** area and click **Done** to add the selected pages.

## REORGANIZING CUSTOM NOTEBOOK PAGES

You can organize the pages in a Custom Notebook by simply dragging, moving, and dropping them into their new order.

1. Open a Custom Notebook in Page View.
2. Select a page to be moved.
3. Drag, move, and drop the page into its new location. The pages are automatically renumbered in the Echo Desktop view.

You can view information about the source of a page by hovering over it with a mouse cursor. Source information includes the smartpen linked to the page, its notebook, and source page number.

## DELETING A CUSTOM NOTEBOOK

You can delete a Custom Notebook or pages from a Custom Notebook. Deleting a Custom Notebook or pages from a Custom Notebook *does not* affect the source notebooks or their pages.

1. Select a Custom Notebook in the Library tab.
2. Choose **File > Delete Notebook**
3. At the prompt, click **Yes** to confirm the deletion.

## DELETING A CUSTOM NOTEBOOK PAGE

1. Open a Custom Notebook in Page View.
2. Select one or more page to be deleted.
3. Choose **File > Delete Page(s)**
4. At the prompt, click **Yes** to confirm the deletion.

## MANAGING STORAGE FOR ECHO DESKTOP AND YOUR SMARTPEN

With Echo Desktop, you can manage its storage of notes and audio, and the storage on your smartpen.

### FREEING SPACE ON YOUR SMARTPEN

Your smartpen uses flash storage to your notes and audio, as well as apps and system files. Recorded audio requires the most space. If you are running out of space on your smartpen, then can delete these audio recordings. There are several ways to free space on your smartpen:

- Select and remove one or more audio recordings using Echo Desktop.
- Archive any Livescribe notebook or other paper product you are no longer using.
- Remove apps you are not using.
- Use the Main Menu on your smartpen to select and delete audio recordings.

Use the Memory Bar to view the storage usage of your smartpen. The Memory Bar is located at the bottom of the Applications Manager.



This bar shows:

- Total storage capacity of your smartpen (both used and free)
- Storage used by system software (shown in green)
- Storage used by apps (shown in orange)
- Storage used by content you created (shown in purple)
- Available storage (shown in gray)

### REMOVING AUDIO FROM YOUR SMARTPEN

You can remove audio from your smartpen with Echo Desktop.

Removing audio from your smartpen frees storage. Because the audio is gone, any notes linked to the audio does not interact with your smartpen. That is, if you tap on notes that were linked to the audio, the audio no longer plays back.

1. Click the **Audio View** button  , or choose **Navigation > Audio** from the Menu.

This opens the Audio View and brings up a list of all audio recordings.

2. Single-click or multi-select the audio recordings you want to delete.
3. Choose **File > Remove Audio from Smartpen**.
4. To confirm the removal, click **OK**, otherwise click **Cancel**.

To remove all audio from your smartpen for a specific Livescribe Dot Paper product, use the Archive feature.

You can also delete an audio recording from Echo Desktop.

### DELETING AUDIO FROM ECHO DESKTOP

You can delete audio recordings from Echo Desktop. Deleting audio from Echo Desktop *does not affect your smartpen*:

1. Click the **Audio View** button  , or choose **Navigation > Audio** from the Menu.

This opens the Audio View and brings up a list of all audio.

2. Single-click or multi-select the audio recording you wish to delete.
3. Choose **File> Delete Audio from Echo Desktop**.
4. To confirm the deletion, click **OK**, otherwise click **Cancel**.

You can also remove audio recordings from your smartpen.

### REMOVING A SMARTPEN FROM ECHO DESKTOP

You can remove your entire smartpen and its contents from Echo Desktop. Echo Desktop does not recognize your smartpen after this operation.

**Note:** Removing a smartpen from Echo Desktop does not affect the content of the smartpen.

1. Choose **Tools > Smartpen > Remove**.
2. At the prompt, choose to **Delete** or **Save**.

If you choose **Delete**, all notes and audio recordings from this smartpen are removed and are no longer available in Echo Desktop.

If you choose **Save**, all notes and audio recordings from the removed smartpen are saved in the as archived notebooks. You can also access the removed smartpen’s audio from the Audio View.

3. In the dialog, **Confirm** or **Cancel** the smartpen removal.

If you previously archived notebooks that were on the removed smartpen, those archived notebooks are not removed from Echo Desktop.

## BACKING UP YOUR ECHO DESKTOP CONTENT FOLDER

Livescribe recommends that you regularly back up Echo Desktop files just like other important files on your computer.

Backing up your files protects you from losing important files in case your computer becomes damaged, lost, or stolen. If you later need to restore your Echo Desktop files, contact Livescribe Customer Service for instructions.

You can find all files linked to Echo Desktop in your Livescribe folder. This folder contains your notes and audio, as well as important information about your smartpen and Echo Desktop. By default, Echo Desktop creates the Livescribe folder in these locations:

For Windows XP:

```
C:\Documents and Settings\username\Local Settings\Application Data\Livescribe
```

**Note:** By default, Windows hides the Local Settings folder. Refer to your Windows documentation on how to enable the “show hidden files and folders” option for your Documents and Settings folder.

For Vista and Windows 7:

```
C:\Users\username\AppData\Local\Livescribe
```

1. Quit Echo Desktop.
2. Locate your Livescribe folder.
3. Copy the folder to a backup device, such as a CD, DVD, or external drive.

## COPYING SMARTPEN CONTENT TO MULTIPLE COMPUTERS

You can copy your smartpen content to any computer that has Echo Desktop.



If you choose to transfer content to multiple computers, be sure to dock the smartpen and transfer your data to each computer on a regular basis. Also, every time you delete data from Echo Desktop or archive a notebook, be sure to do the same operations on your other computers.

1. Dock the smartpen to the other computer. Echo Desktop presents a dialog asking if you want to copy your smartpen contents to this computer.
2. To copy the smartpen contents to this computer, click the **Connect and Transfer** button. Echo Desktop prompts you to name the smartpen (the first time only) and automatically copies the smartpen content to Echo Desktop. To charge the smartpen through the computer's USB port without copying your data, click the **Charge Only** button.

## ARCHIVING LIVESCRIBE NOTEBOOKS ON WINDOWS

When you have finished using a Livescribe notebook or other paper product, you should archive it in Echo Desktop.


### ARCHIVING LIVESCRIBE NOTEBOOKS

Archiving a Livescribe notebook does the following:

- Frees up storage space on your smartpen
- Enables you to use another Livescribe notebook that has the same dot pattern as the one you archived. Livescribe Dot Paper products with the same dot pattern have the same name.
- Moves your notes and audio for a Livescribe notebook or other paper product into an Archived Notebooks folder in the Library Pane of Echo Desktop. Your notes and audio remain interactive in Echo Desktop, just like non-archived Livescribe notebooks.
- Deletes your notes (ink data) and audio from your smartpen. Because of this, your smartpen no longer interacts with the physical Livescribe paper that you archived. That is, when you tap the notes in your archived physical notebook, they do not play back any audio.

**Important:** Do not archive a notebook unless you are finished using the physical notebook and are ready to set it aside. After you archive a notebook, do not go back to its physical notebook and start writing on it again, unless you have unused pages and want to treat them as a part of a new notebook. For example, you could archive a notebook that is partially completed, and then use the remaining pages as a second notebook.

If you are using multiple computers to manage your smartpen data, be sure to archive your notebooks on all of these computers.

1. Update your smartpen software to Version 1.2 or later. Prior versions do not support this feature. To update your software, choose **Help > Check for Updates** in the Menu.
2. Click the **Pages View** button  in the Main Toolbar to go to Pages View.
3. Click the **Library** tab of the Navigation Pane and click the notebook you want to archive.
4. Choose **File > Archive Notebook**.

5. When prompted, click **OK** to confirm the archive operation, otherwise click **Cancel**.
6. When prompted, click **Archive this notebook**, otherwise click **Cancel**.
7. Echo Desktop confirms your notebook is archived, and you see the archived notebook in your **Library** tab in an **Archived Notebooks** group.  
  
If you are using multiple computers, be sure to archive the notebook on each of them.

### DELETING ARCHIVED NOTEBOOKS FROM ECHO DESKTOP

1. Select an Archived Notebook in the Library tab.
2. Choose **File > Delete Notebook**
3. At the prompt, choose if you want to also delete the notebook's audio.
4. Click **Yes** to confirm the deletion.

Deleting archived content from Echo Desktop removes the content permanently. You cannot recover the archived content by docking your smartpen because the process of archiving the content removed it from your smartpen.

### DELETING ARCHIVED PAGES FROM ECHO DESKTOP

1. Open an Archived Notebook in Page View.
2. Select one or more page to be deleted.
3. Choose **File > Delete Page(s)**
4. At the prompt, choose if you want to also delete the page's audio.
5. At the prompt, click **Yes** to confirm the deletion.

Deleting archived content from Echo Desktop removes the content permanently. You cannot recover the archived content by docking your smartpen because the process of archiving the content removed it from your smartpen.

## MANAGING YOUR SMARTPEN

With Echo Desktop, you can manage properties of your smartpen, including registration, naming, and Paper Replay password.

### REGISTERING YOUR SMARTPEN

It is important that you register your smartpen. Registering your smartpen:

- Creates your personal MyLivescribe account with 500MB of free storage.
- Allows you to broadcast or privately share your notes and audio online.
- Enables you to purchase and install new smartpen apps from our online software store.
- Qualifies you to install free smartpen apps after registering!
- Provides enhanced security for your smartpen data.
- Gives you access to special promotional offers.

1. When you dock your smartpen for the first time, Echo Desktop prompts you to register with Livescribe. When prompted, click **Next** to register. Or, click **Remind Me Later** to register later. Echo Desktop reminds you the next time you dock the smartpen.

You can also manually start the registration process by clicking the Livescribe

Online  button on the Main Toolbar, or choose **Tools > Smartpen > Register**.

2. On the registration dialog, choose either **Create a new account** and click **Next**, or if you already have an account with Livescribe, choose **Use my existing account** and enter your email address and password.

If you forgot your password, click the **Forgot Password** button, and Livescribe sends you instructions on how to reset it.

When creating your user name and password, follow these guidelines:

- Your user name is your email address. It cannot be more than 128 characters and is not case sensitive. For example, MyName@MyCompany.com and myname@mycompany.com are the same.
  - Your password must be at least four characters long and no more than 64 characters. Your password is case sensitive, and cannot start with a space or contain characters that are not printable. Your password and user name cannot be the same.
3. On the registration information dialog, fill in the required fields and click **Continue** to complete the registration process. When the registration process

is complete, Echo Desktop opens your personal MyLivescribe space on <http://www.livescribe.com>.

## RENAMING A SMARTPEN ON WINDOWS

You can rename a smartpen in Echo Desktop.

1. Launch Echo Desktop
2. Dock the smartpen to be renamed.
3. If it is not already selected, use the smartpen selector drop down to choose the smartpen you want to rename.
4. Choose **Tools > Smartpen > Rename**.
5. Type a new name and click **OK**.

## REMOVING A PAPER REPLAY PASSWORD

On your smartpen, you can create a password for your audio recordings. Setting a password can prevent others from listening to your recorded audio on your smartpen. When Paper Replay is protected, audio play back is prevented until the password is entered on your smartpen.

You can remove a Paper Replay Password from your smartpen using your smartpen's Main Menu, or using Echo Desktop.

To remove a password using Echo Desktop:

1. Launch Echo Desktop.
2. Dock your smartpen.
3. Choose **Tools > Smartpen > Clear Paper Replay Password**.
4. Confirm the password is cleared by playing back a Paper Replay audio recording on your smartpen. If the password is cleared, you can play back audio recordings without writing the password first.

\Paper Replay Password does not prevent playback from Echo Desktop, only from your smartpen.

You cannot set your Paper Replay Password using Echo Desktop. You must set it from your smartpen's Main Menu.

## MANAGING SMARTPEN SOFTWARE AND APPS ON WINDOWS

You can install and update smartpen software and apps using Echo Desktop.

### INSTALLING SMARTPEN SOFTWARE UPDATES

Livescribe periodically updates smartpen apps (such as Paper Replay) and underlying smartpen firmware. Livescribe also updates this software to support new kinds of Livescribe notebooks and other paper products.

When you dock your smartpen and launch Echo Desktop, it checks for available updates. You can also manually check for updates using Echo Desktop.

**Note:** If you try to use a new Livescribe paper product, and get an error message that it is “not supported”, you need to update your smartpen software.

1. Dock your smartpen.
2. Launch Echo Desktop.

Echo Desktop automatically checks for recent updates.

3. Accept the updates.

Echo Desktop downloads and installs them to your smartpen.

If you choose to postpone transferring updates to your smartpen, you can re-initiate the transfer process by undocking and re-docking your smartpen. Echo Desktop prompts you to transfer available items.

### CHECKING FOR UPDATES MANUALLY

By default, Echo Desktop automatically downloads and installs apps and their updates when you dock a registered smartpen. This feature is called Auto-Install.

You can disable the check for updates feature by changing the Smartpen user setting. At any time, you can manually check for updates to Echo Desktop, smartpen firmware, and apps you have purchased:

1. Choose **Help > Check for Updates** in the Menu.
2. Accept the recommended updates.

## GETTING MORE APPS

Livescribe and other companies offer new apps for your smartpen. You can download these from the Livescribe Online Store.

1. From a web browser, go to [www.livescribe.com/store](http://www.livescribe.com/store) and browse the apps available.


Some apps are free and others are available for purchase. These apps are designed to work like the built-in apps that come with your smartpen.

2. After you download a new app, use Echo Desktop to add it to any smartpen registered to your Livescribe account.


Echo Desktop installs downloaded apps to your smartpen under a new **Applications** menu. This menu is the first menu item underneath the Main Menu and is available after you install your first downloaded app.

## PURCHASING AN APP

Using the Livescribe Online Store, you can purchase and download new apps for your smartpen from Livescribe and other vendors.

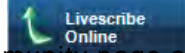1. From Echo Desktop, click the Livescribe Online button  in the Main Toolbar. This connects you to the Livescribe Community page and open your personal space (called MyLivescribe) within the Central Viewing Pane of Echo Desktop.


Alternatively, go to [www.livescribe.com](http://www.livescribe.com) from your web browser and click on the Community tab to go to Community page.

2. Click the **Log In** button  to go to Livescribe account.
3. Click on the **Store** tab. From the store page, browse and purchase apps.
4. Select an app to purchase by clicking its **Add** button. Optionally, look at the apps details page.

From the details page, you can download documentation for the App.

5. Click **Add to Cart** to add the app into your shopping cart. This opens your shopping cart and begins the four-step purchasing process. Click the **Continue to Checkout** button.
6. Add or confirm your billing and shipping information.
7. Confirm your purchase.
8. Place your order. After placing your order, your app is ready for downloading in the **Download Manager** tab.



## DOWNLOADING AN APP

1. After purchasing an App, click the **Download Manager** tab in the Livescribe Online view of Echo Desktop.
2. Click the **Download** button next to the app you want to download to Echo Desktop. From there, you install the app using the **Apps Manager** view.
3. In the Downloads dialog, confirm the apps to install by checking or unchecking the apps available to download.
4. You can view the download progress from that Download Manager view. Once the app is downloaded, click the **Apps Manager** button  to begin the installing the App.

## INSTALLING AN APP



The **Apps Manager** lists all apps that you have downloaded from Livescribe Online. Use the Apps Manager to install these apps to any smartpen registered to you.

To install an App:

1. Dock the smartpen on which you want to install the App.
2. Click the **Apps Manager** button  in the Main Toolbar.  
You see a list of all the apps you have downloaded, including those you have already installed to your smartpens and those waiting to be installed.
3. Click the **To smartpen**  button next to the app to install. This starts the installation process for the smartpen you have docked.
4. The Apps Manager shows the progress of the installation.
5. After installation completes, the Apps Manager indicates the app is installed by showing a checkmark in the On Smartpen column.

## UNINSTALLING AN APP

To uninstall an App:


1. Dock the smartpen on which you want to un-install the App.
2. Click the **Apps Manager** button  in the Main Toolbar.  
You see a list of all the apps you have downloaded, including those you have already installed to your smartpens and those waiting to be installed.
3. Click the **From Smartpen**  button next to the app to un-install. This removes the app from the smartpen you have docked.

To re-install the App. click the **To Smartpen**  button next to the app to install. This starts the installation process for the smartpen you have docked.





## VIEWING INSTALLED APPS AND SOFTWARE

Use the **Apps Manager** to view all apps you have purchased and downloaded from the Livescribe Online Store:

- Click the **Apps Manager**  button in the Main Toolbar. You see a list of all the apps and software you currently own and their status for the currently-selected smartpen.

When you view a list of apps and software in Apps Manager, Echo Desktop shows them as a list of rows with named columns. The table below describes the columns.

Column	Description
App Name	The name of the App
On Smartpen	A checkmark indicates that the app is on your currently-docked smartpen.
Transfer	<p>The <b>To Smartpen</b>  button indicates the app is downloaded to Echo Desktop and can be installed to any smartpen registered to your Livescribe account by clicking this button.</p> <p>The <b>From Smartpen</b>  button indicates the app is installed on your currently-docked smartpen and can be uninstalled by clicking this button.</p>

## GETTING APP INFORMATION


To get information for any App, click on the app name in the Apps Manager. This shows the current version and size of the App.

## USING LIVESCRIBE ONLINE

Livescribe Online is your connection to your Livescribe account and to content shared by the Livescribe community. You can connect to Livescribe Online either from a web browser or directly from within Echo Desktop.

### ABOUT LIVESCRIBE ONLINE


Setting up a Livescribe account creates a personal space for you on Livescribe Online called MyLivescribe. This is a personal area reserved for you. There you can set up your account profile, upload and store content to share with your friends, the community, or anyone on the web.

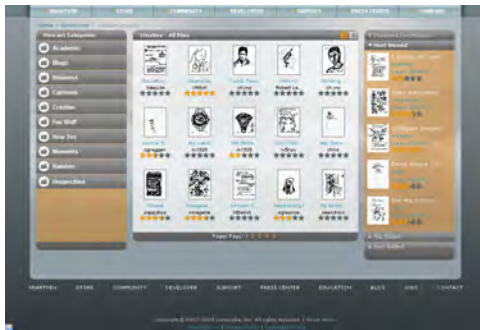

### SENDING CONTENT TO LIVESCRIBE ONLINE

To send pencasts using Livescribe Online, upload a pencast to using the **Upload to Community** sharing option.

After uploading a pencast to Livescribe Online, you can set your **Sharing Preferences** on your **MyLivescribe** account. There are several methods available to share your content.

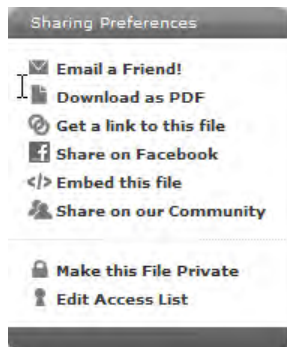

### EMAILING CONTENT TO A FRIEND FROM LIVESCRIBE ONLINE

Choose the **Email a Friend** preference to share content with a friend via email:

1. Select a file. To select a file from the Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. On your MyLivescribe page, click on Email a Friend.
3. Enter your friend's email address in the To field.
4. Optionally, add a message in the Personalize It section.
5. Click **Send**. Your friend receives an email that links him or her to your file on Livescribe Online. If your content is private, your friend must create a Livescribe Online account. Their user-name must be the email address you sent the invitation to.

To select multiple friends to send a file to, just check the box next to each friend's email address in your Address Book before clicking the Send button.

When you send the invitation, Livescribe Online automatically adds your friend to your Contact list for future ease of sharing. As you share more files, your Address Book contact list grows. Use the gray **Edit a Contact** button to add a friend's name or edit an email address. Use the red **Delete a Contact** button to remove an email address from the list.

### DOWNLOAD A PDF DOCUMENT FROM LIVESCRIBE ONLINE

You can use the **Download as PDF** preference to download to your computer your uploaded content in PDF format. You can then share this PDF file with others via email or other means.

1. Select a file. To select a file from the Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. Click on **Download as PDF**. The file is downloaded in PDF format to your computer.

### GET A WEB LINK TO YOUR CONTENT ON LIVESCRIBE ONLINE

Use the **Get a Link to this file** preference to obtain web link to your content that you can paste in a blog or elsewhere.

1. Select a file. To select a file from the Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. Click on Get a link to this file. If the file is on your MyLivescribe page and private, make it public.
3. In the Get a link for this file dialog, highlight the link and copy it to the clipboard.



4. Open your HTML editor for your blog or other web page.
5. Access the HTML edit area and click in the edit field. Make sure you are in HTML edit mode, not Text composition mode.
6. Paste the text.
7. Publish the file.
8. In Livescribe Online, click **Done** to close the dialog window.

## SHARING CONTENT ON FACEBOOK THROUGH LIVESCRIBE ONLINE

Use the **Share on Facebook** preference to embed content into your website, forum, or blog. You can only embed public files.

Files posted to the general Livescribe Online Community are public and available for embedding. If the file you want to embed is on your MyLivescribe page, you must first make it public.

1. Select a file. To select a file from the general Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. Click **Share on Facebook**.
3. Facebook prompts you to log in unless you are already logged in.
4. If you would like to share content by posting to your Facebook page, use the Post to Profile tab. The posting appears on your Facebook Home page.
5. If you would just like to share content by email, use the Send a Message tab. The recipient gets an email with a link that they can use to access the file.

## EMBEDDING CONTENT IN A WEBSITE OR BLOG WITH LIVESCRIBE ONLINE

Use the **Embed this file** preference to embed content into your website, forum, or blog. You can only embed public files.

Files posted to the general Livescribe Online Community are public and available for embedding. If the file you want to embed is on your MyLivescribe page, you must first make it public.

1. Select a file. To select a file from the Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. Click the Embed this file link. If the file is on your MyLivescribe page and private, make it public.
3. In the Embed this file dialog, highlight the HTML code and copy it to the clipboard.



## MANAGING YOUR MYLIVESCRIBE ACCOUNT ON LIVESCRIBE ONLINE

Setting up a Livescribe account creates a personal space for you on Livescribe Online called your MyLivescribe space. This is a personal area reserved for you. There you can set up your account profile, upload and store content to share with your friends, the community, or anyone on the web.

### SETTING UP A MYLIVESCRIBE ACCOUNT

When you register your Livescribe smartpen through Echo Desktop, the registration process prompts you to create a Livescribe account. If you need to, you can also create an account manually without registering (or even owning a Livescribe smartpen).

You can manually set up a Livescribe account either from Echo Desktop or directly from a web browser. To set up a Livescribe account from a web browser:

1. Go to [www.livescribe.com](http://www.livescribe.com) from your web browser and navigate to the Community page by clicking the **Community** tab.
2. Click the **Sign Up** button .
3. Provide a username and password. *The username must be a valid email address.*

When creating your user name and password, follow these guidelines:

- Your user name is your email address. It cannot be greater than 128 characters and is not case sensitive. For example, MyName@MyCompany.com and myname@mycompany.com are the same.
- Your password must be at least four characters long and no longer than 64 characters. Your password is case sensitive, and cannot start with a space or contain characters that are not printable. Your password and user name cannot be the same.

### USING YOUR MYLIVESCRIBE ACCOUNT

When you create a **MyLivescribe** user profile, you receive space to store content.

- Select **Account** in the upper right corner of Livescribe Online.

On your **MyLivescribe** profile page you see a list of sharing options, viewer comments, and how much space you have used and you have available.

### MANAGING YOUR UPLOADED CONTENT ON LIVESCRIBE ONLINE

From your MyLivescribe space, you can manage content in your Livescribe account as described in the following table:

Task	Description
Rename files	Select the filename in the central viewing pane and edit it in place.
Delete files	Click the thumbnail X icon next to the file name to delete it. This does not remove the files from your Echo Desktop App or your Livescribe smartpen, only from your online account.
Choose categories for files	Choose a category in which to place your file by clicking on the category name in the description area and choosing one of the pre-defined categories.
Add/Edit file descriptions	You can add short descriptions of your uploaded files by selecting click to edit... under the Description area and typing a name into the text field. Edit existing descriptions by clicking on the existing description and typing into the text field.

## MANAGING YOUR ACCOUNT DETAILS ON LIVESCRIBE ONLINE

From your MyLivescribe space, you can manage your Livescribe account and perform other administrative tasks described in the following table:

Task	Description
Change your user name	Select the name and edit it in place in the upper left area under the My Account section.
Unlink your Livescribe smartpen from your account	Click on the unlink option under My Pens in the lower left area under the My Account section.
Change your password	Go to the Edit Login tab in the central Details section and click Change Your Password.
Upload an Avatar Photo	Go to the Profile tab in the central Details section and click Upload an Avatar Photo. You may need to log in using a web browser to see this option.
Change your contact and personal information	Go to the Profile tab in the central Details section to edit your contact information and optionally details about you.
Subscribe or unsubscribe to Livescribe news and offers	Check or uncheck the option to receive news and offers about Livescribe and related products.

## VIEWING LIVESCRIBE ONLINE COMMUNITY CONTENT

In the Livescribe Community, you can see what others are doing with their Livescribe smartpens and post your own creations for others to rate and comment on.

The Community page has several sections:

Featured Files	Livescribe randomly chooses files to feature on the front page of the Community area.
Featured Contributors	Lists members of the Livescribe Community who provide the highest-rated submissions. Click on a Featured Contributor to go to their MyLivescribe profile.
Top Rated	Shows the top-rated content in the Livescribe Community.
Most Viewed	Shows visitors which content has been viewed the most.

## VISITING THE LIVESCRIBE ONLINE STORE

At the Livescribe Online Store - [www.livescribe.com/store](http://www.livescribe.com/store) - you can purchase additional smartpens, paper products, Apps, and more. At checkout, you need to log in to your account, or create an account if you have not already. You can access the Livescribe Store either from a web browser or directly from Echo Desktop via the Livescribe Online view by clicking Livescribe Store.





## CONNECTING TO LIVESCRIBE ONLINE FROM WINDOWS


Livescribe Online is your connection to your Livescribe account and to content shared by the Livescribe community.

You can connect to Livescribe Online either from a web browser or directly from within Echo Desktop.

1. From Echo Desktop, click the **Livescribe Online** button  in the Main Toolbar.

This connects you to the Livescribe Community page and open your personal space (called MyLivescribe) within the Central Viewing Pane of Echo Desktop.

2. Alternatively, go to [www.livescribe.com](http://www.livescribe.com) from your web browser and click on the

**Community** tab to go to Community page. From there, click the **Log In** button  to go to your **MyLivescribe** space.

# Echo Desktop for Mac User Guide



## ABOUT ECHO DESKTOP FOR MAC

Echo Desktop is software that runs on your computer to view and listen to the content you create and capture using your Smartpen.

### ABOUT ECHO DESKTOP


With Echo Desktop, you can view your notes, listen to your recorded audio, manage apps, and more.

Echo Desktop is also a portal to Livescribe Online, where you can upload and share content, purchase new apps and paper products, and connect to the smartpen user community. Using Echo Desktop, you can:

- Save and search notes, and play back audio recordings from your computer.
- Search your handwritten notes for keywords.
- Organize and manage your notes.
- Export and share your notes and audio recordings.
- Upload notes and audio to your MyLivescribe account.

### ECHO DESKTOP COMPONENTS

Finding your way around the Echo Desktop environment is easy and consistent. Use the main components shown below to view, listen to, and manage your notes and audio recordings.

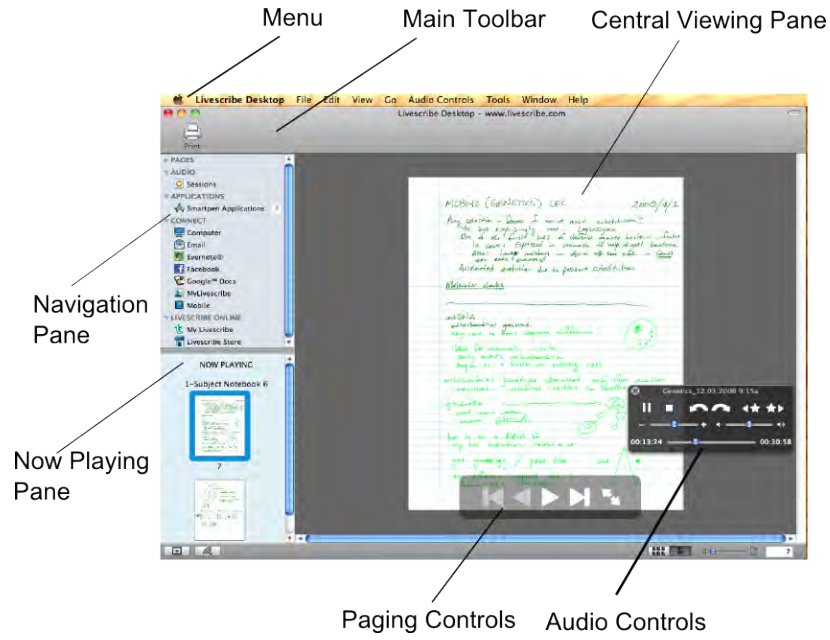

## INSTALLING ECHO DESKTOP ON A MAC

You can install Echo Desktop on one or more computers.

### SYSTEM REQUIREMENTS

Before installing Echo Desktop, ensure your computer meets or exceeds the system requirements.

Echo Desktop requires:

- Intel-based Mac with Mac OS® X 10.5.5 or later, including 10.6
- 600MHz CPU or higher
- 300 MB of free disk space
- USB 2.0 port
- Internet connection for software download

### INSTALLING ECHO DESKTOP FOR THE FIRST TIME

To install Echo Desktop for the first time:

1. Go to the Livescribe web site ([www.livescribe.com](http://www.livescribe.com)), and click on the **Save and Search** button on the bottom of the page.
2. On the Save and Search page, click on the **Mac OS X** button to start downloading. The download process installs the disk image file (.dmg) and mounts a virtual disk.
3. During the download process, Livescribe shows the Livescribe Software license agreement. Accept the agreement to continue the process.
4. Within the disk image, drag and drop the Echo Desktop app to the **Apps** folder. This automatically copies Echo Desktop.
5. Launch Echo Desktop.
6. Dock your smartpen. This copies content from your smartpen to Echo Desktop.
7. When prompted, register your smartpen. If you already have an account, use the same log in credentials. Otherwise, create a new account.

You may want to dock your smartpen overnight if it has a large amount of data on it, as it may take an hour or so to transfer the data the first time you dock.

## AUTHORIZING ECHO DESKTOP

As a Livescribe user, all your Livescribe tools link to each other using the same email address and password. This means that your smartpen registration, your Livescribe Online account, and your installations of Echo Desktop, all identify themselves to each other using the *same email address and password*.

When you use Echo Desktop on a computer for the first time, Echo Desktop prompts you to authorize it. Log into your Livescribe Online account and Echo Desktop is authorized for (or linked to) your account.

You can use Echo Desktop on as many computers as you like, and you can use as many smartpens as you like. Just ensure that when you authorize Echo Desktop and register your smartpens, you use the same email address and password as your Livescribe Online account.

## SWITCHING FROM WINDOWS TO MAC

If you have been using your Echo Desktop for Windows, and you want to switch to Echo Desktop for Mac, dock your smartpen to your Macintosh after installing Echo Desktop. This automatically copies your content.

To switch to Echo Desktop for Mac from Windows:

1. Install and launch Echo Desktop on your Macintosh. Follow the steps in .
2. When prompted, register your smartpen using your exist-ing Livescribe account.
3. Dock your smartpen. This copies content from your smartpen to Echo Desktop.

You may want to dock your smartpen overnight if it has a large amount of data on it, as it may take an hour or so to transfer the data the first time you dock.

If you had archived notebooks in Echo Desktop for Windows, the archived content is no longer be on your smartpen. Therefore, simply docking your smartpen does not transfer the archived content. The archived content only resides in your My Livescribe folder on your Windows PC, where you can view it as needed.

## UNINSTALLING ECHO DESKTOP

If you need to delete the Echo Desktop app from your computer, use one of the procedures below.

- Go to the folder where you installed Echo Desktop and drag livescribe.app to the **Trash**.
- Select livescribe.app and press + Delete.

Echo Desktop stores some large files in the Library > App Support > Livescribe folder. Manually delete these files.

## UPGRADING ECHO DESKTOP

If you have an older version of Echo Desktop running on your computer, follow the steps below to upgrade it.

### CHECKING FOR ECHO DESKTOP UPDATES

If you are connected to the Internet, Echo Desktop automatically checks the Livescribe website to see if your version of Echo Desktop is current, and if the software and firmware on your smartpen are up to date.

If your system needs updates, Echo Desktop prompts you to update now or later. It is good practice to accept the updates available for both Echo Desktop and your Livescribe smartpen.

If you are currently using any version earlier than 2.7 of Echo Desktop for Mac OS X, perform these steps to upgrade:

1. Launch Echo Desktop. If an update is available, Echo Desktop prompts you to accept the update. Confirming the update downloads the latest version of Echo Desktop for Mac OS X from the Livescribe website.
2. Check for additional updates. Choose **Echo Desktop > Check for Updates** from the Menu. Accept any updates offered. Repeat this process until you have installed the current version of Echo Desktop. To determine the current version numbers, see [About This Release](#) on page 10.



## CONFIGURING ECHO DESKTOP

You can customize the behavior of Echo Desktop using its configuration options.

### SETTING ECHO DESKTOP PREFERENCES

Echo Desktop gives you control over how the app looks and responds, as well as access to updates. To set your Echo Desktop preferences:

1. From the **Echo Desktop** menu, select **Preferences**. The Preferences dialog opens with the General options available. Note the names of the Preferences sections at the top of the dialog. You can reset the preferences to the Echo Desktop factory settings at any time by pressing the **Factory Settings** button available on each preference dialog.
2. In the **General** section, choose if you would like to automatically launch Echo Desktop when you dock a smartpen. Also choose if you want to auto-install all newly-purchased apps and software updates.
3. In the **Paper** section, choose the default ink color and the color for active and animated ink. You can also choose to show or hide blank pages and draw or hide page background images (ruled lines and so on).
4. In the **Audio** section, set the playback latency (in seconds). This setting rewinds your audio playback up to ten seconds from when your writing occurred. This compensates for written notes that lag behind the recorded audio, which occurs as you write notes about something shortly after hearing it. The lag varies depending on your note-taking style.
5. In the **Software Update** section, specify how Echo Desktop checks for updates of software and firmware.

## ABOUT PAPER REPLAY

When you start your smartpen, it is ready to capture anything you write in your Livescribe notebook.

Your smartpen captures and stores your notes as digital ink. You can then send your notes to other people using Echo Desktop. When you are taking notes without the need to record audio at the same time, simply start your smartpen and begin writing.

To record audio as you take notes, use the Paper Replay smartpen app. Using Paper Replay, your smartpen records audio and links it to what you write. Later, you can tap on any of your notes and hear the audio recorded from that moment. Each time you use Paper Replay, it stores the information it captures as a *Paper Replay session*.

You also can use Paper Replay to record audio only. The resulting audio is a standalone recording not linked to your notes. This kind of recording is called a *paperless session*.

You can add notes to any audio recording (even paperless sessions) by playing back pre-recorded audio and writing as you listen. This process is called *annotating* and is useful when you need to clarify or expand your notes by reviewing the audio.

To start and stop a Paper Replay session and control session playback, use the Paper Replay controls printed on many Livescribe notebooks.



**Note:** The Paper Replay printed controls are not page-specific. For example, you can tap the **Record** button on one page to start recording, and then tap the **Stop** button on a different page to stop recording.

## ABOUT PAPER REPLAY SESSIONS

When you begin recording with the smartpen, your smartpen automatically links the audio to anything you write on Livescribe Dot Paper. The recorded audio (and any linked written notes) is called a Paper Replay session.


Important facts about sessions:

- Notes not linked to audio are just notes. They are not part of a session.
- A session always contains audio.

- A session can optionally include written notes (pages) linked to the audio. However, you can record audio only, known as paperless sessions.
- A session begins when you start recording audio and ends when you stop recording audio.
- Pausing and unpausing a recording does create separate sessions. The paused and unpaused session remains as one. Starting and stopping recordings creates separate sessions.
- You can have one session that spans multiple pages, such as when taking many notes while recording a long lecture or meeting.
- Starting and stopping recording multiple times per page creates multiple sessions on that page.
- By default, sessions are named on your smartpen and Echo Desktop based on the time and date they are created. For example, if a session is started on June 03, 2011, at 12:22PM, it is named and displayed as 06.03.11 12:22p.

## VIEWING NOTES AND PLAYING BACK AUDIO IN ECHO DESKTOP

In Echo Desktop, you can view your notes and play back audio recordings made with Paper Replay. In Echo Desktop, notes that have linked audio appear as green ink. Livescribe calls this ink *active ink*.

To listen to audio recordings that are linked to your notes, click on the active ink using your mouse or other pointing device. Clicking active ink is similar to tapping your paper notes to begin audio playback on your smartpen. When you mouse over ink that is active, the mouse cursor changes to a pointing hand cursor  to help you identify where you can click to begin audio playback.

If you annotated your notes (added notes while playing back an audio recording), Echo Desktop shows this ink as blue. This ink is also active. You can click on it to play back the audio at the point where you added the notes.

**Note:** You can change the color of active and inactive ink by setting a user preference.

## ECHO DESKTOP FOR MAC BASICS

Echo Desktop provides views, menus, toolbars, and controls you can use to view and manage notes and audio transferred from your smartpen.

### RUNNING ECHO DESKTOP

To run Echo Desktop, follow these steps.


1. Launch Echo Desktop.
2. Dock your smartpen using a charging cradle (for Pulse smartpens) or Micro-USB cable (for Echo smartpens).

If your smartpen is authorized for the computer you are using, data transfer begins automatically.

3. Watch the progress bar and wait for the transfer confirmation message. Once you dock your smartpen, do not remove it until transfer is complete. If you do, the next time you dock your smartpen the transfer process begins again.

You may want to dock your smartpen overnight if it has a large amount of data on it, as it may take an hour or so to transfer the data the first time you dock.

When transferring notes and audio to Echo Desktop, the original notes and recorded audio *remain on your smartpen*. In this sense, transferring actually means copying content from your smartpen to Echo Desktop.

Make sure to use the USB Mobile charging cradle (for Pulse smartpens) or Micro-USB cable (for Echo smartpens) that came with your smartpen. *Pulse smartpen* models that have a power symbol  printed on the power button are only compatible with USB mobile charging cradles that have SKU: AAA-00012 printed underneath. These cradles are compatible with all Pulse smartpens. Pro Charging Cradles, which ship with Pro Packs and are also available for individual purchase, are compatible with all Pulse smartpen models.

### BACKING UP YOUR LIVESCRIBE FILES

Back up Echo Desktop files just as you would any other important files on your computer.

1. Quit Echo Desktop.
2. Click **Go > Home > Library > App Support > Livescribe**.
3. Copy the **Livescribe** folder to a backup device such as a CD, DVD, or external drive. You can also use Apple's Time Machine app to back up your Echo Desktop files.

## QUITTING ECHO DESKTOP

Quitting Echo Desktop closes the Echo Desktop App, disconnects you from Livescribe Online, and ends the connection between your computer and your smartpen.


- Click the red Close button at the top left corner of the Echo Desktop App
- Go to the **Echo Desktop > Quit Echo Desktop**.



## VIEWING NOTES

With Echo Desktop, you can view notes transferred from your smartpen.

### VIEWING THUMBNAILS

In **Thumbnail View**, you can see all your pages at once as thumbnails. When you find the notes you want to study, you can open them to full size. Optionally, click on green active ink to hear the audio captured with your notes.

1. Select the notebook you want by clicking on its name in the Navigation Pane. As soon as you select a notebook, its pages appear as thumbnails in the Central Viewing Pane.
2. Select a page you want to view in full size by double-clicking its thumbnail, or clicking the single-page  button next to the zoom slider.

You can switch between Thumbnail and Single-Page Views by clicking the thumbnail  or single-page  buttons next to the zoom slider with a thumbnail selected.

### VIEWING A SINGLE PAGE

Use **Single-Page View** to read, search, export, and print your notes. From this view, you can also listen to audio recordings as you read your notes, and upload your notes to your personal space on Livescribe Online.

To view notes in Single-Page View:

1. Under The Pages Category in the Navigation Pane, click your notebook. This opens the page in the Central Viewing Pane. Then locate and click the page you want to view.
2. Read your notes using your computer's screen, and optionally print them.

### PAGING THROUGH A LIVESCRIBE DOT PAPER PRODUCT

As an alternative to clicking on thumbnails, you can use the hovering Page Control or the page controls at the bottom of the page.








Type the page number in the text box on the toolbar and press Enter. Note that Echo Desktop shows the total number of pages in the notebook beside the text box.

Use the Page Controls to move from page to page, or to the beginning or end of the document.


**Tip:** Another way to page through a notebook is to use paging options in the Go menu. Note the keyboard shortcuts at the right of each command.

**Note:** When you select a page, Echo Desktop highlights its thumbnail in blue.

	First page: Shows the first page in your notebook that contains notes.
	Previous page: Shows the previous page in your notebook that contains notes.
	Next page: Shows the next page in your notebook that contains notes.
	Last page: Shows the last page in your notebook that contains notes.
	Current page number: Shows the currently shown page. You can also enter a valid page number in this field to select a specific page.


## ZOOMING PAGES

You can zoom into or out of a selected page or thumbnail.

1. Open a page or double-click on a thumbnail.
2. Drag the Zoom slider  to enlarge or reduce the size of the shown page or thumbnail.

Click a point on the slider bar to snap to that zoom level.


As an alternative, use the Zoom percentage options in the View menu.

Double-click a page to return to Thumbnail View or click the thumbnail  button next to the zoom slider.

Double-click a thumbnail to go to Single-Page View, with the page fitting into the Central Viewing Pane, or click the single-page button next to the zoom slider.

## REPOSITIONING A ZOOMED PAGE

When you zoom a page to a size that is larger than 100%, Echo Desktop crops some of the page. You may want to reposition the page to view its content.

- Use the vertical and horizontal scroll bars to move the page to your preferred location.
- Instead of using the scroll bars, reposition a zoomed page using the panning hand . To move the page, click-and-drag the page to the desired position.

## VIEWING PAGES LINKED TO AN AUDIO RECORDING

From **Audio View**, you can open pages linked to an audio recording to view the page and listen to the audio.

1. Click the row that contains the audio recording whose notes you want to view. It must have a page icon in the **Pages** column. The number beside the page icon indicates how many pages are included in the selected audio recording.
2. Double-click on the audio recording to begin playing it.

The **Now Playing** pane opens and shows the thumbnail of the pages linked to the audio recording.

3. Double-click on a thumbnail in the **Now Playing** pane to see the page in full size.

## CONVERTING HANDWRITING TO TEXT

You can purchase MyScript® for Livescribe to convert your handwritten notes to digital text.

MyScript for Livescribe is a desktop App from Vision Objects® that is sold separately (visit [www.visionobjects.com](http://www.visionobjects.com)). After purchasing and installing MyScript for Livescribe, you can export your notes using Echo Desktop.

1. Select one or more pages.
2. Click the MyScript button . This launches MyScript for Livescribe and converts your pages.

For more information on how to set up and configure MyScript® for Livescribe, refer the Help provided with it.

## COPYING AND PASTING PAGES TO OTHER APPS

You can copy Livescribe pages to the Clipboard and paste them into other apps. Echo Desktop saves the content you copy from the Central Viewing Pane to the Clipboard as an image.

To copy a page in Single-Page View:

1. In single Single-Page View, press the Command and C keys. Alternately, click on the page and select **Copy** from the **Edit** menu.
2. In another App, use the **Paste** command to insert an image of the Livescribe page into a document.




## SEARCHING NOTES


With Echo Desktop, you can search notes transferred from your smartpen.

### SEARCHING PAGES

You can search notes written in cursive, print, or a combination. Search accuracy depends on the neat-ness and consistency of your handwriting. The Search command can locate whole words. Your search text can be part of a word, a whole word, or consecutive words.

1. Type your search term into the Search text box .
2. Press **Return**. By default, this searches for the term in all your notebooks.  
To search only in the currently selected notebook, click the Spotlight icon  in the Search text box. Check **Search Only Selected Notebook** in the Search menu.
3. Livescribe searches for the term and shows the total number of pages on which the term is found, and thumbnails of pages containing the search text. The search results are highlighted in orange.
4. Double-click a thumbnail to see it in Single-Page View.
5. If your notes are active ink, play back the audio recording by clicking active (green) text.

### SEARCH TIPS

- Search works only for alpha-numeric characters. Special characters are not supported.
- For a case-insensitive search, type a search string that is all lower case. For example, typing “apple” looks for “apple”, “Apple”, and “APPLE”. For a case-sensitive search, type the search string containing the mixed case you want to find. For example, typing “Apple” only looks for “Apple”.
- Click the Spotlight icon  to see up to 10 previously entered search items. Select one from the list and press Return to search for that item.
- When there is an entry in the Search box, an X icon appears at the right. Click the X icon to clear the Search text. Echo Desktop returns to Thumbnail View.
- To retain the focus of a search result, select it before you clear your results.


## PLAYING BACK AUDIO

With Echo Desktop, you can play back audio transferred from your smartpen.

### PLAYING AUDIO WHILE VIEWING PAGES

With Echo Desktop, you can play audio while viewing its linked pages. You can also play audio in Audio View.

If you play back an audio recording that spans multiple pages, Echo Desktop automatically moves to successive pages in real time synchronization with the playing audio. This automatic paging continues until you manually switch pages using Paging Controls. From then on, the paging is under manual control only until you play back another audio recording.

1. Listen to recorded audio linked with your notes by clicking on the ink. Hover the mouse cursor over the green active ink that corresponds with the audio you want to hear. The mouse cursor changes to a pointing hand  when hovering over active ink.
2. Click on the green text. The audio you recorded with your notes plays back through your computer's speakers. As the audio plays back, the linked notes changes to a darker shade of green. When playing back audio, Audio Controls open to give you playback options.

### GETTING INFORMATION ABOUT AUDIO RECORDINGS

You can get information about audio recordings on a page using **Get Info**. The information includes the date and time the audio recording is started, and its size (MB) and length.

In Thumbnail or Single-Page View, select the page and choose **File > Get Info**, or use press `-I`.

### BROWSING A LIST OF AUDIO RECORDINGS

Use the **Audio View** to see a list of audio recordings captured with Paper Replay. From this view, you can listen to your audio recordings and upload them to your personal space on Livescribe Online.

From Audio view, you can also export audio recordings, delete audio recordings from your smartpen and from Echo Desktop.


Use Audio View to manage your audio recordings as computer files. Each row on the Audios list contains the details of a single audio recording stored on your

Macintosh. The column titles describe the information types that are summarized. Sort the list by clicking column titles.



1. In the Navigation Pane, click on **Audio** under the Audio folder. All audio recordings stored on your computer appear as a list in Audio View.
2. Select an audio recording for review by clicking anywhere on its detail line. An audio recording can consist of audio only, or audio linked with pages. Audio-only has no icon in the Pages column.

## AUDIO RECORDING COLUMNS

In Audio View, Echo Desktop shows your audio recordings as a series of rows with named columns. Click a column title to sort the list by that title. See below for a description of each column.


Column	Description
	Audio playing: Identifies which file is currently playing audio.
Pages	The number of note pages linked to an audio recording. Some audio recordings have no note pages.
Session Name	The default name of an audio recording: the time and date it began.
Notebook(s)	The name of the notebook that contains the selected audio recording.
Duration	The length of the audio recording.
Recorded	The audio recording start time.
Size	The size of the audio recording in MB or KB.
On Smartpen	A check mark indicates if an audio recording is on your smartpen or if it is removed.
Pen	Smartpen that captured the audio.


## PLAYING AUDIO FROM AUDIO VIEW







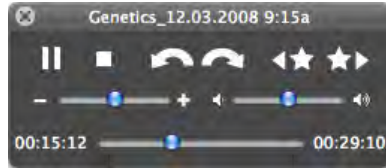


1. Double-click anywhere in an audio recording's row.
2. Select an audio recording's row and from the Audio Controls menu, click **Play**.
3. Click the audio control button  below the Central Viewing Pane to open the Audio Controls and click the **Play**  button.

## ABOUT AUDIO CONTROLS

Use Audio Controls to change how audio plays back.

As you listen to an audio recording, the Audio Controls pane opens automatically. You can also open Audio Controls anytime by clicking the audio control button .



	Play the audio.
	Stop playback
	Jump back 10 seconds.
	Jump forward 10 seconds.
	Jump to previous bookmark.
	Jump to next bookmark.
	Slow down or speed up the audio playback.
	Adjust the volume.
	Move backward or forward in the audio recording.

## RENAMING AN AUDIO RECORDING IN ECHO DESKTOP

Changing the name of an audio recording from its default — the date and time it is recorded — to a name that reflects the audio recording's content makes it easier to locate in the future.

1. In the Audio Name column, click on the name of the audio recording whose name you want to change. After a few moments click again. The current name is highlighted.
2. Type the new name and press **Return**. The new name replaces the old one.

## PRINTING

With Echo Desktop, you can print notes transferred from your smartpen. You can also print your own Livescribe Dot Paper notepads.

### PRINTING A SINGLE PAGE

You can print pages from Pages view, Thumbnail View, or Audio View.

1. View or select the page in Single-Page View or Thumbnail View.
2. Choose **File > Print**. The Print dialog opens.
3. Click **Print**.

### PRINTING MULTIPLE PAGES FROM THUMBNAIL VIEW

You can print a range of contiguous pages or a set of non-contiguous pages as follows. The simplest method is to print from Thumbnail View.

1. Multi-select a range of pages in Thumbnail View.
2. Choose **File > Print**. The Print dialog opens.
3. Click **Print**.

### PRINTING MULTIPLE PAGES FROM SINGLE-PAGE VIEW

You can print a range of contiguous pages or a set of non-contiguous pages from Single-Page View.

1. In Single-Page View, view a page.
2. Choose **File > Print**. The Print dialog opens.
3. Specify the page range from the *printable pages* shown in the Print dialog.

If the page numbers in your notebook are not continuous, then the page numbers in the print pane differs from the page numbers in your notebook.

Please use the preview on the print pane to verify that the you are printing the correct pages. You cannot print an empty page range.

4. Click **Print**.

### HIDING PAGE BACKGROUNDS WHEN PRINTING

You can set a preference to show or hide page backgrounds when viewing, exporting as PDF, or copying and pasting into other apps.

1. Go to **File > Preferences** and choose the **Paper** tab.
2. To hide backgrounds, uncheck **Draw backgrounds**.

## PRINTING YOUR OWN NOTEPADS

Using Echo Desktop, you can print your own notepads using a color laser printer that can print 600 dpi or greater.

## TESTING YOUR PRINTER

1. Choose **Tools > Print Your Own Notebook**.
2. Select a printer. Echo Desktop automatically selects the first qualified printer you have in your printer list.
3. Click **Print Test Page**.
4. When the test page is finished printing, follow the instructions printed on the page using your smartpen. The instructions ask you to write some words in each of four areas and then dock your smartpen to your computer.
5. Next, in Echo Desktop, examine the test page after it has transferred from your smartpen. If all of your words transfer successfully, then your printer can print Livescribe Dot Paper and you can begin printing your own notebook.

## PRINTING A NOTEBOOK

1. Choose **Tools > Print Your Own Notebook**
2. Select a printer. Echo Desktop automatically selects the first qualified printer you have in your printer list.
3. Select a notebook to print such as **Notebook 1 (25 pages)**.
4. Click **Print**.

Echo Desktop prints the notebook. You can use the notebook just like any other Livescribe Dot Paper. When you dock your smartpen after writing on this notebook, your content transfers like it does with pre-printed Livescribe note-books and journals.

You should archive this notebook before printing and using it again.

## ORGANIZING NOTES AND AUDIO

With Echo Desktop, you can organize notes and audio transferred from your smartpen.

### CREATING A CUSTOM NOTEBOOK

You can create Custom Notebooks in Echo Desktop to organize and better manage your pages.

You can add pages from any notebook, and drag them to arrange them in any order within a Custom Notebook. Pages in a Custom Notebook work like other notebook pages. For example, you can view, zoom, search, and print pages.

**Note:** A Custom Notebook is similar to a music playlist, or a digital photo album, but instead of pointing to songs or pictures, it points (links) to pages in their source notebooks.

1. Choose **File > Create Custom Notebooks**.

Echo Desktop creates an empty custom notebook and places it in the Navigation pane under the heading **Custom Notebooks**.

2. To add pages to a custom notebook, select one or more pages in Page View and drag and drop them onto the custom notebook in the Navigation pane.
3. To add pages from Audio View, select one or more audio recordings that have linked pages and drag and drop them onto the custom notebook.

### ORGANIZING CUSTOM NOTEBOOK PAGES

You can organize the pages in a Custom Notebook by simply dragging, moving, and dropping them into their new order.

1. Open a Custom Notebook in Page View.
2. Select a page to be moved.
3. Drag, move, and drop the page into its new location. The pages are automatically renumbered in the Echo Desktop view.

### DELETING A CUSTOM NOTEBOOK

You can delete a Custom Notebook or pages from a Custom Notebook. Deleting a Custom Notebook or pages from a Custom Notebook *does not* affect the source notebooks or their pages.

1. Select a Custom Notebook in the Navigation pane.

2. Choose **File > Delete Notebook**
3. At the prompt, click **Yes** to confirm the deletion.

## DELETING A CUSTOM NOTEBOOK PAGE

1. Open a Custom Notebook in Page View.
2. Select one or more page to be deleted.
3. Choose **File > Delete Page(s)**
4. At the prompt, click **Yes** to confirm the deletion.



 
## MANAGING STORAGE FOR ECHO DESKTOP AND YOUR SMARTPEN

With Echo Desktop, you can manage its storage of notes and audio, and the storage on your smartpen.

### FREEING SMARTPEN STORAGE

Your smartpen uses flash storage to store your notes and audio, as well as apps and system files. Use the Echo Desktop Memory Bar to monitor the data storage remaining in your smartpen.

To display the Memory Bar: in the Navigation Pane, open the **Applications** folder by clicking the arrow on the left, and then select **Smartpen Applications**. The Memory Bar appears at the bottom of the Central Viewing Pane.



The Memory Bar shows:

- Total storage capacity of the smartpen (both used and free)
- Storage used by system software
- Storage used by apps
- Storage used by content you created
- Available storage

Audio recordings require the most space. If your smartpen is running out of space, remove some of its audio recordings.

- Choose and remove an audio recording in Audio View.
- Archive any notebooks, journals and other paper products you are finished with. See .
- On your smartpen, use the Menu to select the audio recording you want to delete and remove it.

### REMOVING AUDIO FROM YOUR SMARTPEN

You can remove one or more audio recordings from your smartpen with Echo Desktop. You can also delete audio recordings from Echo Desktop itself. Removing an audio recording from your smartpen does the following:

- Frees up storage space on your smartpen

- Removes the audio recording from your smartpen. Your smartpen no longer interacts with the notes on the Livescribe Dot paper for the removed audio recording. That is, when you tap the notes linked to the removed audio recording, there is no audio playback.

To remove all audio recordings from your smartpen for a specific notebook, journal or other paper product, use the Archive feature.

1. In Audio View, locate and single-click the audio recording to be removed. To select multiple audio recordings, shift-click to choose adjoining items and -click to choose non-adjoining items.
2. Press the **Delete** key, or Choose **File > Remove Audio Recording from Smart-pen**. You can also choose the contextual menu item by pressing control-click.
3. At the prompt, confirm the removal. You can confirm that an audio recording is no longer on your smartpen by looking at the On Smartpen column in Audio View. If the audio recording is on your smartpen, the audio recording's row in this view shows a check mark in the column. If the audio recording is not on your smartpen, the column is empty.
4. At the prompt, confirm the deletion.

## BACKING UP YOUR LIVESCRIBE DATA FOLDER

Livescribe recommends that you regularly back up Echo Desktop files just like other important files on your computer. Backing up your files protects you from losing important files in case your computer becomes damaged, lost, or stolen. If you later need to restore your Echo Desktop files, contact Livescribe Customer Service for instructions.

You can find all files linked to Echo Desktop in your Livescribe folder. This folder contains your notes and audio, as well as important information about your smartpen and Echo Desktop. By default, Echo Desktop creates the Livescribe folder in these locations:

1. Quit Echo Desktop.
2. Locate your Livescribe folder.
3. Copy the folder to a backup device, such as a CD, DVD, or external drive.

## DELETING AUDIO RECORDINGS FROM ECHO DESKTOP

You can delete audio recordings from Echo Desktop.

1. First, remove the audio recording(s) from your smartpen as described in . You can con-firm that an audio recording is no longer on your smartpen by looking at the Location column in Audio View. If the audio recording is on your smartpen, the audio recording's row in this view shows a check mark in the

On Smartpen column. If the audio recording is not on your smartpen, the Location column is empty.

2. In Audio View, single-click the audio recording to be deleted from Echo Desktop. To select multiple audio recordings, shift-click to choose adjoining items and -click to choose non-adjoining items.
3. Press the Delete key on the keyboard. Or, choose **File > Delete Audio Recording from Echo Desktop**, or open the contextual menu item by pressing control-click.

If you select multiple audio recordings to delete from Echo Desktop, and one or more are still on your smartpen, Echo Desktop shows the File > Remove Audio Recording from Smartpen menu option. This allows you to remove the audio recordings from your smartpen first. When all audio recordings are removed, Echo Desktop shows the File > Delete Audio Recording from Echo Desktop menu option so you can continue deleting your selected audio recordings from Echo Desktop.

4. At the prompt, confirm the deletion.

## ARCHIVING LIVESCRIBE DOT PAPER ON MAC

When you have finished using a Livescribe Dot paper product, you should archive it in Echo Desktop.

### ARCHIVING PAPER PRODUCTS

Archiving a Livescribe Dot paper product does the following:

- Frees up storage space on your smartpen
- Enables you to use another Livescribe Dot paper product that has the same dot pattern as the one you archived. Livescribe Dot paper products with the same dot pattern have the same name.
- Moves your notes and audio for a Livescribe Dot paper product into an Archived Notebooks folder in the Library Pane of Echo Desktop. Your notes and audio remain interactive in Echo Desktop, just like non-archived Livescribe Dot paper products.
- Deletes your notes (ink data) and audio from your smartpen. Because of this, your smartpen no longer interacts with the physical Livescribe Dot paper product that you archived. That is, when you tap the notes in your archived physical notebook, they do not play back any audio.

**Important:** Do not archive a notebook unless you are finished using the physical notebook and are ready to set it aside. After you have archived a notebook, do not go back to its physical notebook and start writing on it again, unless you have unused pages and want to treat them as a part of a new notebook. For example, you could archive a notebook that is partially completed, and then use the remaining pages as a second notebook. If you are using multiple computers to manage your smartpen data, be sure to archive your notebooks on all of these computers.

1. In the Navigation pane, click the notebook you want to archive.
2. Choose **File > Archive**.
3. When prompted, click **Archive** to confirm the archive operation, otherwise click **Cancel**.

Echo Desktop confirms your notebook is archived, and you see the archived notebook under the **Archived Notebooks** group in the Navigation pane.

### DELETING AN ARCHIVED NOTEBOOK

1. Select a notebook to be deleted under **Archived Notebooks**.
2. Choose **File > Delete a Notebook**.

3. At the prompt, click **Yes** to confirm the deletion.

Deleting archived content from Echo Desktop removes the content permanently. You cannot recover the archived content by docking your smartpen because the process of archiving the content removed it from your smartpen.

## MANAGING YOUR SMARTPEN

With Echo Desktop, you can manage properties of your smartpen, including registration, naming, and Paper Replay password.

### REGISTERING YOUR SMARTPEN

It is important that you register your smartpen. Registering your smartpen:

- Creates your personal MyLivescribe account with 500MB of free storage.
- Allows you to broadcast or privately share your notes and audio online.
- Enables you to install smartpen apps from our online software store.
- Qualifies you to install free smartpen apps after registering!
- Provides enhanced security for your smartpen data.

### TO REGISTER YOUR SMARTPEN

1. After you name your smartpen, Echo Desktop prompts you to register it with Livescribe. Before you click **Register Now**, make sure to connect to the internet.

If you click **Remind Me Later**, Echo Desktop reminds you to register the next time you dock your smartpen.

You can register your smartpen anytime by selecting the **Register** option in the Echo Desktop menu.

2. Click **Register Now**. The Livescribe Account page opens.

If you do not already have a Livescribe account, click **Create New Account**, and then enter your email address and a password.

Your email address is your user name next time you log in.

Your password must be at least four characters long and no longer than 64 characters. Your password is case sensitive, and cannot begin with a space or contain characters that are not printable. Your password and user name cannot be the same.

3. If you already have a Livescribe account, the process enters your account name automatically. If you forgot your password, click the **Forgot Password** button and Livescribe emails instructions on resetting your password.
4. If you do not already have an account, click **Create**. The Account Information page opens.
5. In the Account Information page, fill in the required fields and click **Continue** to complete the registration process.

## REGISTERING YOUR SMARTPEN MANUALLY

Echo Desktop prompts you to register your smartpen when you dock it. If you choose to ignore this request, you can later manually register your smartpen.

1. Dock the smartpen to be registered.
2. Choose **Tools > Smartpen > Register Smartpen**.
3. Follow the prompts to register.

## RENAMING A SMARTPEN ON A MAC

You can rename your smartpen to identify it from other smartpens in Echo Desktop.

1. Launch Echo Desktop.
2. Dock the smartpen to be renamed.
3. If it is not already selected, use the smartpen selector drop down to choose the smartpen you want to rename.
4. Choose **Tools > Smartpen > Rename Smartpen**.
5. At the prompt, type the smartpen name and click **Rename**.

## REMOVING A PAPER REPLAY PASSWORD

On your smartpen, you can create a password for your audio recordings. Setting a password can prevent others from listening to your recorded audio on your smartpen. When Paper Replay is protected, audio play back is prevented until the password is entered on your smartpen.

You can remove a Paper Replay Password from your smartpen using your smartpen's Main Menu, or using Echo Desktop.

To remove a password using Echo Desktop:

1. Launch Echo Desktop.
2. Dock your smartpen.
3. Choose **Tools > Smartpen > Clear Paper Replay Password**.
4. Confirm the password is cleared by playing back a Paper Replay audio recording on your smartpen. If the password is cleared, you can play back audio recordings without writing the password first.

Paper Replay Password does not prevent playback from Echo Desktop, only from your smartpen.

You cannot set your Paper Replay Password using Echo Desktop. You must set it from your smartpen's Main Menu.

## MANAGING SMARTPEN SOFTWARE AND APPS ON A MAC

You can install and update smartpen software and apps using Echo Desktop.

### INSTALLING SMARTPEN SOFTWARE UPDATES

Livescribe periodically updates smartpen apps (such as Paper Replay) and underlying smartpen firmware. Livescribe also updates this software to support new kinds of Livescribe Dot Paper.

When you dock your smartpen and launch Echo Desktop, it checks for available updates. You can also manually check for updates using Echo Desktop.

**Note:** If you try to use a new Livescribe Dot Paper product, and get an error message that it is “not supported”, you need to update your smartpen software.

1. Dock your smartpen.
2. Launch Echo Desktop.

Echo Desktop automatically checks for recent updates.

3. Accept the updates.

Echo Desktop downloads and installs them to your smartpen.

If you choose to postpone transferring updates to your smartpen, you can re-initiate the transfer process by undocking and re-docking your smartpen. Echo Desktop prompts you to transfer available items.

### CHECKING FOR UPDATES MANUALLY

By default, Echo Desktop automatically downloads and installs apps and their updates when you dock a registered smartpen.

This feature is called Auto-Install. You can disable this feature by changing the Smartpen user setting.

At any time, you can manually check for updates to Echo Desktop, smartpen firmware, and apps you have purchased:

1. Choose **Help > Check for Updates** in the Menu.
2. Accept the recommended updates.



## GETTING MORE APPS

Livescribe and other companies offer new apps for your smartpen. You can download these from the Livescribe Online Store.

1. From a web browser, go to [www.livescribe.com/store](http://www.livescribe.com/store) and browse the apps available.


Some apps are free and others are available for purchase. These apps are designed to work like the built-in apps that come with your smartpen.

2. After you download a new app, use Echo Desktop to add it to any smartpen registered to your Livescribe account.

Echo Desktop installs downloaded apps to your smartpen under a new **Applications** menu. This menu is the first menu item underneath the Main Menu and is available after you install your first downloaded app.

## PURCHASING APPS

Using the Livescribe Online Store, you can purchase and download new apps for your smartpen from Livescribe and other vendors.

1. From Echo Desktop, click **Livescribe Store** in the Livescribe Online view.  
Alternatively, go to [www.livescribe.com](http://www.livescribe.com) from your web browser and click on the Community tab to go to Community page.
2. Click the **Log In** button  to go to Livescribe account.
3. Click on the **Store** tab. From the store page, you can browse and purchase apps.
4. Select an application to purchase by clicking its **Add** button. Optionally, look at the application's details page. You can also download documentation for the application from its details page.
5. Click **Add to Cart** to add the application into your shopping cart. This opens your shopping cart and begins the four-step purchasing process.
6. Click the **Continue to Checkout** button.
7. Add or confirm your billing and shipping information.
8. Confirm your purchase and place your order by clicking the **Place Order** button.
9. After placing your order, click the **Download and Add Smartpen Applications** button. You can then download your apps to Echo Desktop and add them on your smartpen(s).

By default, your apps are automatically download and added to your currently-docked smartpen.

10. Confirm the added apps in the **Applications View**.

## ADDING APPS


The **Applications View** lists all apps that you have downloaded from Livescribe Online, and those apps already added to your currently-selected smartpen.

**Tip:** By default, all apps you purchase are automatically downloaded and added to your smartpen when docked. If you disable this feature and need to manually add purchased apps, follow the procedure below. You can also use this feature if you removed an application from your smartpen and want to add it back.

To add an application manually:

1. Dock the smartpen on which you want to add the application.
2. In the **Applications View**, locate the application you want to add to your smartpen.

You see a list of all the apps you have downloaded, including those you have already added to your smartpens and those waiting to be added.

3. Click the add button  to add the application to the smartpen you have docked.

The **Applications View** shows the progress of adding the application under the **Status** column.


After the process completes, the **Applications View** indicates the application is added by showing a check mark in the **Location** column.

## REMOVING APPS

The **Applications View** lists all apps that you have already added to your currently-selected smartpen. If an application is added to the currently-selected smartpen, the Locations column next to the application shows a check mark.

To remove an application:

1. Dock the smartpen from which you want to remove the application.
2. In the **Applications View**, locate the application you want to remove from your smartpen.

3. Click the remove button  to remove the application from the smartpen you have docked.

The **Applications View** shows the progress of the removal under the **Status** column.

4. Confirm that the application is removed.

## VIEWING INSTALLED AND INSTALLABLE APPS



To view all apps you own and other software installed to your smartpen:

1. Click the **Applications** menu in the Navigation pane.
2. Next, click **Smartpen Applications**.

You see a list of all the apps and software you currently own for your smartpen.

### APPLICATION VIEW LIST

When you view a list of apps and software in **Applications View**, Echo Desktop shows them as a list of rows with named columns. The table below describes the columns of the **Applications View** list.

Column	Description
Application Icon and Name	The name of the application
Version on Smartpen	Version of the application
Size	The size of the application in MB or KB
Location	A check mark indicates the application is added to the currently-selected smartpen. If the application can be removed from this smartpen.
Add/Remove	 indicates the application is ready to be added to the currently-selected smartpen. Click on this button to add the application to this smartpen.  indicates the application can be removed from the currently-selected smartpen. Click on this button to remove the application from this smartpen.
Status	Describe the status of the current application, such as whether the application is current, needs to be added, and so on.

## USING LIVESCRIBE ONLINE

Livescribe Online is your connection to your Livescribe account and to content shared by the Livescribe community. You can connect to Livescribe Online either from a web browser or directly from within Echo Desktop.

### ABOUT LIVESCRIBE ONLINE


Setting up a Livescribe account creates a personal space for you on Livescribe Online called MyLivescribe. This is a personal area reserved for you. There you can set up your account profile, upload and store content to share with your friends, the community, or anyone on the web.



### SENDING CONTENT TO LIVESCRIBE ONLINE

To send pencasts using Livescribe Online, upload a pencast to using the **Upload to Community** sharing option.

After uploading a pencast to Livescribe Online, you can set your **Sharing Preferences** on your **MyLivescribe** account. There are several methods available to share your content.

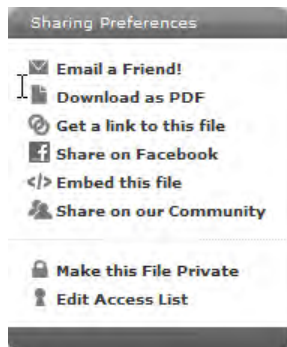

### EMAILING CONTENT TO A FRIEND FROM LIVESCRIBE ONLINE

Choose the **Email a Friend** preference to share content with a friend via email:

1. Select a file. To select a file from the Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. On your MyLivescribe page, click on Email a Friend.
3. Enter your friend's email address in the To field.
4. Optionally, add a message in the Personalize It section.
5. Click **Send**. Your friend receives an email that links him or her to your file on Livescribe Online. If your content is private, your friend must create a Livescribe Online account. Their user-name must be the email address you sent the invitation to.

To select multiple friends to send a file to, just check the box next to each friends email address in your Address Book before clicking the Send button.

When you send the invitation, Livescribe Online automatically adds your friend to your Contact list for future ease of sharing. As you share more files, your Address Book contact list grows. Use the gray **Edit a Contact** button to add a friend's name or edit an email address. Use the red **Delete a Contact** button to remove an email address from the list.

### DOWNLOAD A PDF DOCUMENT FROM LIVESCRIBE ONLINE

You can use the **Download as PDF** preference to download to your computer your uploaded content in PDF format. You can then share this PDF file with others via email or other means.

1. Select a file. To select a file from the Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. Click on **Download as PDF**. The file is downloaded in PDF format to your computer.

### GET A WEB LINK TO YOUR CONTENT ON LIVESCRIBE ONLINE

Use the **Get a Link to this file** preference to obtain web link to your content that you can paste in a blog or elsewhere.

1. Select a file. To select a file from the Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. Click on Get a link to this file. If the file is on your MyLivescribe page and private, make it public.
3. In the Get a link for this file dialog, highlight the link and copy it to the clipboard.



4. Open your HTML editor for your blog or other web page.
5. Access the HTML edit area and click in the edit field. Make sure you are in HTML edit mode, not Text composition mode.
6. Paste the text.
7. Publish the file.
8. In Livescribe Online, click **Done** to close the dialog window.

## SHARING CONTENT ON FACEBOOK THROUGH LIVESCRIBE ONLINE

Use the **Share on Facebook** preference to embed content into your website, forum, or blog. You can only embed public files.

Files posted to the general Livescribe Online Community are public and available for embedding. If the file you want to embed is on your MyLivescribe page, you must first make it public.

1. Select a file. To select a file from the general Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. Click **Share on Facebook**.
3. Facebook prompts you to log in unless you are already logged in.
4. If you would like to share content by posting to your Facebook page, use the Post to Profile tab. The posting appears on your Facebook Home page.
5. If you would just like to share content by email, use the Send a Message tab. The recipient gets an email with a link that they can use to access the file.

## EMBEDDING CONTENT IN A WEBSITE OR BLOG WITH LIVESCRIBE ONLINE

Use the **Embed this file** preference to embed content into your website, forum, or blog. You can only embed public files.

Files posted to the general Livescribe Online Community are public and available for embedding. If the file you want to embed is on your MyLivescribe page, you must first make it public.

1. Select a file. To select a file from the Livescribe Online Community, click the file's thumbnail to view it. To select a file from your personal MyLivescribe space, click the file's thumbnail in the My Files area to view it.
2. Click the Embed this file link. If the file is on your MyLivescribe page and private, make it public.
3. In the Embed this file dialog, highlight the HTML code and copy it to the clipboard.




## MANAGING YOUR MYLIVESCRIBE ACCOUNT ON LIVESCRIBE ONLINE

Setting up a Livescribe account creates a personal space for you on Livescribe Online called your MyLivescribe space. This is a personal area reserved for you. There you can set up your account profile, upload and store content to share with your friends, the community, or anyone on the web.

### SETTING UP A MYLIVESCRIBE ACCOUNT

When you register your Livescribe smartpen through Echo Desktop, the registration process prompts you to create a Livescribe account. If you need to, you can also create an account manually without registering (or even owning a Livescribe smartpen).

You can manually set up a Livescribe account either from Echo Desktop or directly from a web browser. To set up a Livescribe account from a web browser:

1. Go to [www.livescribe.com](http://www.livescribe.com) from your web browser and navigate to the Community page by clicking the **Community** tab.
2. Click the **Sign Up** button .
3. Provide a username and password. *The username must be a valid email address.*

When creating your user name and password, follow these guidelines:

- Your user name is your email address. It cannot be greater than 128 characters and is not case sensitive. For example, MyName@MyCompany.com and myname@mycompany.com are the same.
- Your password must be at least four characters long and no longer than 64 characters. Your password is case sensitive, and cannot start with a space or contain characters that are not printable. Your password and user name cannot be the same.

### USING YOUR MYLIVESCRIBE ACCOUNT

When you create a **MyLivescribe** user profile, you receive space to store content.

- Select **Account** in the upper right corner of Livescribe Online.

On your **MyLivescribe** profile page you see a list of sharing options, viewer comments, and how much space you have used and you have available.

### MANAGING YOUR UPLOADED CONTENT ON LIVESCRIBE ONLINE

From your MyLivescribe space, you can manage content in your Livescribe account as described in the following table:



Task	Description
Rename files	Select the filename in the central viewing pane and edit it in place.
Delete files	Click the thumbnail X icon next to the file name to delete it. This does not remove the files from your Echo Desktop App or your Livescribe smartpen, only from your online account.
Choose categories for files	Choose a category in which to place your file by clicking on the category name in the description area and choosing one of the pre-defined categories.
Add/Edit file descriptions	You can add short descriptions of your uploaded files by selecting click to edit... under the Description area and typing a name into the text field. Edit existing descriptions by clicking on the existing description and typing into the text field.

### MANAGING YOUR ACCOUNT DETAILS ON LIVESCRIBE ONLINE

From your MyLivescribe space, you can manage your Livescribe account and perform other administrative tasks described in the following table:

Task	Description
Change your user name	Select the name and edit it in place in the upper left area under the My Account section.
Unlink your Livescribe smartpen from your account	Click on the unlink option under My Pens in the lower left area under the My Account section.
Change your password	Go to the Edit Login tab in the central Details section and click Change Your Password.
Upload an Avatar Photo	Go to the Profile tab in the central Details section and click Upload an Avatar Photo. You may need to log in using a web browser to see this option.
Change your contact and personal information	Go to the Profile tab in the central Details section to edit your contact information and optionally details about you.
Subscribe or unsubscribe to Livescribe news and offers	Check or uncheck the option to receive news and offers about Livescribe and related products.

### VIEWING LIVESCRIBE ONLINE COMMUNITY CONTENT

In the Livescribe Community, you can see what others are doing with their Livescribe smartpens and post your own creations for others to rate and comment on.

The Community page has several sections:

Featured Files	Livescribe randomly chooses files to feature on the front page of the Community area.
Featured Contributors	Lists members of the Livescribe Community who provide the highest-rated submissions. Click on a Featured Contributor to go to their MyLivescribe profile.
Top Rated	Shows the top-rated content in the Livescribe Community.
Most Viewed	Shows visitors which content has been viewed the most.

## VISITING THE LIVESCRIBE ONLINE STORE

At the Livescribe Online Store - [www.livescribe.com/store](http://www.livescribe.com/store) - you can purchase additional smartpens, paper products, Apps, and more. At checkout, you need to log in to your account, or create an account if you have not already. You can access the Livescribe Store either from a web browser or directly from Echo Desktop via the Livescribe Online view by clicking Livescribe Store.



## CONNECTING TO LIVESCRIBE ONLINE FROM A MAC


Livescribe Online is your connection to your Livescribe account and to content shared by the Livescribe community. You can connect to Livescribe Online either from a web browser or directly from within Echo Desktop.

You can connect to Livescribe Online from within Echo Desktop. The Central Viewing Pane becomes a browser view.

1. From Echo Desktop, click **My Livescribe** under **Livescribe Online** in the Navigation pane.
2. Log in to Livescribe Online using your Livescribe account.  
If you do not have an account, create a new account when prompted to log in. If you forgot your password, click the **Forgot Password** button and Livescribe emails instructions on resetting your password.

When you log in, Echo Desktop opens your personal MyLivescribe space on Livescribe Online. From there you can click the Store, Community, and Support tabs to navigate within these areas of Livescribe Online.

3. To view or change your Livescribe Online account settings, on your home page, click the link "**This page belongs to You**".

Alternatively, go to [www.livescribe.com](http://www.livescribe.com) from your web browser and click on the Community tab to go to Community page. From there, click the **Log In** button  to go to your MyLivescribe space.

## SHORTCUTS

You can use keyboard shortcuts and contextual menus for several Echo Desktop menu options.

### KEYBOARD SHORTCUTS

Command	Shortcut
Copy	-C
Cut	-X
Export as AAC	-E
Find	-F
Get Info	-I
Hide Echo Desktop	-H
Hide Others	-H
Next	or F9 (on newer Mac keyboards)
Page Setup	-P
Go To Page...	-G
Paste	-V
Play/Pause	space/F8 (on newer Mac keyboards)
Play from Beginning	F7 (on newer Mac keyboards)
Preferences...	-,
Previous	
Print	-P
Quit Echo Desktop	-Q
Redo	-Y
Remove/Delete Audio Recording	Delete
Rename Notebook	-R
Select All	-A
Show Audio Controls	-K
Undo	-Z
Zoom In	-+
Zoom Out	--

### CONTEXTUAL MENUS

Instead of using the Echo Desktop menu, you can use contextual menus to access many Echo Desktop features.

To use a contextual menu, select an item and control-click.

Notebook	Rename
Thumbnail View	<ul style="list-style-type: none"><li>•Get Info</li><li>•Print</li><li>•Upload to Community</li></ul>
Single-Page View	<ul style="list-style-type: none"><li>•Print</li><li>•Upload to Community</li></ul>
Audio View	<ul style="list-style-type: none"><li>•Export as AAC</li><li>•Remove/Delete</li><li>•Upload to Community</li></ul>